

Innanzitutto accertatevi che il fusibile sia collocato nel relativo portafusibile e che il cambio tensione sia sul valore del voltaggio di rete. Noterete poi che sul retro del vostro Rhythmaker (Fig. « A ») ci sono tre prese per jack:

* Le prime due (HIGH IMP. - Alta impedenza - LOW IMP. - Bassa impedenza) servono per il collegamento all'amplificatore a seconda della sua potenza e della sua sensibilità.

* La terza (FOOT SWITCH) serve per il collegamento del pedalino interruttore che permette il comando a distanza del Rhythmaker.

PERCHÉ IL PEDALINO FUNZIONI, OCCORRE CHE IL PULSANTE START/STOP SI TROVI IN POSIZIONE « STOP ».

Be sure to check current selector at AC plug on instrument and plug in cord at AC supply (NOTICE: the three grounding cord must be used at all times for personal safety during operation).

VIEW FROM BACK SIDE (fig. "A")

Starting from left to right note:

* *HIGH IMP. = for connection to high sensitivity amplifiers.*

* *LOW IMP. = for connection to low sensitivity amplifiers.*

* *FOOT SWITCH: remote start/stop foot control plug in.*

THIS PEDAL CONTROLS THE UNIT ONLY WHEN THE START/STOP PUSH BUTTON, LOCATED IN THE FRONT PANEL, IS IN THE "STOP" POSITION.

Bitte beachten Sie den Spannungs - Wähler am Netz-Eingang des Gerätes! Stellen Sie die richtige Spannung (110 oder 220 Volt) ein.

Sodann stecken Sie den Netzstecker in das Stromnetz.

Zu Ihrer persönlichen Sicherheit beachten Sie bitte, dass nur Schuko-Netzstecker verwendet werden!

Ansicht von hinten (Bild "A")

von rechts nach links:


* *HIGH - IMP.:* Ausgang für hochohmige Verstärker.

* *LOW - IMP.:* Ausgang für niederohmige Verstärker.

* *FOOT SWITCH:* Eingang für Fuss-Fernschalter.

ACHTUNG: Dieser Fuss-Schalter arbeitet nur, wenn der auf der Vorderseite befindliche Druck - Schalter START/STOP eingedrückt ist. (Auf STOP - Position).

FIG. A

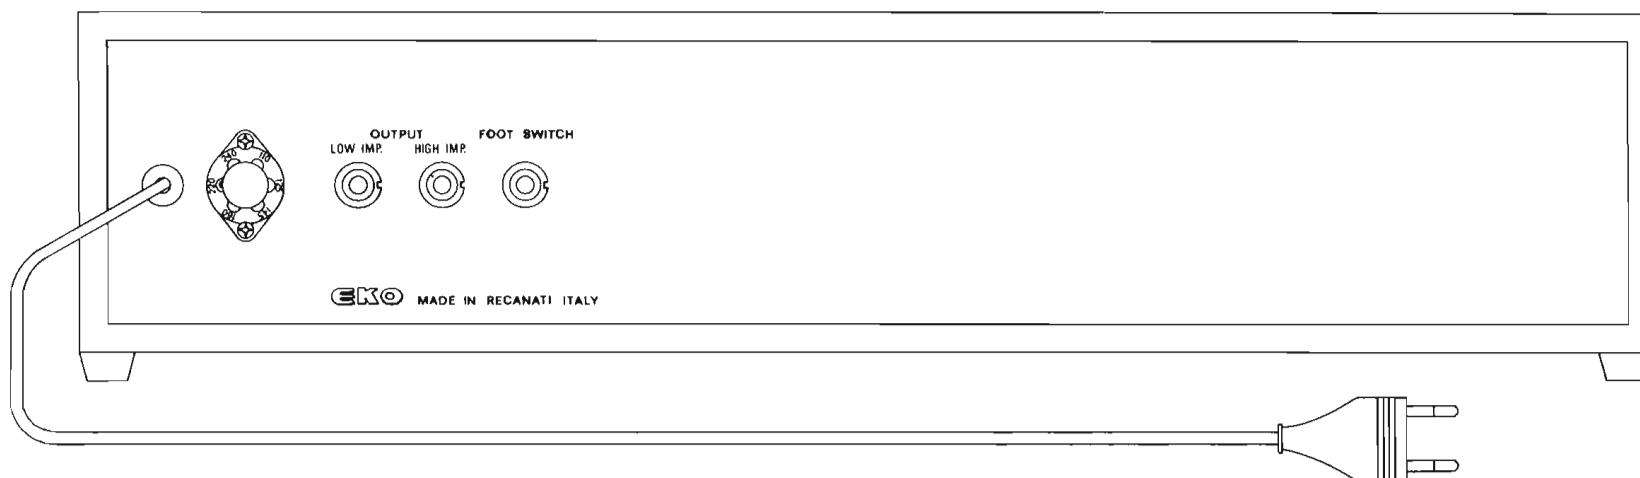

Ritmi e strumenti che lo compongono:

MARCH: Bass Drum, Snare

FOXTROTT: Bass Drum, Cymbal, Charleston

SUFFLE: Bass Drum, Cymbal, Snare, Charleston

JAZZ: Bass Drum, Cymbal, Charleston, Snare

SWING: Bass Drum, Snare, Cymbal

TANGO: Bass Drum, Snare

WALTZ: Bass Drum, Charleston, Cymbal

WESTERN: Bass Drum, Clave, Timbale

SLOW ROCK: Bass Drum, Snare, Cymbal

ROCK'N ROLL: Bass Drum, Snare, Cymbal

BOSSA NOVA: Bass Drum, Cymbal, Charleston + LIMSHOT strumento fisso)

SAMBA: Bass Drum, Charleston, Clave, Cymbal, Timbale + (BONGO strumento fisso)

MAMBO: Bass Drum, Timbale, Block, Clave, Charleston, (BONGO str. fisso)

CHA-CHA: Bass Drum, Timbale, Block, Charleston + (BONGO str. fisso)

BEGUINE: Bass Drum, Timbale, Clave, Cymbal, Charleston + (BONGO str. fisso)

RUMBA: Bass Drum, Timbale, Block, Clave, Charleston + (BONGO str. fisso)

The following is to show which instruments are operating during each rhythm:

MARCH: Bass Drum - Snare

FOX-TROT: Bass Drum - Cymbal - Charleston

SHUFFLE: Bass Drum - Cymbal - Snare - Charleston

JAZZ: Bass Drum - Cymbal - Snare - Charleston

SWING: Bass Drum - Cymbal - Snare

TANGO: Bass Drum - Snare

WALTZ: Bass Drum - Cymbal - Charleston

WESTERN: Bass Drum - Clave - Timbale

SLOW ROCK: Bass Drum - Cymbal - Snare

ROCK'N ROLL: Bass Drum - Cymbal - Snare

BOSSANOVA: Bass Drum - Cymbal - Charleston - Limshot

SAMBA: Bass Drum - Cymbal - Charleston - Clave - Timbale - Bongo

MAMBO: Bass Drum - Charleston - Block - Clave - Timbale - Bongo

CHA-CHA: Bass Drum - Charleston - Block - Timbale - Bongo

BEGUINE: Bass Drum - Cymbal - Charleston - Clave - Timbale - Bongo

RUMBA: Bass Drum - Charleston - Clave - Block - Timbale - Bongo

Bei den einzelnen Rhythmen sind jeweils folgende Instrumente zugeschaltet:

MARSCH: Grosse und kleine Trommel

FOXTROTT: Grosse Trommel, Becken, Hi-Hat

SHUFFLE: Grosse Trommel, Becken, kleine Trommel, Hi-Hat

JAZZ: Grosse Trommel, Becken, kleine Trommel, Hi-Hat

SWING: Grosse Trommel, Becken, kleine Trommel

TANGO: Grosse Trommel, kleine Trommel

WALZER: Grosse Trommel, Becken, Hi-Hat

WESTERN: Grosse Trommel, Claves, Timbale

SLOW-ROCK: Grosse Trommel, Becken, kleine Trommel

ROCK'N ROLL: Grosse Trommel, Becken, kleine Trommel

BOSSA NOVA: Grosse Trommel, Becken, Hi-Hat, Limshot

SAMBA: Grosse Trommel, Becken, Hi-Hat Claves, Timbale, Bongo

MAMBO: Grosse Trommel, Hi-Hat, Holztrommel, Claves, Timbale, Bongo

CHA-CHA-CHA: Grosse Trommel, Hi-Hat, Holztrommel, Timbale, Bongo

Beguine: Grosse Trommel, Becken, Hi-Hat, Claves, Timbale, Bongo

BEGUINE: Grosse Trommel, Becken, Hi-Hat, Claves, Timbale, Bongo

RUMBA: Grosse Trommel, Hi-Hat, Claves, Holztrommel, Timbale, Bongo

MARCH	FOX TROT	SHUFFLE	JAZZ	SWING	TANGO	WALTZ	WESTERN	SLOW ROCK	ROCK'N ROLL	BOSSA NOVA	SAMBA	MAMBO	CHA-CHA	BEGUINE	RUMBA

