


# AKAI SERVICE MANUAL

MPC60/EXM003

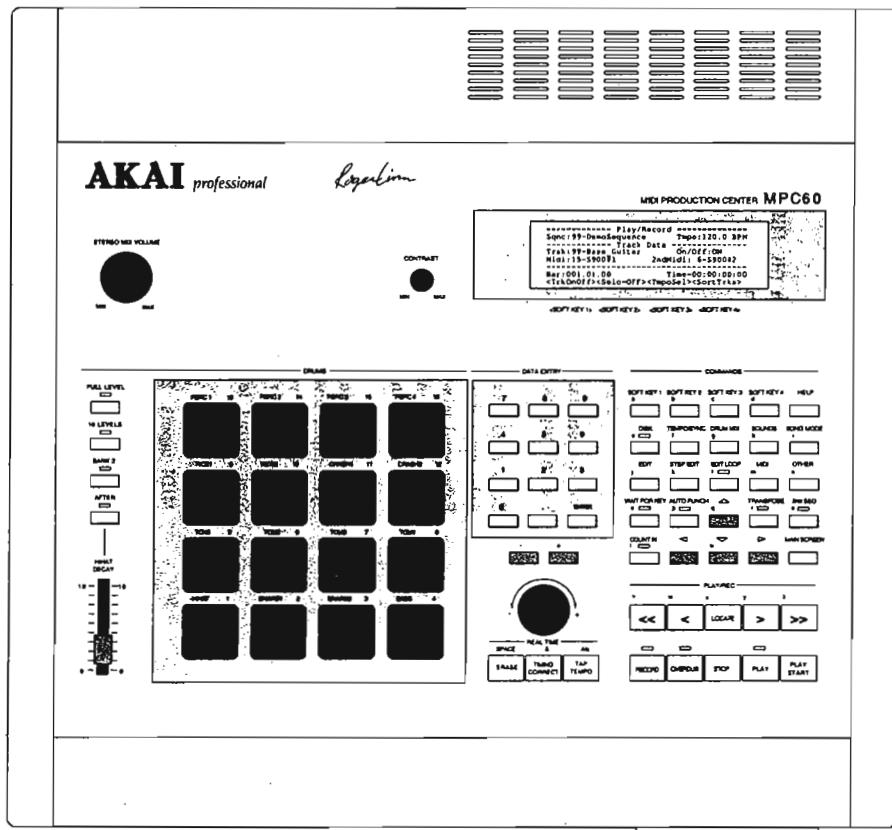


## MIDI PRODUCTION CENTER MODEL MPC 60

## MEMORY EXPANSION BOARD MODEL EXM 003

## PRECAUTIONS DURING SERVICING

1. Parts identified by the  symbols are critical for safety. Replace only with parts number specified.
2. In addition to safety, other parts and assemblies are specified for conformance with such regulations as those applying to spurious radiation. These must also be replaced only with specified replacements. Examples: RF converters, tuner units, antenna selector switches, RF cables, noise blocking capacitors, noise blocking filters, etc.
3. Use specified internal wiring. Note especially:
  - 1) Wires covered with PVC tubing
  - 2) Double insulated wires
  - 3) High voltage leads
4. Use specified insulating materials for hazardous live parts. Note, especially:
  - 1) Insulation Tape
  - 2) PVC tubing
  - 3) Spacers (Insulating Barriers)
  - 4) Insulation sheets for transistors
  - 5) Plastic screws for fixing microswitch (especially in turntable)
5. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.), wrap ends of wires securely about the terminals before soldering.

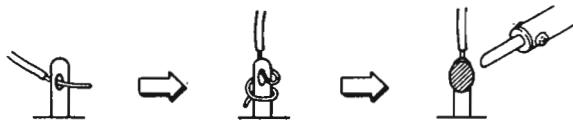

[DANGER]



[RECOMMENDED WAY]



6. Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.).

7. Check that replaced wires do not contact sharp edged or pointed parts.
8. Also check areas surrounding repaired locations.
9. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.

## SAFETY CHECK AFTER SERVICING

Confirm the specified insulation resistance between power cord plug prongs and externally exposed parts of the set is greater than 10 M ohms, but for equipment with external antenna terminals (tuner, receiver, etc.) and is intended for **C** or **A**, specified insulation resistance should be headphones jacks, line-in-out jacks, etc. more than 2.2 M ohms (ground terminals, microphone jacks).

## PRECAUTIONS FOR LITHIUM BATTERY

The lithium battery may explode when heated excessively.

### [OBSERVE THE FOLLOWING WHEN REPLACING]

- Replace with the same make and type only.
- Use soldering iron in "recommended way" only.
- Place battery in correct polarity.
- Do not short the terminals.
- Do not recharge battery.
- Do not dispose of battery in fire.

## ★ INFORMATION

### SYMBOLS FOR PRIMARY DESTINATION


Alphabet indicates the destination of the units as listed below.

Symbols	Principal Destinations
<b>A</b>	USA
<b>B</b>	UK
<b>C</b>	Canada
<b>E</b>	Europe (except UK)
<b>J</b>	Japan
<b>S</b>	Australia
<b>V</b>	W. Germany only
<b>U</b>	Universal Area
<b>Y*</b>	Custom version

### VOLTAGE CONVERSION

(**V, E, B, S** Model only)

Before connecting the power cord, set the VOLTAGE SELECTOR located on the bottom plate with a screw-driver so that the correct voltage is indicated.

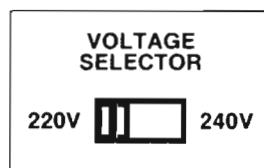

# I. SPECIFICATIONS

## [Sampler Section]

Sampling rate.....	40 kHz (fixed)
Sampling time.....	13.1 seconds standard (750k bytes), or 26.2 seconds with sound memory expansion option (EXM003, 750k bytes)
Frequency response .....	20 Hz~18 kHz
Data format .....	12 bit sample resolution with special non-linear format for reduced noise
Tuning range.....	+1/2 octave, -1 octave
Preset sounds .....	32 drums
Voice.....	16

## [Sequencer Section]

Note.....	60,000 (512k bytes)
Timing resolution .....	96 divisions per 1/4 note
Sequence.....	99
Track per Sequence .....	99
Output MIDI channels ....	16
Song mode.....	20 songs, 256 steps per song
Drum pads .....	16 (velocity and pressure sensitive)
Sync mode.....	SMPTE, MIDI time code, MIDI clock, MIDI song position pointer FSK24, Pulse, 1/4 note clicks

## [Rear Panel

### Inputs/Outputs

Record input .....	1 (record input gain switch: HI, MID, LOW) Input level (balanced) HI: -65dBm, Impedance 45k ohms MID: -45 dBm, Impedance 45k ohms LOW: -27 dBm, Impedance 45k ohms
Assignable mix outputs .....	8 Standard output level 0dBv, Impedance 600 ohms

Stereo outputs .....	2 (left & right) Standard output level -3 dBv, Impedance 600 ohms
Echo send mixer output....	1 (output level control X1) Standard output level -1.5 dBv, Impedance 600 ohms
Echo return inputs.....	2 (left & right) Standard inputs level -3 dBv, Impedance 10k ohms
Sync input .....	1 (dual function-also trigger input, balanced, input level control X1) Input level 0.5 Vp-p ~ 1 Vp-p

Sync output.....	1 Output level 1 Vp-p, Impedance 220 ohms
Metro output.....	1 (clicks)
MIDI input.....	2
MIDI output.....	4 (independent)
Foot switch inputs.....	2

## [GENERAL]

Display .....	320 character LCD display with graphics
Disk drive .....	3.5" 2DD (793k bytes formatted capacity)
Computer .....	80186 (10 MHz)
Power requirement .....	AC 100V, 50/60 Hz for Japan AC 120V, 60 Hz for USA and Canada AC 220V, for Europe except UK AC 240V, for UK and Australia
Power Consumption .....	30W for Japan 32W for other countries
Dimensions.....	495 (W) X 127 (H) X 471 (D) mm
Weight.....	10.5 kg

## [Accessories]

Standard accessories .....	3.5" 2DD X 4 (Drum sound data)
Optional accessories.....	EXM003 Memory Expansion Board SC-X614 Soft case for MPC60

\* For improvement purposes, specifications and design are subject to change without notice.

### ③ DISK key

To access the disk functions, press the DISK key and the following screen will appear.

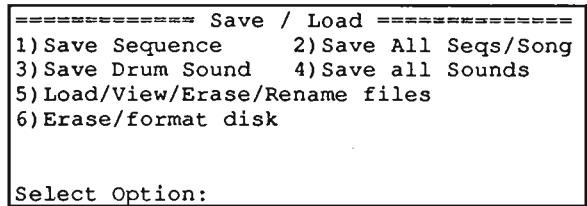


Fig. 2-4

This screen displays a list of disk options. To select one, type the number of the desired option. Each of the options are described in detail in the following sections.

### ④ TEMPO/SYNC key

TEMPO..... This feature is useful, for example, to quickly switch between the normal playing tempo and a slower tempo for recording.

SYNC..... This feature is used to select the type of SYNC signal of the MPC60 to receive SYNC from an external device or tape. There are seven possible type of SYNC which the MPC60 will accept, but only one may be active at one time.

### ⑤ DRUM MIX key

To adjust the individual volume and pan settings for the stereo mix outputs, press DRUM MIX and the following screen will appear:



Fig. 2-5

This is a simulation of a 16 channel stereo mixer. For each channel, there is a four letter abbreviation of a drum, a graphic representation of a volume slider, and a graphic representation of a rotary pan control.

### ⑥ SOUND key

The SOUNDS key provides access to all functions associated with the creation.

### ⑦ SONG MODE key

To enter song mode, press the SONG MODE key. The following screen will appear:

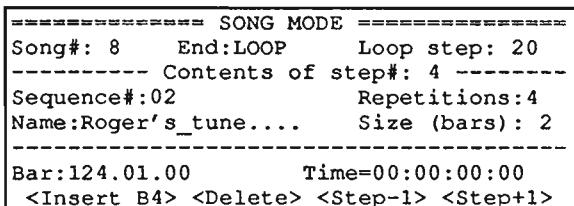


Fig. 2-6

While this screen is showing, the MPC60 is in SONG mode, meaning that if play is entered, the active song will play instead of the active sequence.

### ⑧ EDIT key

The EDIT key encompasses the following functions related to editing of the active sequence:

- Viewing/changing the ending status
- Viewing all time signature changes
- Creating a new time signature/number of bars format
- Inserting blank bars into a sequence
- Deleting specified bars from a sequence
- Copying a section and inserting it elsewhere within the sequence
- Copying a single track to another area or merging it with other data
- Copying an entire sequence to another sequence

When the EDIT key is pressed, the following screen is displayed:

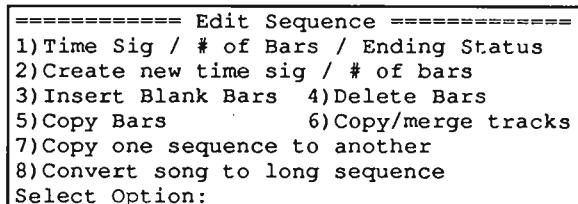


Fig. 2-7

Pressing a single number key will cause the screen for the selected function to be displayed.

### ⑨ STEP EDIT key

The STEP EDIT function allows the contents of the active track to be edited in precise detail.

Every parameter of every note, drum or other type of midi event is displayed in on-screen fields for detailed editing.

### ⑩ Edit LOOP key

This function causes a specified number of bars within a sequence to repeat in a loop to allow quick recording or editing of that section.

### ⑪ MIDI key

The MIDI key provides access to a number of parameters related to Midi.

- Assign the 4 Midi outputs.
- Assign incoming Midi notes numbers to the internal drums.
- Assign outgoing drums to Midi note numbers.
- Remove selected event types from the Midi input data.
- Select the Midi channel which the internal drums play from.
- Set the 'Midi soft through' feature.

### ⑫ OTHER key

The OTHER key function has many uses.

- The two metronome adjustment.
- The two foot switch input
- The 'Free sequence memory' display

---

**(13) WAIT FOR KEY key**

This acts as a 'remote play switch' to start the sequence. If PLAY RECORD or OVER DUB mode is entered while the WAIT FOR KEY function is on, the sequence will not begin to play until a key (any key) is played on the Midi keyboard.

**(14) AUTO PUNCH key**

The auto punch function, when set to ON, enables OVERDUB or RECORD modes to be automatically entered and exited at preset times while playing.

**(15) TRANSPOSE key**

This function allows you to transpose a track up or down by a specified amount on a specified range of the bars in real time.

**(16) 2nd SEQ key**

This feature will be implemented in a future version of software. Currently, it has no function.

**(17) COUNT IN key**

This function causes a single bar of metronome 'clicks' to play before the sequence starts playing or recording, acting as a 'count in' or 'countdown' before recording this part.

**(18) MAIN SCREEN key**

Pressing the MAIN SCREEN key at any time will return you back to the main 'power-up' screen of MPC 60 without damaging any data.

### 3. REC/PLAY keys (Refer to Fig. 2-3)

These ten keys operate similarly to the transport keys on a tape recorder, with some very useful additions.

**(1) PLAY START key**

This key causes the sequence to begin playing from the beginning.

**(2) PLAY key**

This key causes the sequence to begin playing from the current position within the sequence, displayed in the 'Bar': field in the PLAY/RECORD screen.

**(3) STOP key**

This key causes the sequence to stop playing.

**(4) OVERDUB key**

This key, when pressed simultaneously with either PLAY or PLAY START, causes OVERDUB mode to be entered, in which new notes may be recorded onto the active track, but existing notes will not be erased. While OVERDUB mode is active, the light above the OVERDUB key goes on.

**(5) RECORD key**

This key, when pressed simultaneously with either PLAY or PLAY START, causes RECORD mode to be entered, in which new notes may be recorded onto the active track while existing notes are erased, just like a tape recorder. While RECORD mode is active, the light above the RECORD key goes on.

**(6) '<<' key**

This key causes the current position within the sequence to move to the previous bar.

**(7) '>>' key**

This key causes the current position within the sequence to move to the next bar.

**(8) '<' key**

This key causes the current position within the sequence to move to the previous step. The step size is normally one 1/16 note. However, it is possible to this value by changing the 'Note value' field in the TIMING CORRECT screen.

**(9) '>' key**

This key causes the current position within the sequence to move to the next step. The step size is normally one 1/16 note. However, it is possible to this value by changing the 'Note value' field in the TIMING CORRECT screen.

**(10) LOCATE key**

This key is used to instantly go to a specific position within the active sequence. When pressed, it displays the following screen:

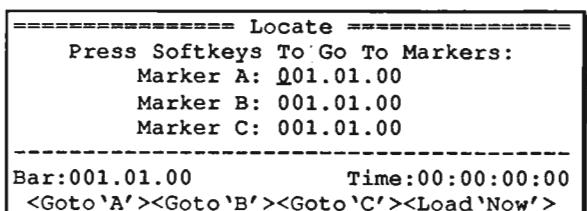


Fig. 2-8


There are three sequence position markers, labeled A, B and C.

Pressing softkey 1, 2 or 3 causes either marker A, B or C, respectively, to be loaded into the 'Bar' position, having the effect of 'going' to that location. Pressing SOFTKEY 4, <Load 'Now'>, causes the contents of the 'Bar' field to be loaded into the marker field currently containing the cursor. To load any of the three markers, move the cursor to it and enter the desired bar numbers in the format: 'bar.note.clock' (separated by ':', in the numeric keypad). If you only want to enter the bar number, type it, followed by ENTER, and the note and clock numbers will be automatically reset.

### III. DISASSEMBLY



In case of trouble, etc, necessitating dismantling, please dismantle in the order shown in the photographs.  
Reassemble in reverse order.

#### 1. HOW TO OPEN THE FRONT PANEL

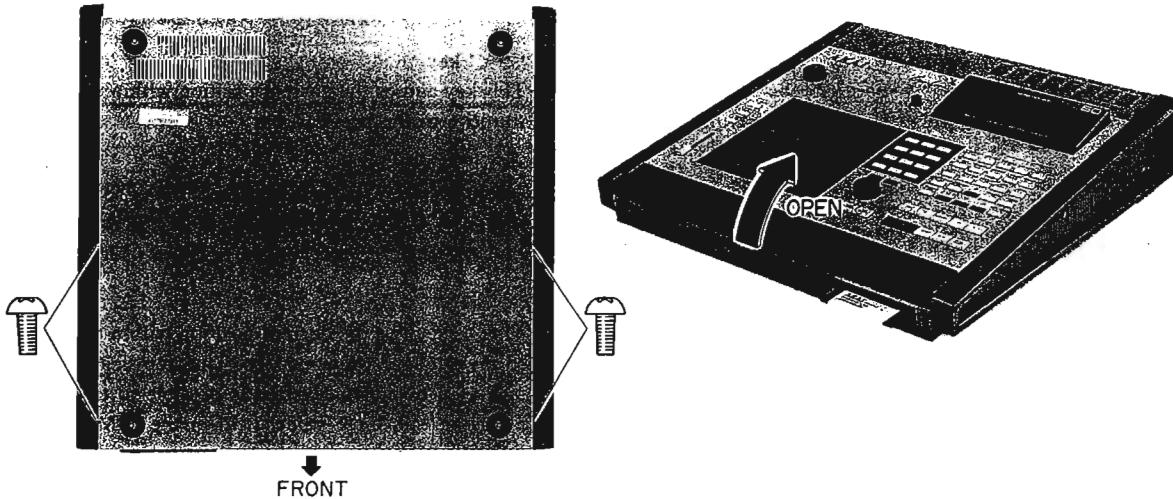

Remove 4 screws and then open the FRONT PANEL

#### 2. HOW TO DISMANTLE THE FDD UNIT

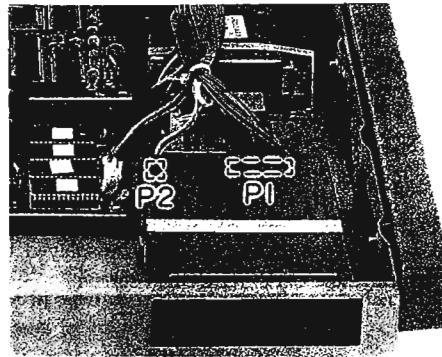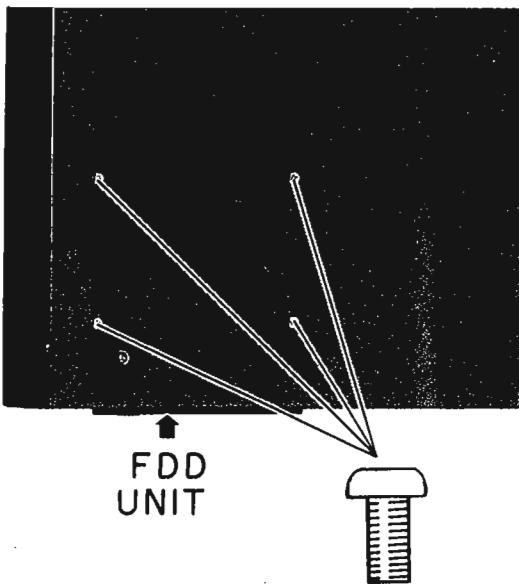

Remove 4 screws and open the FRONT PANEL.

Disconnect connectors P1 and P2, then remove the FDD UNIT.

## IV. PRINCIPAL PARTS LOCATION

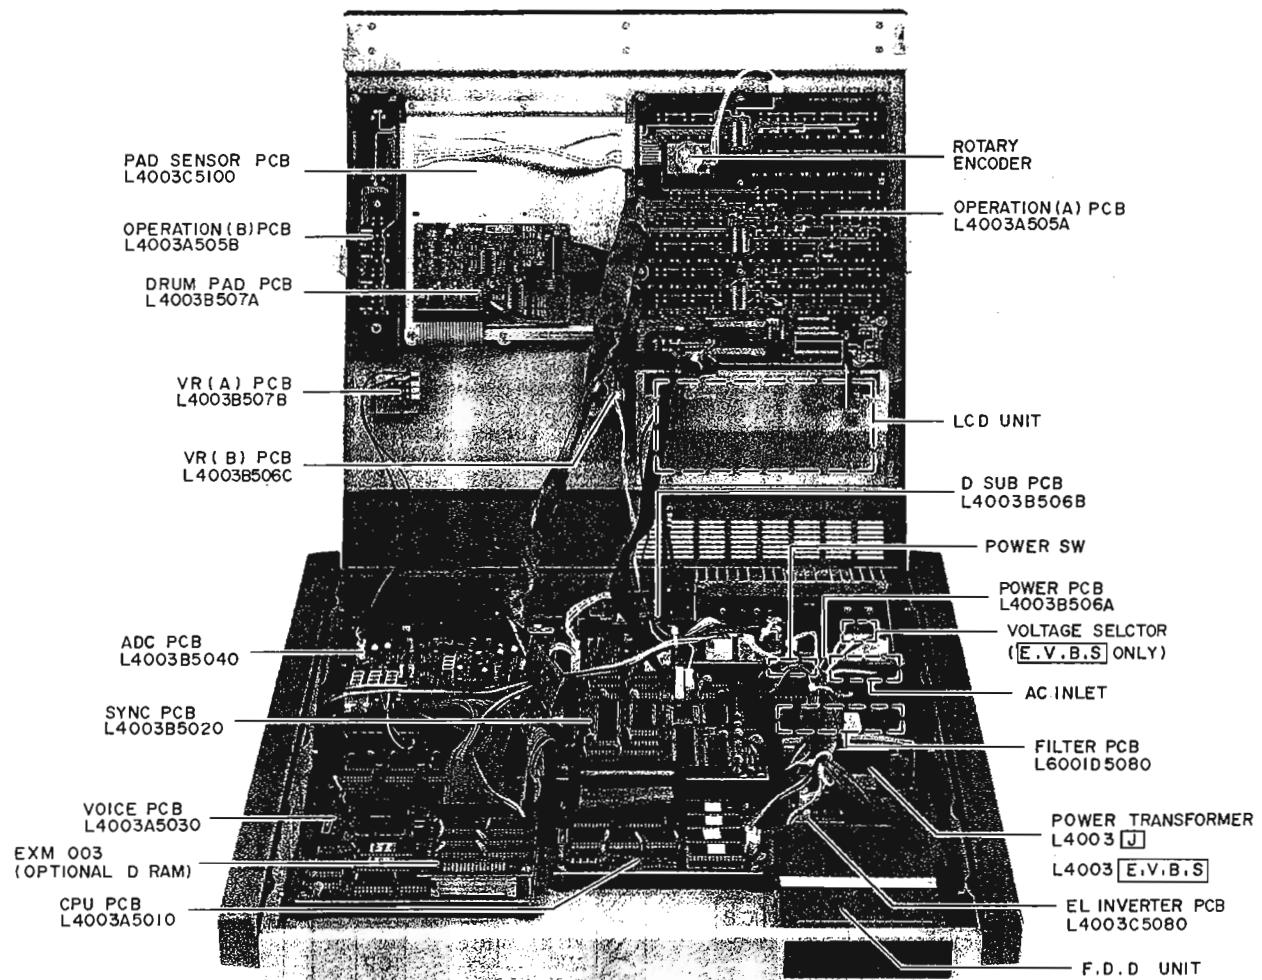


Fig. 4-1

## V. ADJUSTMENT

### [TEST MODE]

- \* This test mode is used for adjusting and inspecting the Model MPC60.
- \* Insert the TEST DISK into the disk drive, then switch the power ON. The following menu will appear on the LC-display a few seconds later indicating that the unit is set to test mode. (Fig. 5-1)

- \* Once in the test mode, testing functions can be selected by pressing the DATA ENTRY key on the control panel.
- \* Inputs from keys other than the DATA ENTRY key are not accepted during the test mode.
- \* For the termination of the test mode, switch the power OFF and remove the test disk.

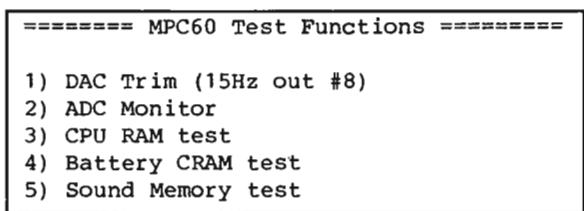


Fig. 5-1

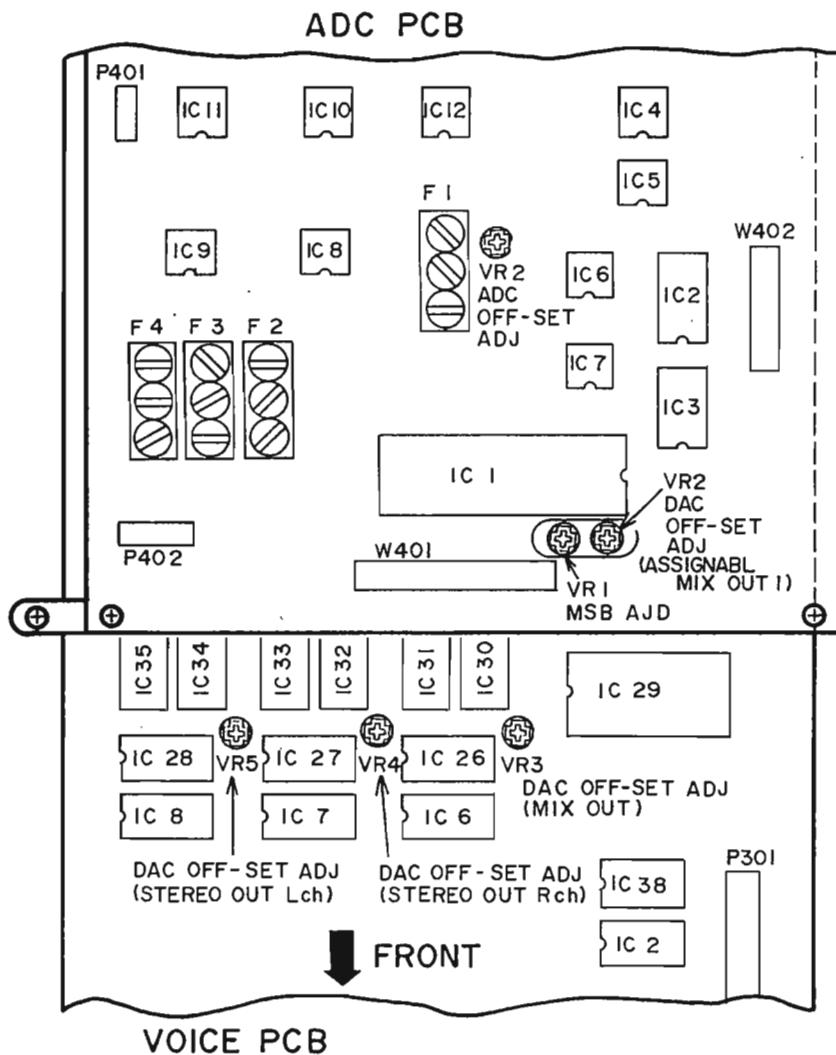


Fig. 5-2

### 5-1. Adjustment of A/D converter OFF-SET (ADC PCB)

1. Select "2) ADC Monitor" by pressing the DATA ENTRY key. Then the LC-display will change as shown below indicating that the unit enters the OFF-SET adjustment mode. (Refer to Fig. 5-3).

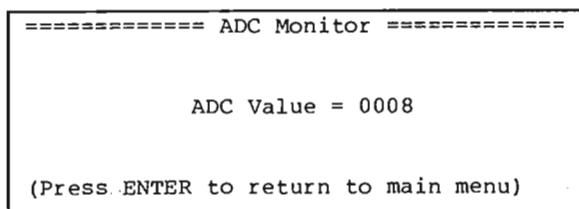


Fig. 5-3

2. Set the indicated ADC-value between 0003 and 000E by adjusting VR2 on the ADC PCB.
3. Press the ENTER key when the adjustment is completed.

### 5-2. D/A converter MSB-adjustment (VOICE PCB)

1. Select "1) DAC Trim (15 Hz out #8)" by pressing the DATA ENTRY key. The LC-display will change as shown below, indicating that the sine wave for MSB adjustment is being loaded. (Refer to Fig. 5-4)

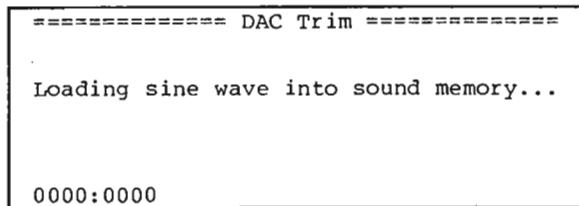


Fig. 5-4

2. Then the following screen will appear to indicate that the sine wave has been loaded and the MSB adjustment mode is set. (Refer to Fig. 5-5)

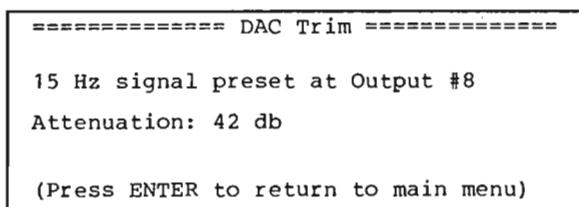


Fig. 5-5

3. Connect the oscilloscope to terminal [8] of **Assignable Mix Out** located on the rear panel. (The attenuation level can be altered in 6dB steps with the DATA CONTROL dial. The adjustment range is between 36dB and 48dB.)

If notches appear in the waveform displayed on the oscilloscope as shown Fig. 5-6, adjust VR1 on the VOICE PCB as shown Fig. 5-7.

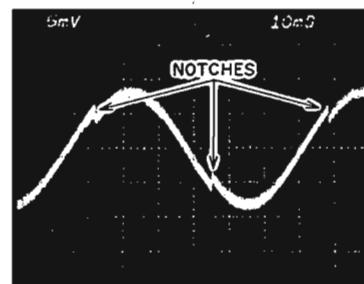


Fig. 5-6

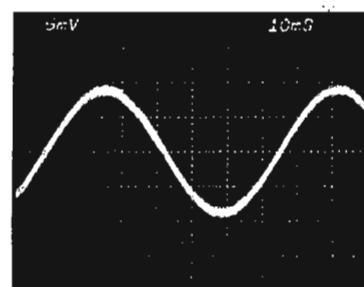


Fig. 5-7

### 5-3. Adjustment of D/A converter OFF-SET (VOICE PCB)

1. At first, switch the MCP60 OFF to terminate the test mode. Then switch power ON again, and load the data of the DRUM SOUND DATA "STUDIO-SET" (Standard accessories) in DISK mode.
2. Press the "FULL LEVEL" key on the left of the front panel to set the unit to FULL LEVEL mode. Press the "BASS DRUM" pad and adjust each VR so that there is no click noise during sustain. The outputs and their corresponding VRs are as follows.

Assignable Mix Out 1 .....	VR2
Mix Out .....	VR3
Stereo Out Right Ch .....	VR4
Stereo Out Left Ch .....	VR5

Note: Connect the corresponding output of the MCP60 to an amplifier and adjust each VR according to the sound coming out of the speaker.

#### 5-4. RAM checks

For testing each section of RAM operation, a RAM test software in test mode is used as shown in the Fig. 5-1. These programs test the function of each RAM and indicates if the LSI of each RAM functions correctly or not. In case of faultless operation, "OK" will appear on the LC-display, while malfunctions are indicated by "ERROR". The "ERROR" display contains messages pointing out which LSI and peripheral circuit to be checked.

##### 5-4-1. CPU RAM TEST

1. Set the MPC60 to TEST MODE. (Refer to page 10 "TEST MODE")
2. Select "3) CPU RAM TEST" by pressing the DATA ENTRY key and the screen shown in fig. 5-8 will appear on the LC-display.

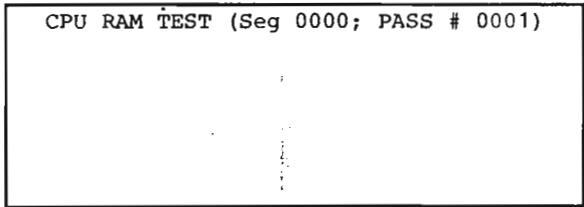


Fig. 5-8

3. If the CPU RAM function is normal, the LC-display will show the message as in fig. 5-9. If "ERROR" is displayed, the function is abnormal. Check its circuit and the LSI.

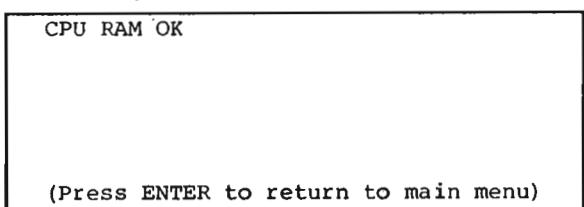


Fig. 5-9

4. When the test is completed, press ENTER key to return to the main menu (Refer to Fig. 5-1).

##### 5-4-2. BATTERY CRAM TEST

1. Select "4) BATTERY CRAM TEST" by pressing the DATA ENTRY key. The screen as shown in the fig. 5-10 will appear on the LC-display.

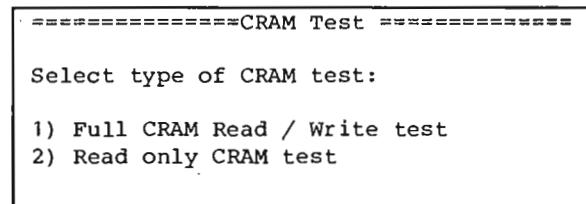


Fig. 5-10

Select the test function required by pressing DATA ENTRY.

2. If the CRAM function is normal, the LC-display will indicate the message as shown in the Fig. 5-11. If "ERROR" is displayed, the function is abnormal. Check its circuit and the LSI.

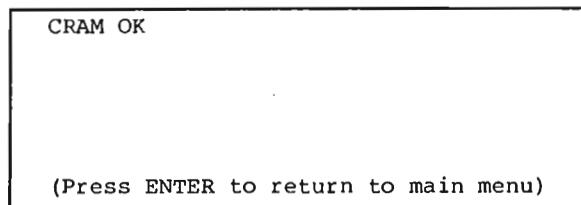


Fig. 5-11

3. When the test is completed, press ENTER key to return to the main menu on the LC-display (Refer to Fig. 5-1).

##### 5-4-3. Sound Memory Test

1. Select "5) Sound Memory Test" by pressing the DATA ENTRY key.

The screen shown in Fig. 5-12 will appear on the LC-display.

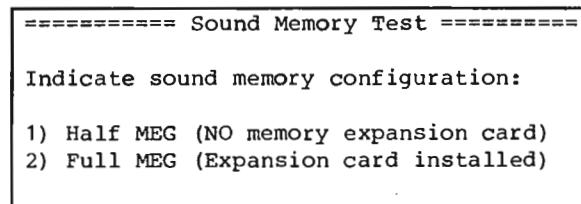


Fig. 5-12

If the optional Expansion DRAM "EXM003" is equipped, select "2) Full MEG".

2. If the DRAM function is normal, the test will be carried out automatically in order of Fig. 5-13, 5-14 and 5-15 after which the display will change to the screen as shown in the Fig. 5-16.

```
===== Sound Memory Test =====
Writing 5550 ( hex ) ...
Reading 5550 ( hex ) ...
```

Fig. 5-13

```
===== Sound Memory Test =====
Writing AAA0 ( hex ) ...
Reading AAA0 ( hex ) ...
```

Fig. 5-14

```
===== Sound Memory Test =====
Writing Address check Data ...
Reading Address check Data ...
```

Fig. 5-15

```
SOUND MEM. OK
(Press ENTER to return to main menu)
```

Fig. 5-16

If the screen as shown in Fig. 5-17 appears on the LC-display, it means that the DRAM does not function normally. Check its circuit and the LSI.

```
LSI ERROR ADDR.00080003
Expected = 5550 Read = FFF0
Voice PCB Extension card
lok! lok! BAD lok!
lok! lok! BAD lok!
lok! lok! BAD lok!
(Press ENTER to return to main menu)
```

Fig. 5-17

- \* When "2) Full MEG" test is selected while "EXM003" is not equipped, the screen as shown above will appear indicating errors in the RAM circuit of the Extension card.

**Note:** These RAM test mode programs only indicate if their functions are normal or not, but they do not apply to each BUS LINE and LSI. Use these programs as a guidance for checking the function of RAMs.

#### 5-5. PROCEDURE OF CPU ROM (CPU PCB IC2 TO IC5) Version Check

- \* This Version Check is for checking the EP-ROM Version used for the CPU of the MCP60.

1. Switch the MPC60 on without inserting a floppy disk.
2. When the "Main Screen" appears on the LC-display, press the COMMAND key "OTHER" first, then "SOFT KEY4".  
**Note:** There will be indication of "SOFT KEY4" on the LC-display in the "OTHER" mode.
3. After pressing "SOFT KEY4" key the "Debug Function" screen appears on the LC-display from which the production date of the EP-ROM can be detected. (Refer to Fig. 5-18)
4. To terminate the Version Check mode, press the "MAIN SCREEN" key.

```
===== Debug Functions =====
Date of this version: 12/14/87
Voices off After Playing: YES
Help Codes: OFF
(sync)
```

Fig. 5-18

## VI. THE MIDI IMPLEMENTATION CHART

This section contains the Midi implementation charts for the MPC60. There are two charts-one for the drum sampler section, and one for the sequencer section.

[Drums sampler section]

Model MPC60 MIDI Implementation Chart Version: 1.0

Function ...		Transmitted	Recognized	Remarks
Basic Channel	Default Changed	16 1-16	16 1-16	memorized
Mode	Default Messages Altered	3 X *****	3 X X	
Note Number	: True voice	0-127 *****	0-127 0-127	
Velocity	Note ON Note OFF	○ ○ (Always=64)	○ X	
After Touch	Key's Ch's	X X	○ ○	Used in 'Note repeat' feature
Pitch Bender		X	X	
Control Change	20	○	○	Hihat decay cont.
Prog Change	: True #	X *****	X X	
System Exclusive		○	○	See note 2
System Common	: Song Pos : Song Sel : Tune	X X X	X X X	
System Real Time	: Clock : Commands	X X	X X	
Aux Messages	: Local ON/OFF : All Notes OFF : Active Sense : Reset	X X X X	X ○ (when stop pressed) X X	
Notes				

Mode 1: OMNI ON, POLY  
Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO  
Mode 4: OMNI OFF, MONO

○: Yes  
X: No

## [Sequencer section]

Model MPC60 MIDI Implementation Chart Version: 1.0

Function ...		Transmitted	Recognized	Remarks
Basic Channel	Default Changed	1-16 1-16	1-16 1-16	memorized memorized
Mode	Default Messages Altered	3 X *****	1 X X	
Note Number	: True voice	0-127 *****	0-127 0-127	
Velocity	Note ON Note OFF	O O	O O	
After Touch	Key's Ch's	O O	O O	
Pitch Bender		O	O	
Control Change	0 - 121	O	O	See note 1
Prog Change	: True #	O *****	O 0-127	
System Exclusive		O	O	See note 2
System Common	: Song Pos : Song Sel : Tune	X X X	O O X	
System Real Time	: Clock : Commands	O O	O O	
Aux Messages	: Local ON/OFF : All Notes OFF : Active Sense : Reset	X O X X	X X X X	
Notes				

Mode 1: OMNI ON, POLY  
 Mode 3: OMNI OFF, POLY

Mode 2: OMNI ON, MONO  
 Mode 4: OMNI OFF, MONO

O: Yes  
 X: No

---

**Note 1:**

When the control code 64 (damper or sustain pedal) is received while recording, it is not recorded. Instead, all notes currently on at that time are held on until the sustain pedal is released, even if the individual notes are released. This allows multiple overdubs on the same track to have different and independent sustain pedal times.

**Note 2:**

The follow system exclusive messages, unique to the MPC60, are sent and received:

## Drum mixer volume change:

11110000	System exclusive header
01000111	Akai ID (47 H)
0000XXXX	Unit number (midi channel # 1-16)
01000100	44H
01000XXX	Akai product ID (MPC60=45H)
00000001	Parameter ID: 01= Drum mix volume
000XXXXX	Drum number (0-31)
0XXXXXXXX	Data: 0 (off) – 127(full volume)

## Drum mixer pan change:

11110000	System exclusive header
01000111	Akai ID (47H)
0000XXXX	Unit number (midi channel # 1-16)
01000100	44H
01000XXX	Akai product ID (MPC60 = 45H)
00000010	Parameter ID: 02=Drum mix pan
000XXXXX	Drum number (0-31)
0XXXXXXXX	Data: 0 (full left) – 14 (full right)

## Echo mixer volume change:

11110000	System exclusive header
01000111	Akai ID (47 H)
0000XXXX	Unit number (midi channel # 1-16)
01000100	44H
01000XXX	Akai product ID (MPC60=45H)
00000011	Parameter ID: 03=Drum mix volume
000XXXXX	Drum number (0-31)
0XXXXXXXX	Data: 0 (off) – 127(full volume)

## Drum tuning change:

11110000	System exclusive header
01000111	Akai ID (47H)
0000XXXX	Unit number (midi channel # 1-16)
01000100	44H
01000XXX	Akai product ID (MPC60 = 45H)
00000100	Parameter ID:04=Drum mix volume
000XXXXX	Drum number (0-31)
0XXXXXXXX	Pitch data MSB
0XXXXXXXX	Pitch data LSB

The above two bytes comprise a 14 bit pitch change word. Range =0 – 4000H in increments of 1/2 cent (2000H = no change).

## VII. PARTS LIST

### ATTENTION

1. When placing an order for parts, be sure to list Part No., Model No. and the description of each part. Otherwise, the non-delivery or the part or the delivery of a wrong part may result.
2. Please make sure that Part No. is correct when ordering. If not, a part different from the one you ordered may be delivered.
3. Since the parts shown in Parts List of Preliminary Service Manual may have been the subject of changes, please use this Parts List for all future references.

### HOW TO USE THIS PARTS LIST

1. This Parts List lists those parts which are considered necessary for repairs. Other common parts, such as resistors and capacitors, are listed in the "Common List for Service Parts" from which these parts should be selected and stocked.
2. The Recommended Spare Parts List shows those parts in the Parts List which are considered particularly important for service.
3. Parts not shown in the Parts List and "Common List for Service Parts" will not in principle be supplied.
4. How to read the Parts List.

a) Mechanism Block

#### 2. HEAD BASE BLOCK

REF. NO.	PART NO.	DESCRIPTION
2-1x	BH-T2023A320A	HEAD BASE BLOCK
2-2	HP-H2206A010A	HEAD R/P PR4-8FU C
2-3	ZS-477876	PAN20x03STL CMT
2-4	ZS-536488	BID20x08STL CMT
2-5	ZG-402895	SP CS ANGLE ADJUST

SP (Service Parts) Classification  
A small "x" indicates that this part is not shown in the Photo or Illustration.  
This number corresponds with the individual parts index number in that figure.  
This number corresponds with the Figure Number.

b) PC Board

#### 6. MAIN PC BOARD

REF. NO.	PART NO.	DESCRIPTION
6-IC1	EI-324536	IC HD14049BP
6-IC2	EI-336801	IC MB8841-564M
6-C1A	EC-338399	C MMV V 223M 250AC [U,E,B,S]
6-C1B	EC-350949	C MMV V 223M-250DC [J]
6-C1C	EC-338397	C MMV V 223M 125AC [C,A]
6-X1	EI-318384	OSC X'TAL NC-18C

Symbols for primary destination  
[A]: AAL(U.S.A.) [S]: SAA(Australia)  
[B]: BEAB(England) [U]: U/T(Universal Area)  
[C]: CSA(Canada) [V]: VDE(W. Germany)  
[E]: CEE(Europe) [Y]: Custom Version  
[J]: JPN(Japan)

SP (Service Parts) Classification  
These reference symbols correspond with component symbols in the Schematic Diagrams.

The available PC Board Blocks are listed separately.

5. When Part No. is known, Parts Index at end of Parts List can be used to locate where that part is shown in Parts List by its Reference No. listed at right of Part No.

### WARNING

△ (\*) INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURE'S RECOMMENDED PARTS.

### AVERTISSEMENT

△ (\*) IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DÉGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.

---

## MODEL MPC60

### 1. RECOMMENDED SPARE PARTS

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	BB-375768	FLOPPY DISK MF353C-62M	63	EI-378297	IC PCMS4HP
2	*BT-378272	TRANS POW L4003 C,A [A,C,Y1] [T901]	64	EI-377067	IC PCM77P
3	*BT-378273	TRANS POW L4003 E,V,B,S [E,V,B,S] [T901]	65	EI-364253	IC PST520D-2
4	*BT-378271	TRANS POW L4003 J [J] [T901]	66	EI-365798	IC SED9420CAC
5	BT-379599	TRANS PULSE D32-48	67	*EI-365820	IC STR9005
6	ED-359863	D LED LN81CV-(LF) AK ORANGE	68	EI-378286	IC TC4516BP
7	*ED-365819	D SILICON CTU-12R 200/ 6.0A	69	EI-378284	IC TC74HCT245P
8	*ED-365818	D SILICON CTU-12S 200/ 6.0A	70	EI-378211	IC TC74HCT573P
9	*ED-330319	D SILICON DBA10B 100/1.0A	71	EI-379583	IC TC74HCT574P
10	*ED-361055	D SILICON DS135E-UB1	72	EI-360037	IC TC74HC00P
11	ED-301911	D SILICON H DS448	73	EI-360039	IC TC74HC08P
12	ED-378184	D ZENER H HZ3BL	74	EI-375222	IC TC74HC125P
13	ED-378219	DETECTOR PC 6N137	75	EI-378216	IC TC74HC126P
14	*EF-364518	FUSE BET T 250V 2.50A [B]	76	EI-360025	IC TC74HC138P
15	*EF-355374	FUSE BET T 250V 500MA [B]	77	EI-372578	IC TC74HC153P
16	*EF-623125	FUSE SEMKO T [E,V,S]	78	EI-365840	IC TC74HC155P
17	*EF-593706	FUSE SEMKO T 250V 500MA [E,V,S]	79	EI-372550	IC TC74HC161P
18	*EF-311839	FUSE TSC A 250V 1.60A [J]	80	EI-360054	IC TC74HC174P
19	*EF-326639	FUSE TSC A 250V 3.15A [J]	81	EI-360053	IC TC74HC175P
20	*EF-309388	FUSE TSC A 250V 800MA [J]	82	EI-360042	IC TC74HC259P
21	*EF-310229	FUSE TSC 125V 1.00A [C,A]	83	EI-360036	IC TC74HC32P
22	*EF-309392	FUSE TSC 125V 1.25A [C,A]	84	EI-378217	IC TC74HC390
23	*EF-323080	FUSE TSC 125V 3.15A [C,A]	85	EI-365831	IC TC74HC393P
24	EH-359185	COMP R RKC1/8B8 103J	86	EI-365803	IC TC74HC4002P
25	EH-378283	DL ADL-05OSH7P	87	EI-375205	IC TC74HC541P
26	EI-379592	IC AD7523JN	88	EI-360028	IC TC74HC74P
27	EI-378285	IC CD74HCT173	89	EI-379598	IC TM2764AD-20-ADR15-7-V1.0
28	EI-378141	IC CD74HC4051	90	EI-379594	IC UPC814C
29	EI-379585	IC CD74HC4053	91	EI-379593	IC UPD5200C
30	EI-369660	IC CKX5816PN-12L	92	EI-378275	IC UPD72066C
31	EI-376734	IC F74AC74P	93	EI-371671	IC UPD78C11G-044-36
32	EI-355891	IC HD74LS32P	94	EI-354123	OSC CE CSA120MT 12.000000MHZ
33	EI-365804	IC HD7406P	95	EI-378205	OSC XTAL AT-51 20.000000MHZ
34	EI-365806	IC HD75188P	96	EI-365811	OSC XTAL NR18 16.000MHZ
35	EI-365805	IC HD75189P	97	EI-378290	OSC XTAL TD308A 35.84MHZ
36	EI-378277	IC I-0055	98	*EJ-358633	SOCKET INLET SOT-17 2P [J,E,V,B,S,Y1]
37	EI-360954	IC IR9311	99	EM-378267	IND LCD 240082
38	EI-379605	IC LA6339	100	*EO-360068	COIL LF LF-2 B
39	EI-378276	IC LC7981	101	EI-378291	FILTER LC 258BLR-5326N 18KHZ
40	EI-378293	IC L4003	102	ES-365943	SW EWT-XDFK2550B
41	EI-378197	IC MBL80186-10-CR-G-C	103	*ES-364478	SW SEESAW SDDT SPST TYPEA T8.5
42	EI-378294	IC MBM27C256-15-ADR15-5-V1.0	104	*ES-306430	SW SLIDE J-S4013#01 01-2
43	EI-378296	IC MBM27C256-15-ADR15-6-V1.0	105	ES-379609	SW SLIDE SSSP***** [REC GAIN]
44	EI-378198	IC MBM27C512-20-ADR15-1-V1.0	106	ES-349474	SW TACT SKHHAM004A
45	EI-378200	IC MBM27C512-20-ADR15-2-V1.0	107	ET-353899	TR 2SA1317 S.T,U
46	EI-378201	IC MBM27C512-20-ADR15-3-V1.0	108	ET-305463	TR 2SA970 GR,BL
47	EI-378203	IC MBM27C512-20-ADR15-4-V1.0	109	*ET-356817	TR 2SB891 Q,R
48	EI-378218	IC MB81C4256-10-G	110	ET-307195	TR 2SC2240 GR,BL
49	EI-379657J	IC MB89255A-P-G	111	ET-308977	TR 2SC2274K F F05
50	EI-378204	IC MB89371-P-G	112	ET-360067	TR 2SC3330 T,U F05
51	EI-378214	IC MC74F08N	113	*ET-354083	TR 2SD1189 Q,R
52	EI-379586	IC MC74F157N	114	EV-379613	VR ROTARY EVHCCAP20B53 B502
53	EI-378212	IC MC74F158N	115	EV-379614	VR ROTARY EWKE2AP20A14 A103X2
54	EI-378215	IC MC74F32N	116	EV-365876	VR SLIDE VJ4513-2PVNB5 103 [HIHAT DECAY]
55	EI-375346	IC MM74HCO4N	117	EV-379610	VR V012L-PLHJ20U A103 [MIX OUT LEVEL]
56	EI-375347	IC MM74HC14N	118	EV-378278	VR V012L-PLHJ20U B103 [SYNC LEVEL]
57	EI-349719	IC M5218P	119	*EZ-378206	BATTERY LITHIUM CL2020 IHF
58	EI-360043	IC M5220P			
59	*EI-348123	IC M5230L			
60	EI-362588	IC M5238P			
61	EI-336995	IC NJM78L05A			
62	*EI-360772	IC NJM79L05A			

## 2. P.C BOARD BLOCK

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	BA-L4003A020A	PC(#[#] OPERATION BLK MPC60	SW29	ES-349474	SW TACT SKHHAM004A
2	BA-L4003A050A	PC CPU BLK MPC60	SW30	ES-349474	SW TACT SKHHAM004A
3	BA-L4003A070A	PC SYNC BLK MPC60	SW31	ES-349474	SW TACT SKHHAM004A
4	BA-L4003A040A	PC VOICE BLK MPC60	SW32	ES-349474	SW TACT SKHHAM004A
5	BA-L4003A060A	PC ADC BLK MPC60	SW33	ES-349474	SW TACT SKHHAM004A
6	BA-L4003A030A	PC(#[#] DRUM PAD BLK MPC60	SW34	ES-349474	SW TACT SKHHAM004A
			SW35	ES-349474	SW TACT SKHHAM004A
			SW36	ES-349474	SW TACT SKHHAM004A
			SW37	ES-349474	SW TACT SKHHAM004A
			SW38	ES-349474	SW TACT SKHHAM004A
			SW39	ES-349474	SW TACT SKHHAM004A
			SW40	ES-349474	SW TACT SKHHAM004A
			SW41	ES-349474	SW TACT SKHHAM004A
			SW42	ES-349474	SW TACT SKHHAM004A
			SW43	ES-349474	SW TACT SKHHAM004A
			SW44	ES-349474	SW TACT SKHHAM004A
			SW45	ES-349474	SW TACT SKHHAM004A
			SW46	ES-349474	SW TACT SKHHAM004A
			SW47	ES-349474	SW TACT SKHHAM004A
			SW48	ES-349474	SW TACT SKHHAM004A
			SW49	ES-349474	SW TACT SKHHAM004A
			SW50	ES-349474	SW TACT SKHHAM004A
			SW51	ES-349474	SW TACT SKHHAM004A
			SW52	ES-349474	SW TACT SKHHAM004A
	X1	EI-354123			OSC CE CSA120MT 12.000000MHZ
	1	EJ-358691			SOCKET IC DILB28P-8J

## 3. OPERATION (A) P.C BOARD

Ref. No.	Part No.	Description
D1	ED-359863	D LED LN81CV-(LF) AK ORANGE
D2	ED-359863	D LED LN81CV-(LF) AK ORANGE
D3	ED-359863	D LED LN81CV-(LF) AK ORANGE
D4	ED-359863	D LED LN81CV-(LF) AK ORANGE
D5	ED-359863	D LED LN81CV-(LF) AK ORANGE
D6	ED-359863	D LED LN81CV-(LF) AK ORANGE
D7	ED-359863	D LED LN81CV-(LF) AK ORANGE
D8	ED-359863	D LED LN81CV-(LF) AK ORANGE
D9	ED-359863	D LED LN81CV-(LF) AK ORANGE
D10	ED-359863	D LED LN81CV-(LF) AK ORANGE
D11	ED-361055	D SILICON DS135E-UB1
IB1	EH-359185	COMP R RKC1/888 103J
IC1	EI-371671	IC UPD78C11G-044-36
IC2	EI-379598	IC TM2764AD-20-ADR15-7-V1.0
IC3	EI-378211	IC TC74HCT573P
IC4	EI-360025	IC TC74HC138P
IC5	EI-360042	IC TC74HC259P
IC6	EI-360042	IC TC74HC259P
IC7	EI-336995	IC NJM78L05A
SW1	ES-349474	SW TACT SKHHAM004A
SW2	ES-349474	SW TACT SKHHAM004A
SW3	ES-349474	SW TACT SKHHAM004A
SW4	ES-349474	SW TACT SKHHAM004A
SW5	ES-349474	SW TACT SKHHAM004A
SW6	ES-349474	SW TACT SKHHAM004A
SW7	ES-349474	SW TACT SKHHAM004A
SW8	ES-349474	SW TACT SKHHAM004A
SW9	ES-349474	SW TACT SKHHAM004A
SW10	ES-349474	SW TACT SKHHAM004A
SW11	ES-349474	SW TACT SKHHAM004A
SW12	ES-349474	SW TACT SKHHAM004A
SW13	ES-349474	SW TACT SKHHAM004A
SW14	ES-349474	SW TACT SKHHAM004A
SW15	ES-349474	SW TACT SKHHAM004A
SW16	ES-349474	SW TACT SKHHAM004A
SW17	ES-349474	SW TACT SKHHAM004A
SW18	ES-349474	SW TACT SKHHAM004A
SW19	ES-349474	SW TACT SKHHAM004A
SW20	ES-349474	SW TACT SKHHAM004A
SW21	ES-349474	SW TACT SKHHAM004A
SW22	ES-349474	SW TACT SKHHAM004A
SW23	ES-349474	SW TACT SKHHAM004A
SW24	ES-349474	SW TACT SKHHAM004A
SW25	ES-349474	SW TACT SKHHAM004A
SW26	ES-349474	SW TACT SKHHAM004A
SW27	ES-349474	SW TACT SKHHAM004A
SW28	ES-349474	SW TACT SKHHAM004A

## 4. OPERATION (B) P.C BOARD

Ref. No.	Part No.	Description
D1	ED-359863	D LED LN81CV-(LF) AK ORANGE
D2	ED-359863	D LED LN81CV-(LF) AK ORANGE
D3	ED-359863	D LED LN81CV-(LF) AK ORANGE
D4	ED-359863	D LED LN81CV-(LF) AK ORANGE
SW1	ES-349474	SW TACT SKHHAM004A
SW2	ES-349474	SW TACT SKHHAM004A
SW3	ES-349474	SW TACT SKHHAM004A
SW4	ES-349474	SW TACT SKHHAM004A
VR1	EV-365876	VR SLIDE VJ4513-2PVNB5 103 [HIHAT DECAY]

## 5. CPU P.C BOARD

Ref. No.	Part No.	Description
DL1	EH-378283	DL ADL-050SH7P
D2	ED-301911	D SILICON H DS448
D3	ED-378184	D ZENER H HZ3BLL
D4	ED-301911	D SILICON H DS448
D5	ED-301911	D SILICON H DS448
IC1	EI-378197	IC MBL80186-10-CR-G-C
IC2	EI-378198	IC MBM27C512-20-ADR15-1-V1.0
IC3	EI-378200	IC MBM27C512-20-ADR15-2-V1.0
IC4	EI-378201	IC MBM27C512-20-ADR15-3-V1.0
IC5	EI-378203	IC MBM27C512-20-ADR15-4-V1.0
IC6	EI-369660	IC CXK5816PN-12L
IC7	EI-378204	IC MB89371-P-G
IC8	EI-378204	IC MB89371-P-G
IC9	EI-378211	IC TC74HCT573P
IC10	EI-378211	IC TC74HCT573P
IC11	EI-378211	IC TC74HCT573P
IC12	EI-378212	IC MC74F158N

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
IC13	EI-378212	IC MC74F158N	IC21	EI-360039	IC TC74HC08P
IC14	EI-378212	IC MC74F158N	IC22	EI-365804	IC HD7406P
IC15	EI-365840	IC TC74HC155P	IC23	EI-365806	IC HD75188P
IC16	EI-360028	IC TC74HC74P	IC24	EI-378286	IC TC4516BP
IC17	EI-360036	IC TC74HC32P	IC25	EI-360954	IC IR9311
IC18	EI-375347	IC MM74HC14N	IC26	EI-362588	IC M5238P
IC19	EI-378214	IC MC74F08N	IC27	EI-362588	IC M5238P
IC20	EI-360037	IC TC74HC00P	IC28	EI-362588	IC M5238P
IC21	EI-378215	IC MC74F32N	IC29	EI-349719	IC M5218P
IC23	EI-365803	IC TC74HC4002P	IC30	EI-378277	IC I-0055
IC24	EI-375222	IC TC74HC125P	IC31	EI-375346	IC MM74HC04N
IC25	EI-378216	IC TC74HC126P	J201	EJ-353031	PHONE J 3P HLJ0520-010 [SYNC IN]
IC26	EI-355891	IC HD74LS32P	J202	EJ-353031	PHONE J 3P HLJ0520-010 [SYNC OUT]
IC27	EI-365805	IC HD75189P	J203	EJ-354105	PHONE J 2P HLJ0520-110 6.3 [FOOT SW 1]
IC28	EI-378217	IC TC74HC390	J204	EJ-354105	PHONE J 2P HLJ0520-110 6.3 [FOOT SW 2]
IC29	EI-378217	IC TC74HC390	J205	EJ-354105	PHONE J 2P HLJ0520-110 6.3 [METRO OUT]
IC30	EI-372550	IC TC74HC161P	P201	EJ-378279	PLUG RA-H502SD-1190 50P
IC31	EI-378218	IC MB81C4256-10-G	P202	EJ-378282	PLUG RF-H202TD-1190 20P
IC32	EI-378218	IC MB81C4256-10-G	P203	EJ-378282	PLUG RF-H202TD-1190 20P
IC33	EI-378218	IC MB81C4256-10-G	P204	EJ-365834	PLUG RK-H341TD-0190 34P
IC34	EI-378218	IC MB81C4256-10-G	P205	EJ-378269	PLUG B10P-ER 10P
IC35	EI-364253	IC PST520D-2	R65	*ER-325114	R CB H S10 FS RDS 1/4W 330J
J101	EJ-378207	DIN J TCS4450-01-1011 [MIDI IN 1]	R66	*ER-325114	R CB H S10 FS RDS 1/4W 330J
J102	EJ-378207	DIN J TCS4450-01-1011 [MIDI IN 2]	VR1	EV-378278	VR V012L-PLHJ20U B103 [SYNC LEVEL]
J103	EJ-378207	DIN J TCS4450-01-1011 [MIDI OUT 1]	X1	EI-365811	OSC X'TAL NR18 16.000MHZ
J104	EJ-378207	DIN J TCS4450-01-1011 [MIDI OUT 2]			
J105	EJ-378207	DIN J TCS4450-01-1011 [MIDI OUT 3]			
J106	EJ-378207	DIN J TCS4450-01-1011 [MIDI OUT 4]			
PH1	ED-378219	DETECTOR PC 6N137			
PH2	ED-378219	DETECTOR PC 6N137			
TR1	ET-353899	TR 2SA1317 S,T,U			
TR2	ET-360067	TR 2SC3330 T,U F05			
X1	EI-378205	OSC XTAL AT-51 20.000000MHZ			
1	*EZ-378206	BATTERY LITHIUM CL2020 IHF			
2	EJ-358691	SOCKET IC DILB28P-8J			

## 6. SYNC P.C BOARD


Ref. No.	Part No.	Description
D1	ED-301911	D SILICON H DS448
D2	ED-301911	D SILICON H DS448
D3	ED-301911	D SILICON H DS448
D4	ED-301911	D SILICON H DS448
IC1	EI-379657J	IC MB89255A-P-G
IC2	EI-378275	IC UPD72066C
IC3	EI-365798	IC SED9420CAC
IC4	EI-378276	IC LC7981
IC5	EI-369660	IC CXK5816PN-12L
IC6	EI-378211	IC TC74HCT573P
IC7	EI-378284	IC TC74HCT245P
IC8	EI-360053	IC TC74HC175P
IC9	EI-378285	IC CD74HCT173
IC10	EI-360028	IC TC74HC74P
IC11	EI-365840	IC TC74HC155P
IC12	EI-365831	IC TC74HC393P
IC13	EI-372578	IC TC74HC153P
IC14	EI-372578	IC TC74HC153P
IC15	EI-360028	IC TC74HC74P
IC16	EI-360028	IC TC74HC74P
IC17	EI-375346	IC MM74HC04N
IC18	EI-360039	IC TC74HC08P
IC19	EI-360039	IC TC74HC08P
IC20	EI-375347	IC MM74HC14N

## 7. VOICE P.C BOARD

Ref. No.	Part No.	Description
F1	EO-378291	FILTER LC 258BLR-5326N 18KHZ
F2	EO-378291	FILTER LC 258BLR-5326N 18KHZ
F3	EO-378291	FILTER LC 258BLR-5326N 18KHZ
F4	EO-378291	FILTER LC 258BLR-5326N 18KHZ
F5	EO-378291	FILTER LC 258BLR-5326N 18KHZ
F6	EO-378291	FILTER LC 258BLR-5326N 18KHZ
F7	EO-378291	FILTER LC 258BLR-5326N 18KHZ
F8	EO-378291	FILTER LC 258BLR-5326N 18KHZ
IC1	EI-378293	IC L4003
IC2	EI-375346	IC MM74HC04N
IC3	EI-379583	IC TC74HCT574P
IC4	EI-379583	IC TC74HCT574P
IC5	EI-360054	IC TC74HC174P
IC6	EI-360054	IC TC74HC174P
IC7	EI-360054	IC TC74HC174P
IC8	EI-360054	IC TC74HC174P
IC9	EI-375222	IC TC74HC125P
IC10	EI-375205	IC TC74HC541P
IC11	EI-360025	IC TC74HC138P
IC12	EI-379585	IC CD74HC4053
IC13	EI-378141	IC CD74HC4051
IC14	EI-379586	IC MC74F157N
IC15	EI-379586	IC MC74F157N
IC16	EI-379586	IC MC74F157N
IC17	EI-378294	IC MBM27C256-15-ADR15-5-V1.0
IC18	EI-378296	IC MBM27C256-15-ADR15-6-V1.0
IC19	EI-378218	IC MB81C4256-10-G
IC20	EI-378218	IC MB81C4256-10-G
IC21	EI-378218	IC MB81C4256-10-G
IC22	EI-378218	IC MB81C4256-10-G
IC23	EI-378218	IC MB81C4256-10-G
IC24	EI-378218	IC MB81C4256-10-G
IC25	EI-376734	IC F74AC74P
IC26	EI-360054	IC TC74HC174P



**FINAL ASSEMBLY BLOCK**

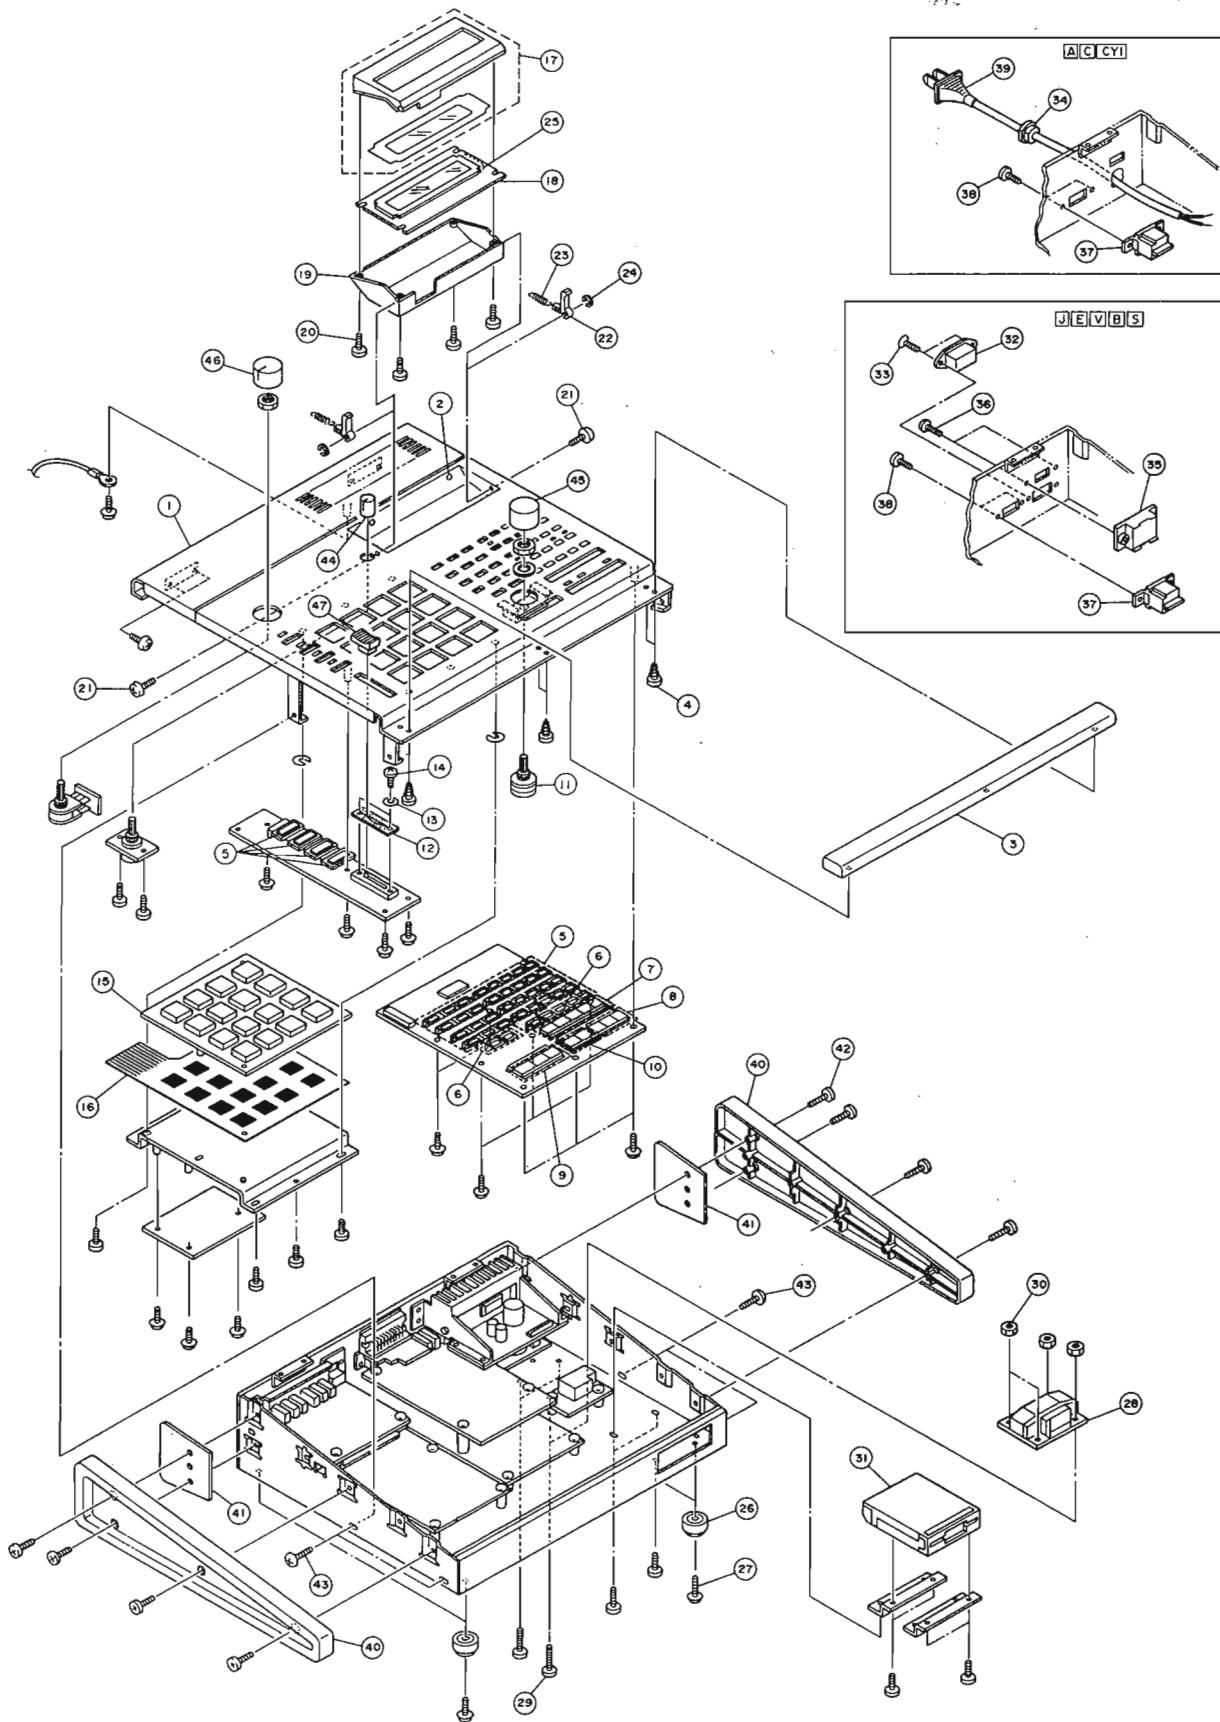

---

**MODEL EXM003**  
**2. EXM P.C BOARD**

Ref. No.	Part No.	Description
IC1	EI-378218	IC MB81C4256-10-G
IC2	EI-378218	IC MB81C4256-10-G
IC3	EI-378218	IC MB81C4256-10-G
IC4	EI-378218	IC MB81C4256-10-G
IC5	EI-378218	IC MB81C4256-10-G
IC6	EI-378218	IC MB81C4256-10-G



Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.
EI-379605	IC2	ES-349474	SW6	EV-365876	VR1		
EI-379657J	49	ES-349474	SW7	EV-378278	118		
EI-379657J	IC1	ES-349474	SW8	EV-378278	VR1		
EJ-353031	J201	ES-349474	SW9	EV-379610	117		
EJ-353031	J202	ES-349474	SW10	EV-379610	VR1		
EJ-353031	J401	ES-349474	SW11	EV-379613	114		
EJ-354105	J203	ES-349474	SW12	EV-379613	VR1		
EJ-354105	J204	ES-349474	SW13	EV-379614	115		
EJ-354105	J205	ES-349474	SW14	EV-379614	VR1		
EJ-354105	J301	ES-349474	SW15	EW-357931	39A		
EJ-354105	J302	ES-349474	SW16	EW-358630	39E		
EJ-354105	J303	ES-349474	SW17	EW-358631	39D		
EJ-354105	J304	ES-349474	SW18	EW-359641	39C		
EJ-354105	J305	ES-349474	SW19	EW-365947	39		
EJ-354105	J306	ES-349474	SW20	EW-366055	39B		
EJ-354105	J307	ES-349474	SW21	EW-379635	48		
EJ-354105	J308	ES-349474	SW22	EW-379636	49		
EJ-354105	J402	ES-349474	SW23	EZ-302906	34		
EJ-354105	J403	ES-349474	SW24	EZ-378206	119		
EJ-354105	J404	ES-349474	SW25	EZ-378206	1		
EJ-354105	J405	ES-349474	SW26	MB-330911	2		
EJ-354105	J406	ES-349474	SW27	ML-380175J	22		
EJ-358633	98	ES-349474	SW28	SA-332850	26		
EJ-358633	32	ES-349474	SW29	SD-378251	3		
EJ-358691	1	ES-349474	SW30	SE-362389A-A	12		
EJ-358691	2	ES-349474	SW31	SE-370057	41		
EJ-365834	P204	ES-349474	SW32	SE-376331	15		
EJ-365834	P302	ES-349474	SW33	SK-364219B	47		
EJ-378207	J101	ES-349474	SW34	SK-378252A	5		
EJ-378207	J102	ES-349474	SW35	SK-378252B	6		
EJ-378207	J103	ES-349474	SW36	SK-378253A	7		
EJ-378207	J104	ES-349474	SW37	SK-378253B	8		
EJ-378207	J105	ES-349474	SW38	SK-378253C	9		
EJ-378207	J106	ES-349474	SW39	SK-378253D	10		
EJ-378269	P205	ES-349474	SW40	SK-380281J	45		
EJ-378269	25	ES-349474	SW41	SK-380293J	46		
EJ-378279	P201	ES-349474	SW42	SK-380638J	44		
EJ-378280	P301	ES-349474	SW43	SP-369956	40		
EJ-378282	P202	ES-349474	SW44	SP-380172J	19		
EJ-378282	P203	ES-349474	SW45	SP-380192J	17		
EJ-378282	P701	ES-349474	SW46	ZG-380174J	23		
EJ-378287	P304	ES-349474	SW47	ZS-311746	33		
EJ-379603	P702	ES-349474	SW48	ZS-321783	42		
EJ-379612	J601	ES-349474	SW49	ZS-338591	38		
EM-378267	99	ES-349474	SW50	ZS-345107	43		
EM-378267	18	ES-349474	SW51	ZS-353268	20		
EO-360068	100	ES-349474	SW52	ZS-360715	27		
EO-360068	FL1	ES-349474	SW1	ZS-360952	36		
EO-378291	101	ES-349474	SW2	ZS-362266	14		
EO-378291	F1	ES-349474	SW3	ZS-369535	29		
EO-378291	F2	ES-349474	SW4	ZS-379293	4		
EO-378291	F3	ES-364478	103	ZS-421806	21		
EO-378291	F4	ES-364478	37	ZW-270101	24		
EO-378291	F5	ES-365943	102	ZW-321317	13		
EO-378291	F6	ES-365943	11	ZW-516993	30		
EO-378291	F7	ES-379609	105				
EO-378291	F8	ES-379609	SW1				
EO-378291	F1	ET-305463	108				
EO-378291	F2	ET-305463	TR3				
EO-378291	F3	ET-305463	TR4				
EO-378291	F4	ET-307195	110				
EO-379607	L1	ET-307195	TR1				
EO-379607	L2	ET-307195	TR2				
EO-379607	L1	ET-308977	111				
EO-379607	L2	ET-308977	TR1				
ER-322787	R1	ET-353899	107				
ER-324185	R1	ET-353899	TR1				
ER-324185	R2	ET-354083	113				
ER-325114	R65	ET-354083	TR902				
ER-325114	R66	ET-356817	109				
ER-333363	R26	ET-356817	TR901				
ER-333363	R27	ET-360067	112				
ES-306430	104	ET-360067	TR2				
ES-306430	35	EV-307626	VR2				
ES-349474	106	EV-307626	VR3				
ES-349474	SW1	EV-307626	VR4				
ES-349474	SW2	EV-307626	VR5				
ES-349474	SW3	EV-336768	VR1				
ES-349474	SW4	EV-336768	VR2				
ES-349474	SW5	EV-365876	116				

**MODEL EXM003**

Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.	Part No.	Ref. No.
EI-378218	IC1						
EI-378218	IC2						
EI-378218	IC3						
EI-378218	IC4						
EI-378218	IC5						
EI-378218	IC6						

### ABREVIATIONS FOR THE SERVICE MANUAL

ABBREVIATION	EXPLANATION	ABBREVIATION	EXPLANATION
AMP (Amp)	AMPlifier	MINI	MINImum
BBD	Bucket Brigade Diode	MIX	MIXer
BCD	Binary Code Decimal	MOD	MODulation
B.DOWN	Brak Down	OSC	OSCillator
B.UP	Back UP	RAM	Random Access Memory
CE	Chip Enable	RD	ReaD
CH	Channel	REG	REGulator
COMP	COMParator	RESO	RESOnance
CONT	CONTrol	RL	ReLay
CV	Control Voltage	ROM	Read Only Memory
D/A	Digital to Analogue	S/H	Sample and Hold
EG	Envelope Generator	SW	SWitch
EXT	EXTernal	THRU	THRough
FREQ	FREQuency	TRANS	TRANSpose
HPF	High Pass Filter	U	Upper
INH	INHibit	VA	Voltage Analog
INT	INTerrupt	VCA	Voltage Controlled Amplifier
INV	INVerter	VCF	Voltage Controlled Filter
L	Lower	VR	Variable Resistor
LFO	Low Frequency Oscillator	V <sub>REF</sub>	REFerence Voltage
MAX	MAXimum	WR	WRite
MEMO	MEMOry		
MIDI	Musical Instrument Digital Interface		

MPC60/EXM003

**AKAI ELECTRIC CO., LTD.**

12-14, 2-Chome, Higashi-Koija, Ohta-ku, Tokyo, Japan

TEL: Tokyo (742) 5111 CABLE: HIFI AKAI TOKYO TELEX: J26261

Printed No. 880125-G1-600

Printed Date: February 20, 1988

950 Printed in Japan

# **AKAI**

## **MODEL MPC 60**

## **MODEL EXM 003**

### **SCHEMATIC DIAGRAM AND PC BOARDS**

#### **TABLE OF CONTENTS**


1. ICs .....	2
2. EV INVERTER P.C BOARD, D SUB PC BOARD, FILTER PC BOARD, POWER PC BOARD, AND VR (B) PC BOARD.....	8
3. MPC60 CONNECTION DIAGRAM .....	9
4. CPU SCHEMATIC DIAGRAM .....	10
5. CPU PC BOARD.....	11
6. SYNC PC BOARD .....	12
7. SYNC SCHEMATIC DIAGRAM.....	13
8. VOICE SCHEMATIC DIAGRAM.....	14
9. VOICE PC BOARD .....	15
10. ADC SCHEMATIC DIAGRAM .....	16
11. ADC PC BOARD .....	17
12. OPERATION SCHEMATIC DIAGRAM.....	18
13. OPERATION (A), (B) PC BOARD.....	19
14. DRUM SCHEMATIC DIAGRAM AND PC BOARD.....	20
15. BLOCK DIAGRAM.....	21
16. EXM003 RAM SCHEMATIC DIAGRAM .....	22
17. D RAM PC BOARD.....	23

**Information of ICs**

NAME OF IC	FUNCTION	NAME OF IC	FUNCTION
AD7523JN	Digital Control Attenuator	SED9420CAC	VFO type FDD Data Separator
CD74HC4051	Single 8-Channel Multiplexer	STR9005	+5V Regulator
CD74HC4053	Triple 2-Channel Multiplexer	TC74HCOOP	Quad 2-Input NAND Gate
CD74HCT173	3 state Quad D-Flip Flop	TC74HC04P	Hex Inverter
CXK5816PN-15L	2K×8 bit Static RAM	TC74HC08P	Quad 2-Input AND Gate.
F74AC74P	Dual D-Flip Flop with Preset and Clear	TC74HC14P	Hex Inverting Schmitt Trigger
HD74LS32P	Quand 2-Input OR Gate	TC74HC32P	Quad 2-Input OR Gate
HD7406P	Hex Inverter	TC74HC74P	Dual D-Flip Flop with Preset and Clear
HD75188P	Quand Line Driver	TC74HC125P	3-State Quad Buffer
HD75189P	Quand Line Receiver	TC74HC126P	3-State Quad Buffer
I-0055	Time Code Reader	TC74HC138P	3 to 8 Line Decoder/ Demultiplexer
IR9311	High Speed Comparator	TC74HC153P	Dual 4-Input Multiplexer
L4003	Custom Micro-Processor for MPC60	TC74HC155P	Dual 2 to 4 Decoder/ Demultiplexer
LA6339	Quad Comparator	TC74HC161P	4-bit Synchronous Binary Counter with Asynchronous Clear
LC7981	LCD Dot Matrix Graphic Generator	TC74HC174P	Hex D-Flip Flop with Clear
M5218P	Dual Low Noise OP-Amplifier	TC74HC175P	Quand D-Flip Flop with Clear
M5220P	Dual Low Noise Voltage Amplifier	TC74HC259P	3 to 8 Line Decoder
M5230L	Regulator (Variable output, + - tracking type)	TC74HC390	Dual 4-bit Decode Counter
M5238P	Dual J-FET Input OP-Amplifier	TC74HC393P	Dual 4-bit Binary Counter
MB89255-P-G	Parallel Data IN-OUT Interface	TC74HC541P	Octal 3-State Buffer
MB89371P-G	Serial Data Transmitter, Receiver	TC74HCT245P	Octal 3-State Transceiver
MB81C4256-10	256K×4 (1M) bit Dynamic RAM	TC74HCT573P	3-State Octal D-Type Latch
MBL80186-10	High-Integration 16 bit Micro-Processor	TC74HCT574P	Octal D-Flip Flop
MBM27C256-15	256K bit EP-ROM	TC74HC4002P	Dual 4-Input NOR Gate
MBM27C512-20	64K×8 (512K) bit EP-ROM	TC4516BP	Binary U/D counter
MC74F08N	Quad 2-Input AND Gate	TM2764AD-20	64 K bit EP-ROM
MC74F32N	Quad 2-Input OR Gate	μPC814C	High-Speed Dual Low Noise OP-Amplifier
MC74F157N	Quad 2-Input Multiplexer	μPD78C11G-044	8 bit Micro-Processor with A/D Converter
MC74F158N	Quad 2-Input Multiplexer (Inv. out)	μPD5200C	Dual Analog Switch
NJM78L05A	+5V Regulator	μPD72066C	FDD Controller
NJM79L05A	-5V Regulator		
PCM54HP	16 bit D/A Converter		
PCM77P	16 bit A/D Converter		
PST520D	Reset Pulse Generator		

LC7981

LC7981

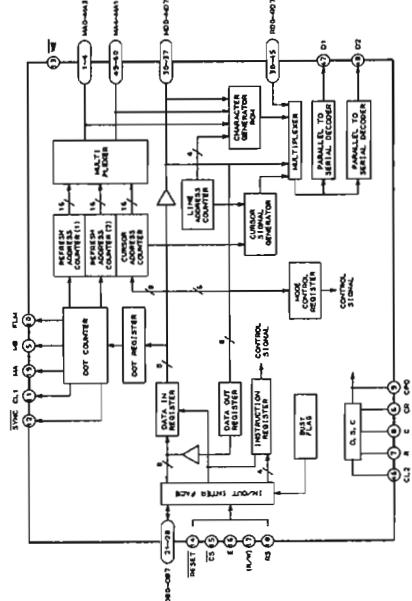


## FUNCTION

PIN No. SYMBOL FUNCTION

21	DB 0 ~ 7	DATA BUSS
28		
15	$\overline{CS}$	CHIP SELECT
17	R/W	READ/WRITE
18	RS	REGISTER SELECT
16	E	ENABLE
6		CR OSC CONNECT PIN
7	CR. R. C	
8		
14	RESET	RESET
1	49	DISPLAY RAM ADDRESS OUT
4	60	
30	I <sub>O</sub> MA 0 ~ 15	DISPLAY DATA BUSS
37		
38	RD 0 ~ 7	ROM DATA IN
45		
13	WE	WRITE ENABLE
46	CL2	DISPLAY DATA SHIFT CLOCK
11	CL1	DISPLAY DATA LATCH SIGNAL
10	FLM	FRAME SIGNAL
19	MA	LCD DRIVE SIGNAL (A TYPE)
5	MB	LDC DRIVE SIGNAL (B TYPE)
47	D1, D2	DISPLAY DATA SERIAL OUT
48		UPPER FRAME D1..... LOWER FRAME D2.....
9	CPO	SLAVE CLOCK
12	SYNC	PARALLEL DRIVE SYNC




INPUT	SOURCE	OUTPUT
X	X	N
X	N	L
N	L	A
N	L	B

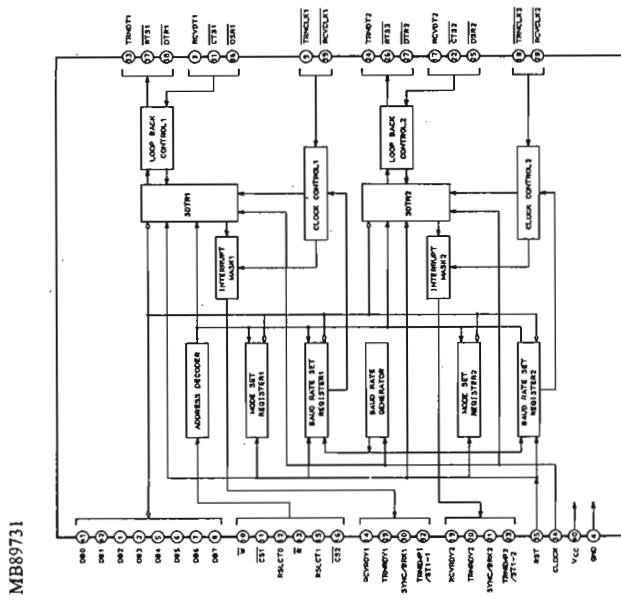


CD74HCT137

I-0055

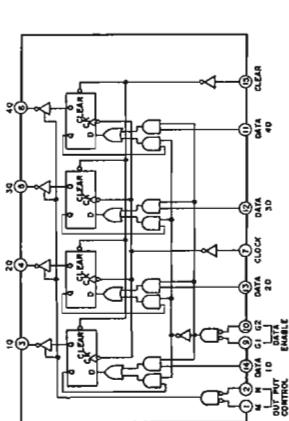


AD7523JN

I-0055


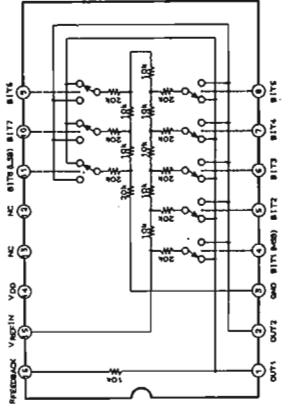



CD74HC4051

PIN No.	SYMBOL	FUNCTION
1, 15	GROUND	
14, 28	V <sub>CC</sub>	+5VDC
2	ORE	Internal Register Overflow
3	URE	Internal Register Underflow
4	SYSCLK	Input for system clock-To 10 MHz
5	INTR	Active when a new Time Code Word has been stored in the internal buffer.
6	FWD/REV	Tape Direction Indicator HIGH=FWD LOW=REV
7	A0	Output Word Select-Selects which word is presented to Data Output 00-07
8	A1	
9	R/D	Output Enable-Data is available at Data Outputs 00-07 when RD is active.
10	D0	Data Output 0
11	D2	Data Output 2
12	D4	Data Output 4
13	D6	Data Output 6
16	D7	Data Output 7
17	D5	Data Output 5
18	D3	Data Output 3
19	D1	Data Output 1
20	SYNC	Outputs a pulse two clock periods wide when the Time Code SYNC word has been read completely.
21	DATA	Serial NRZ Data Output, Format:NRZ 1
22	CLOCK	Time Code Clock [clock rate derived from Time Code]
23	TESTEN	Test Enable-Must be HIGH for normal operation
24	TC/UB	Time code or User Bits select Input HIGH = Time Code LOW = User Bits
25	TIMCO	Longitudinal Time Code Input at TTL levels
26	TEST B	Test Input B-Must be HIGH for normal operation
27	TEST A	Test Input A-Must be HIGH for normal operation

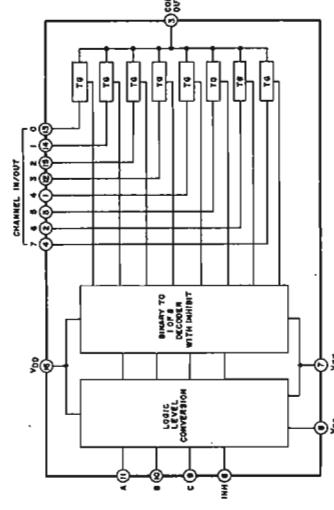


CD74HC4053

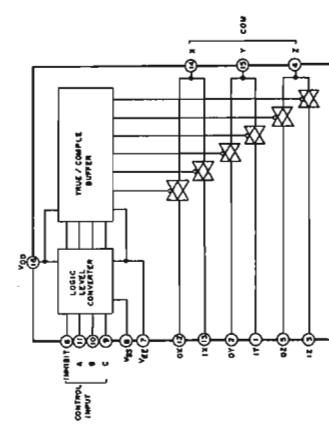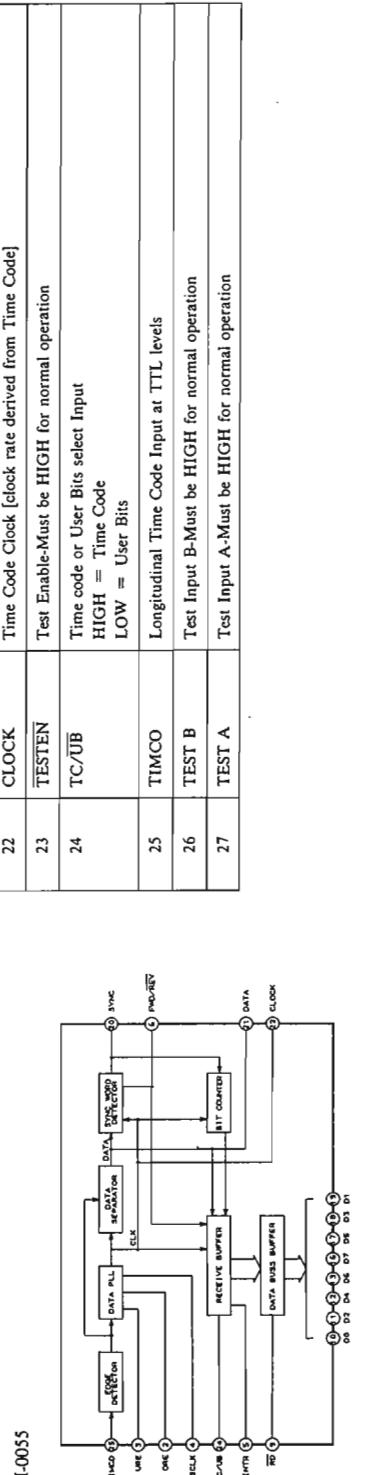


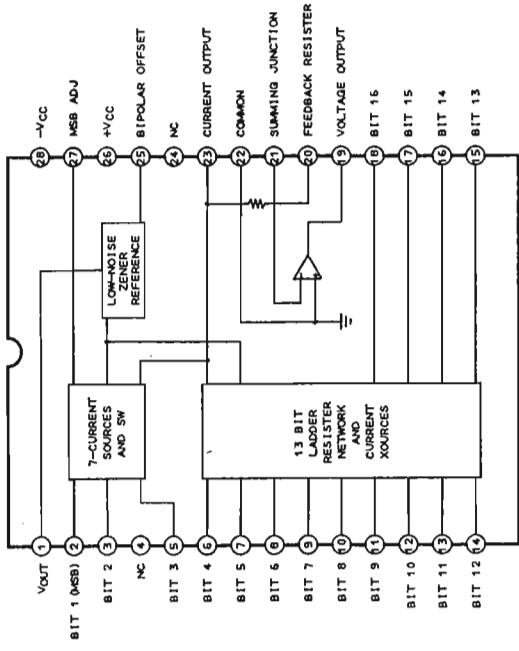


SED9420CAC


PIN No.	SYMBOL	FUNCTION
1	OSCI	OSC IN
2	OSC2	OSC OUT
3	CLK1	FDC CLOCK OUT STD FD: 8MHz MINI FD: 4MHz
4	TEST 2	NC OR PULL UP (V <sub>DD</sub> )
5	DRQ	DATA REQUEST IN
6	SYNC	SYNC REQUEST IN
7	RD DATA	FDD. READ DATA IN
8	WINDOW	DATA WINDOW OUT
9	DATA	
10	MFM/FM	MFM/FM SELECT
11	MIN/STD	FD SELECT 5 INCH; High 8 INCH; Low
12	V <sub>SS1</sub>	DIGITAL GND
13	V <sub>SS2</sub>	ANALOG GND (VCO GND)
14	CONTROL	VCO CONTROL
15	OFFSET	VCO OFFSET
16	LPFI	PLL LOOP FILTER CONNECTOR
17	LPF2	PLL LOOP FILTER CONNECTOR
18	TEST	TEST NC
19	WCLK	FDC SAVE CLOCK ● 8 INCH/MFM; T = 1 $\mu$ s ● 5 INCH/MFM; T = 2 $\mu$ s ● 5 INCH; 1 MHz
20	CR	
21	CLK2	FDC CLOCK OUT ● 8 INCH; 2 MHz ● 5 INCH; 1 MHz
22	TRIG IN	TIMER TRIGGER IN
23	TM OUT	(For HEAD LOAD, MOTORSTOP ETC.)
24	V <sub>DD</sub>	+5V

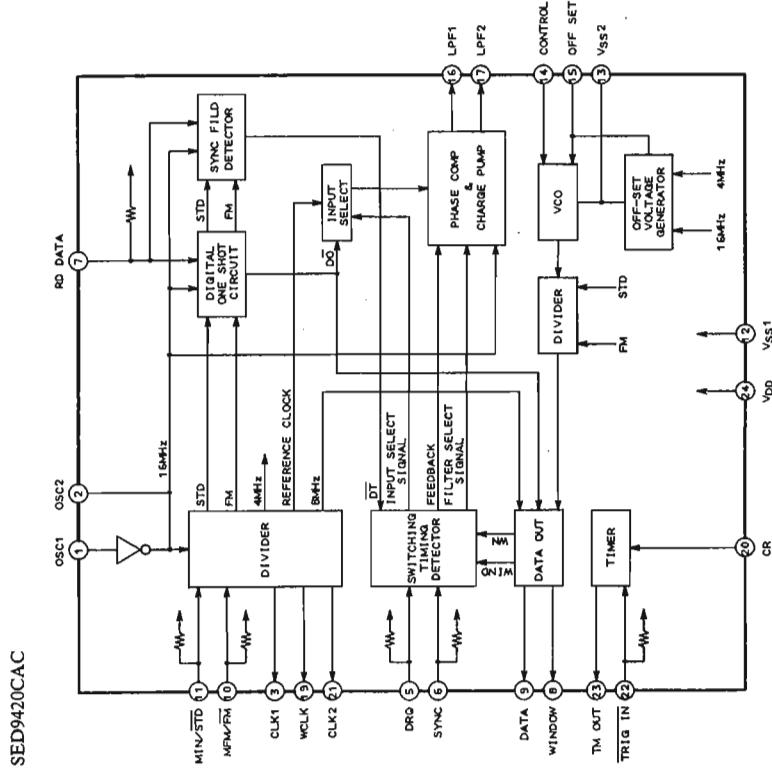


TC74HCT573P

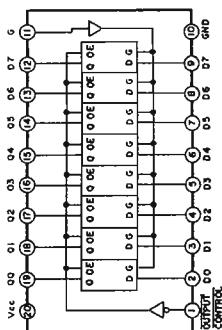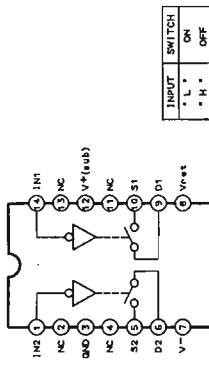 $\mu$ PDS200C

TC74HCT574P

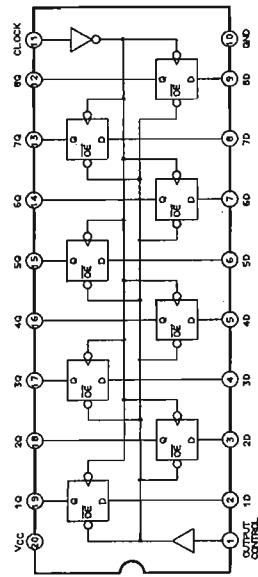














OUTPUT CONTROL	CLOCK	DATA	OUTPUT
L	I	H	z
L	L	L	q <sub>0</sub>
H	x	x	z

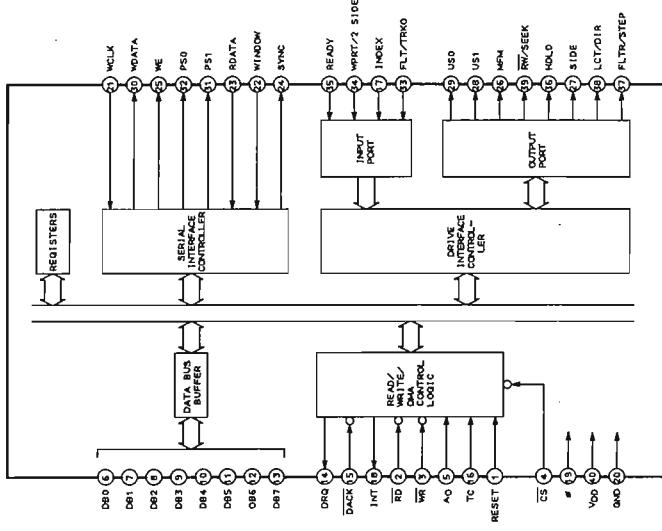
 $\mu$ PD72066C

CARRY IN	UP/DOWN	PRESET	RESET	ACTION
1	X	0	0	NO COUNT
0	0	0	0	COUNT UP
0	0	0	0	COUNT DOWN
X	X	1	0	PRESET
X	X	X	1	RESET

X-COM T CARE

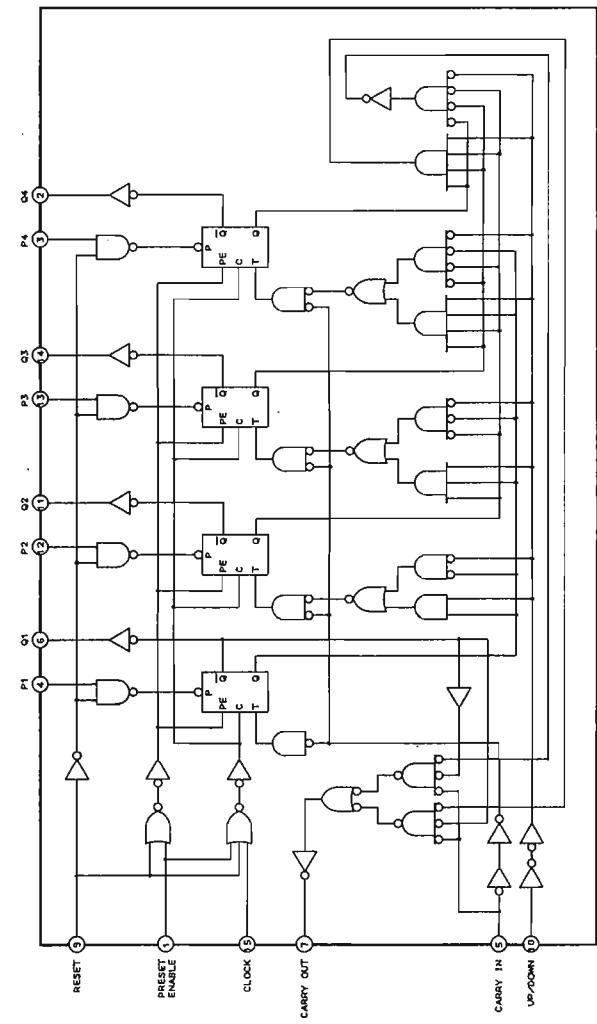

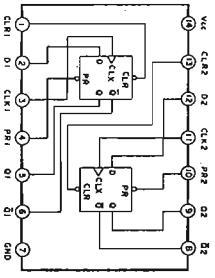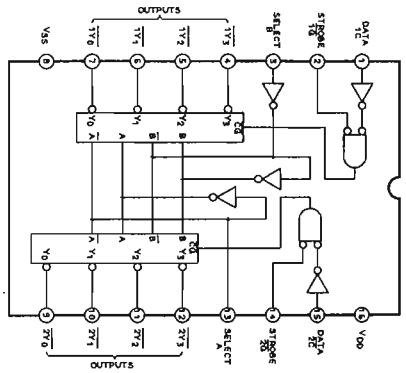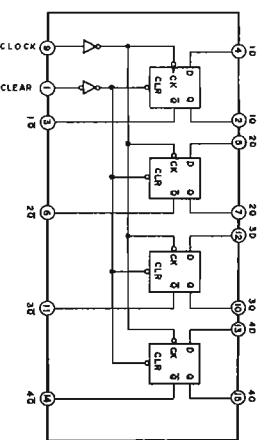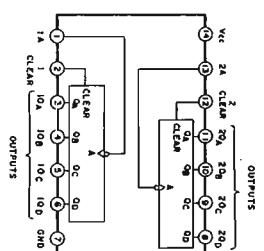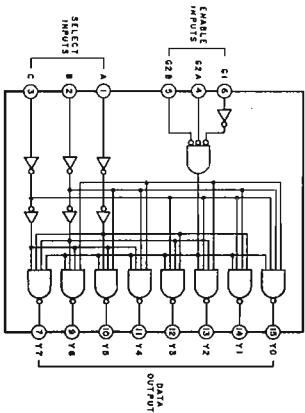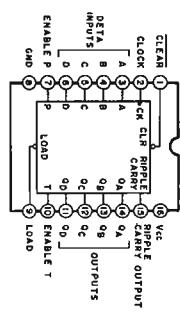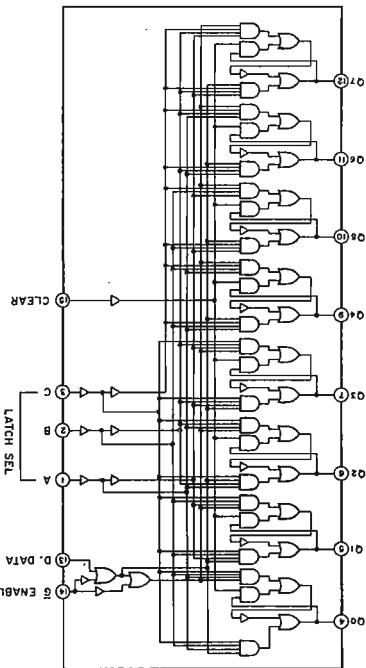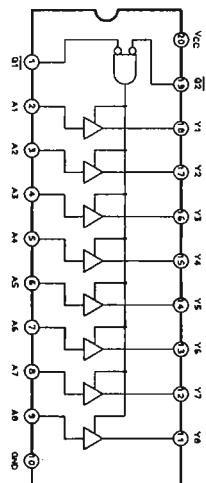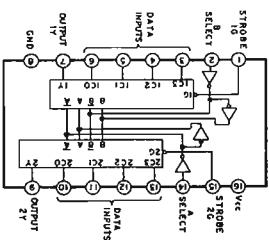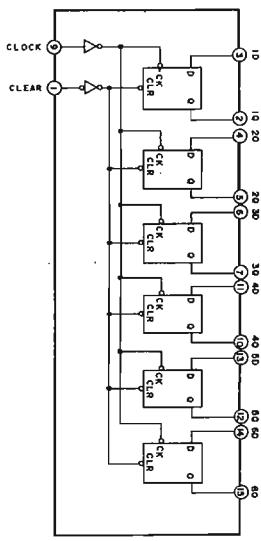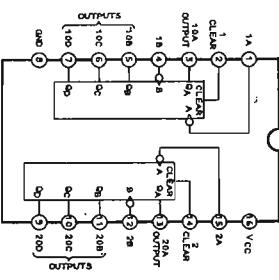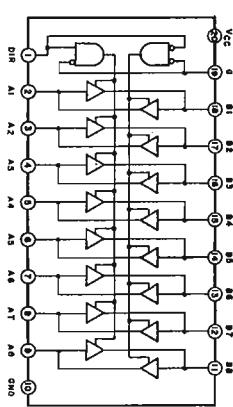
**TC74HC74P****TC74HC155P****TC74HC175P****TC74HC393P****TC74HC138P****TC74HC161P****TC74HC259P****TC74HC541P****TC74HC153P****TC74HC174P****TC74HC390P****TC74HCT245P**

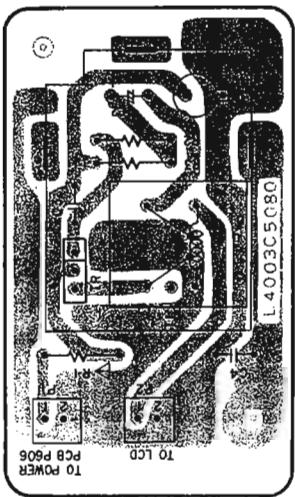



EL INVERTER PCB L4003C5080

= NPN TRANSISTOR  
 = PNP TRANSISTOR  
 = CAPACITOR  
 = RESISTOR  
 = INDUCTOR  
 = DIODE  
 = ZENER DIODE  
 = SWITCH  
 = CONNECTOR  
 = POWER JACK

VR (B) PCB L4003B506C

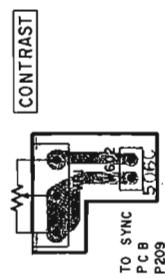



D SUB PCB L4003B506B

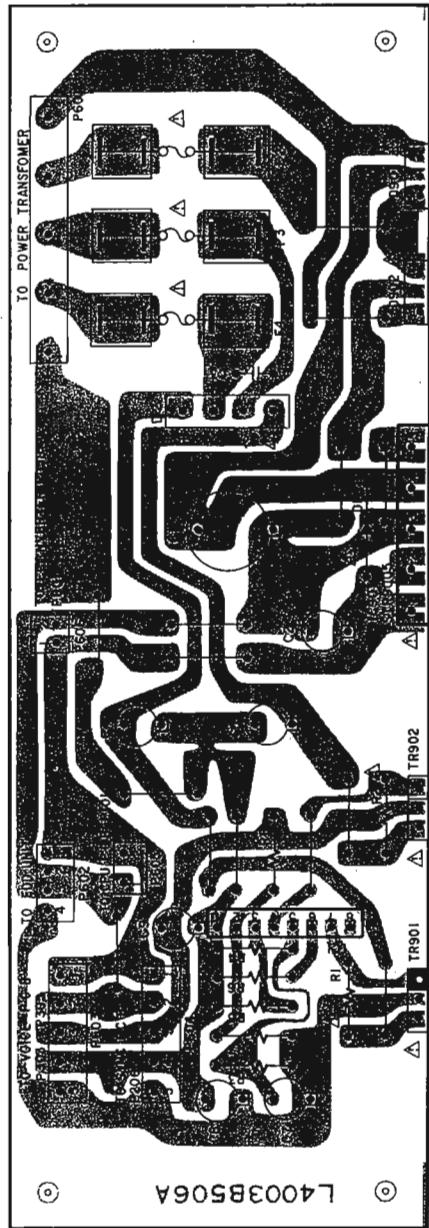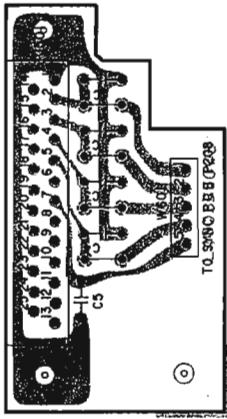

POWER PCB L4003B506A


WARNING: INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY,  
 REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S  
 RECOMMENDED PARTS  
 AVERTISSEMENT: INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ.  
 POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL,  
 NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT


= NPN TRANSISTOR  
 = PNP TRANSISTOR

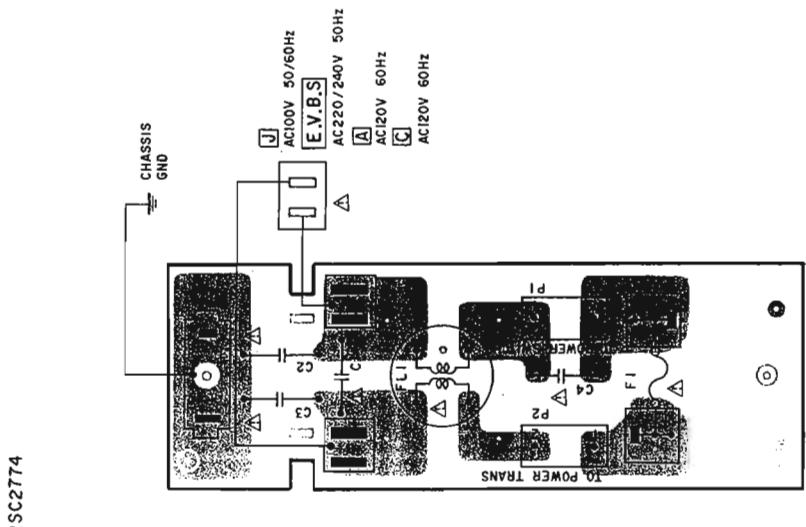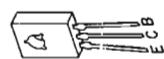


FILTER PCB L6001D5080

2SB891  
2SD1189

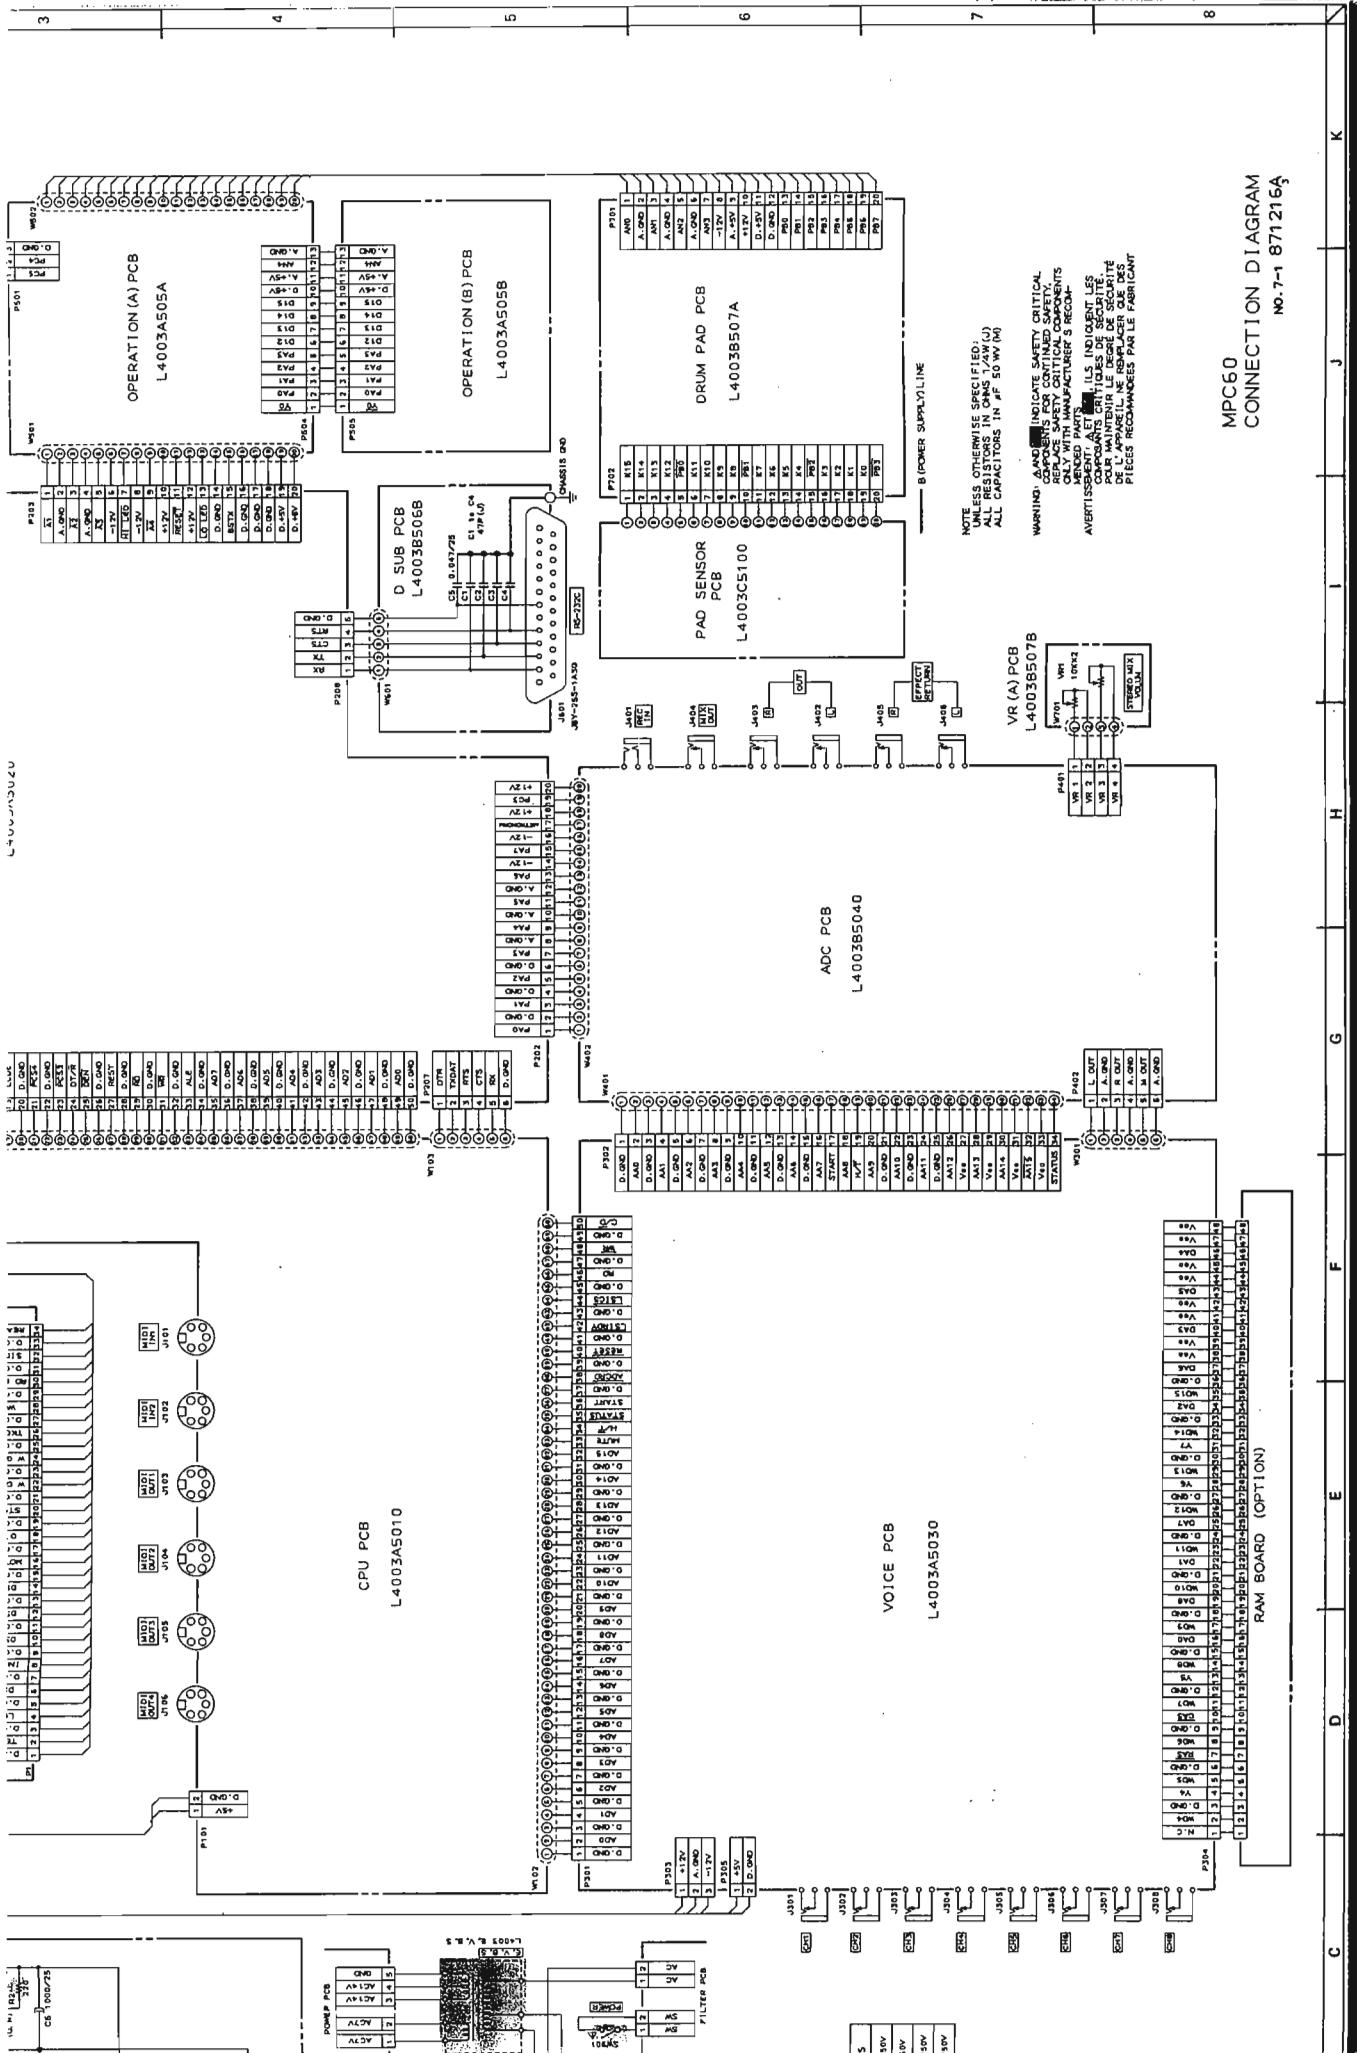

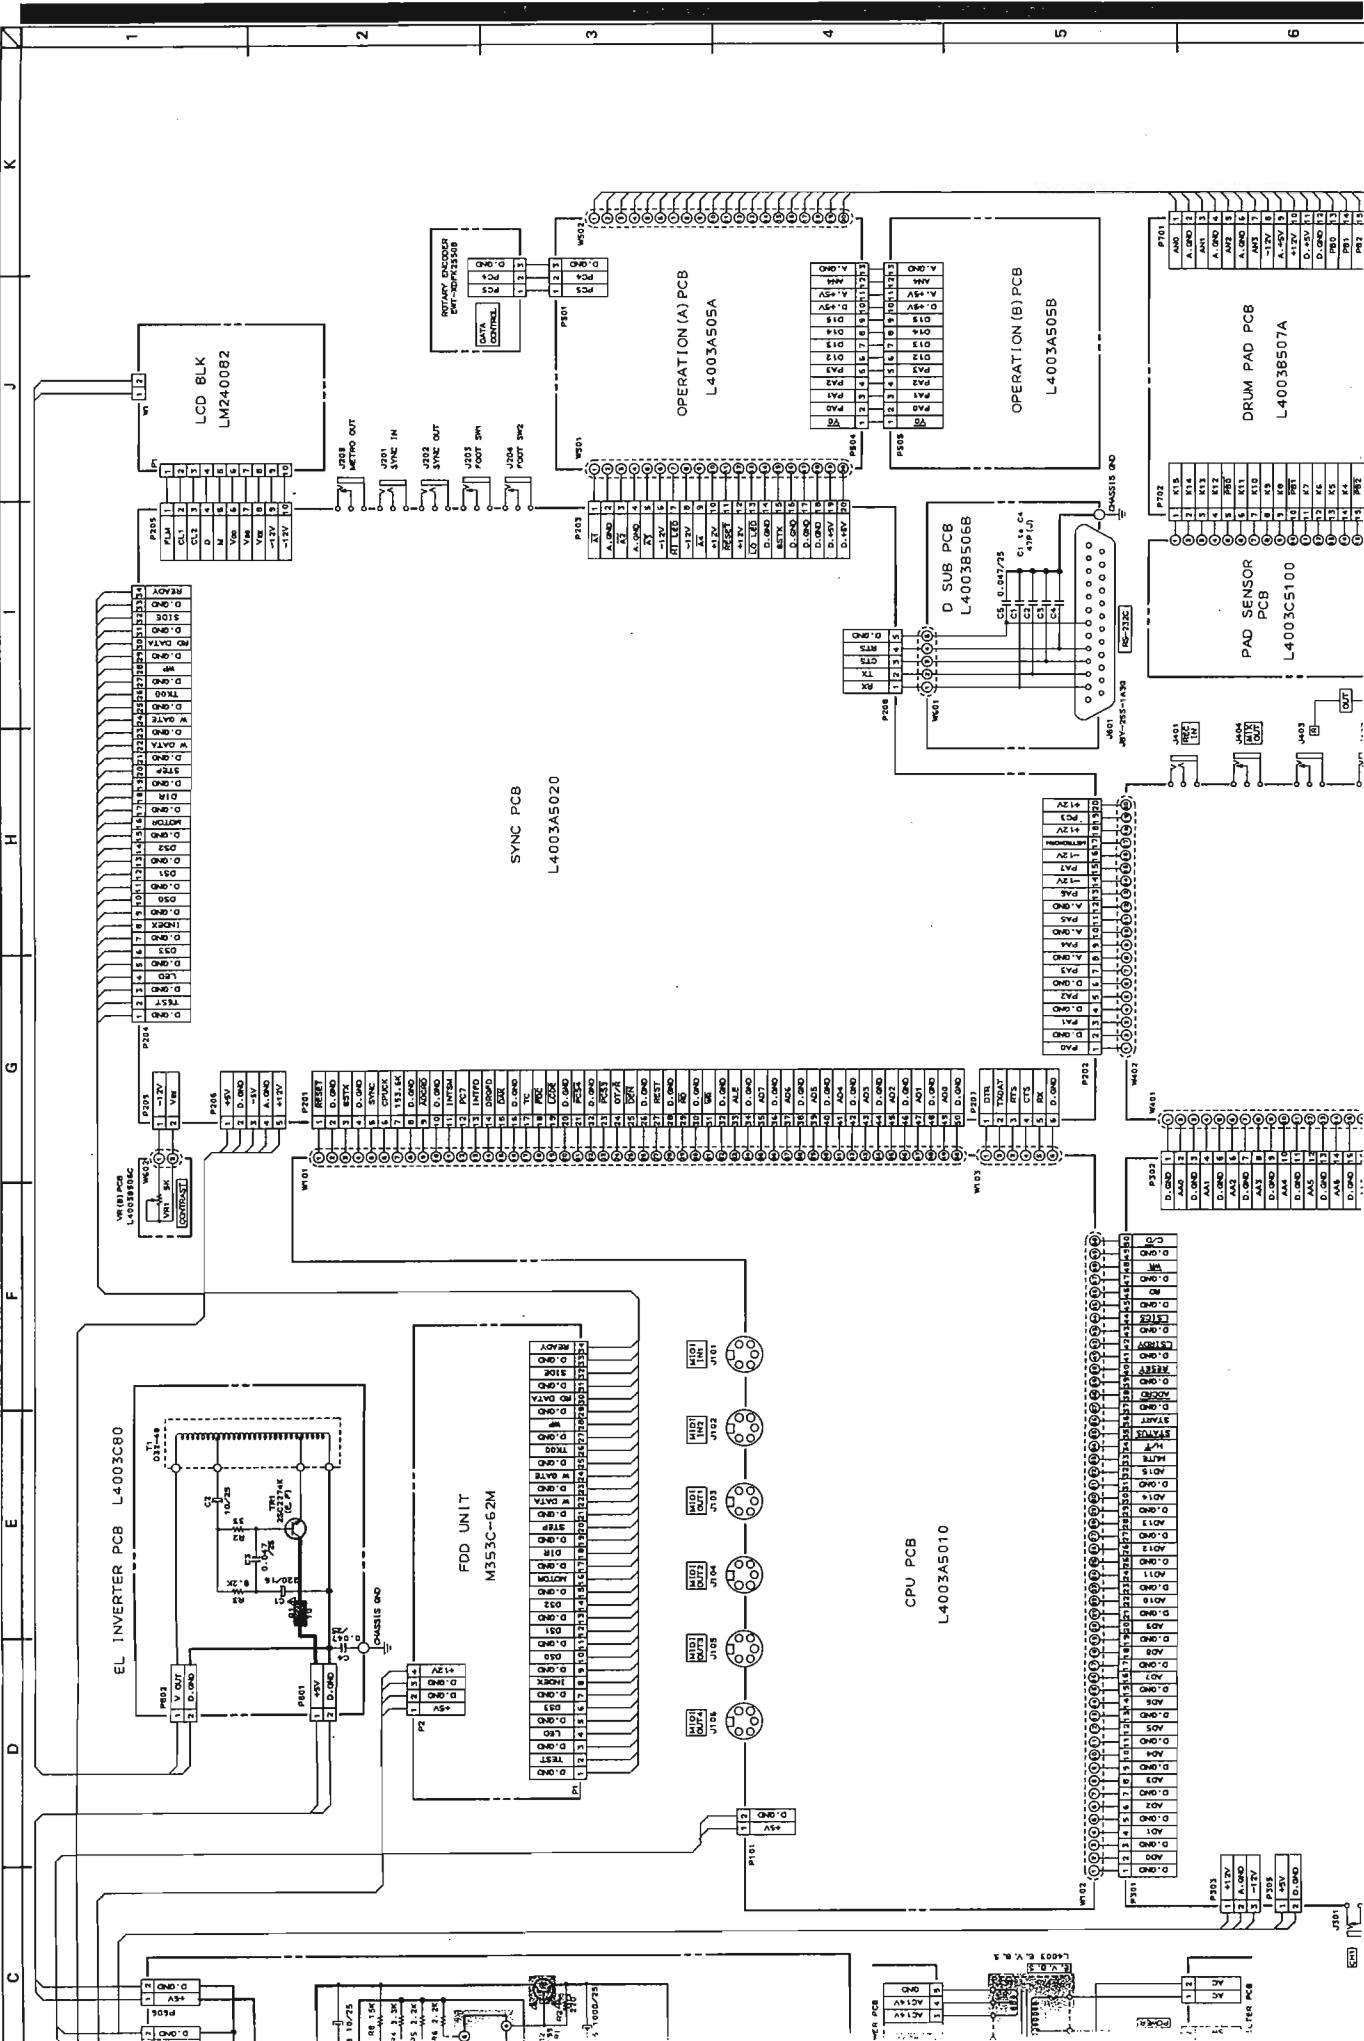

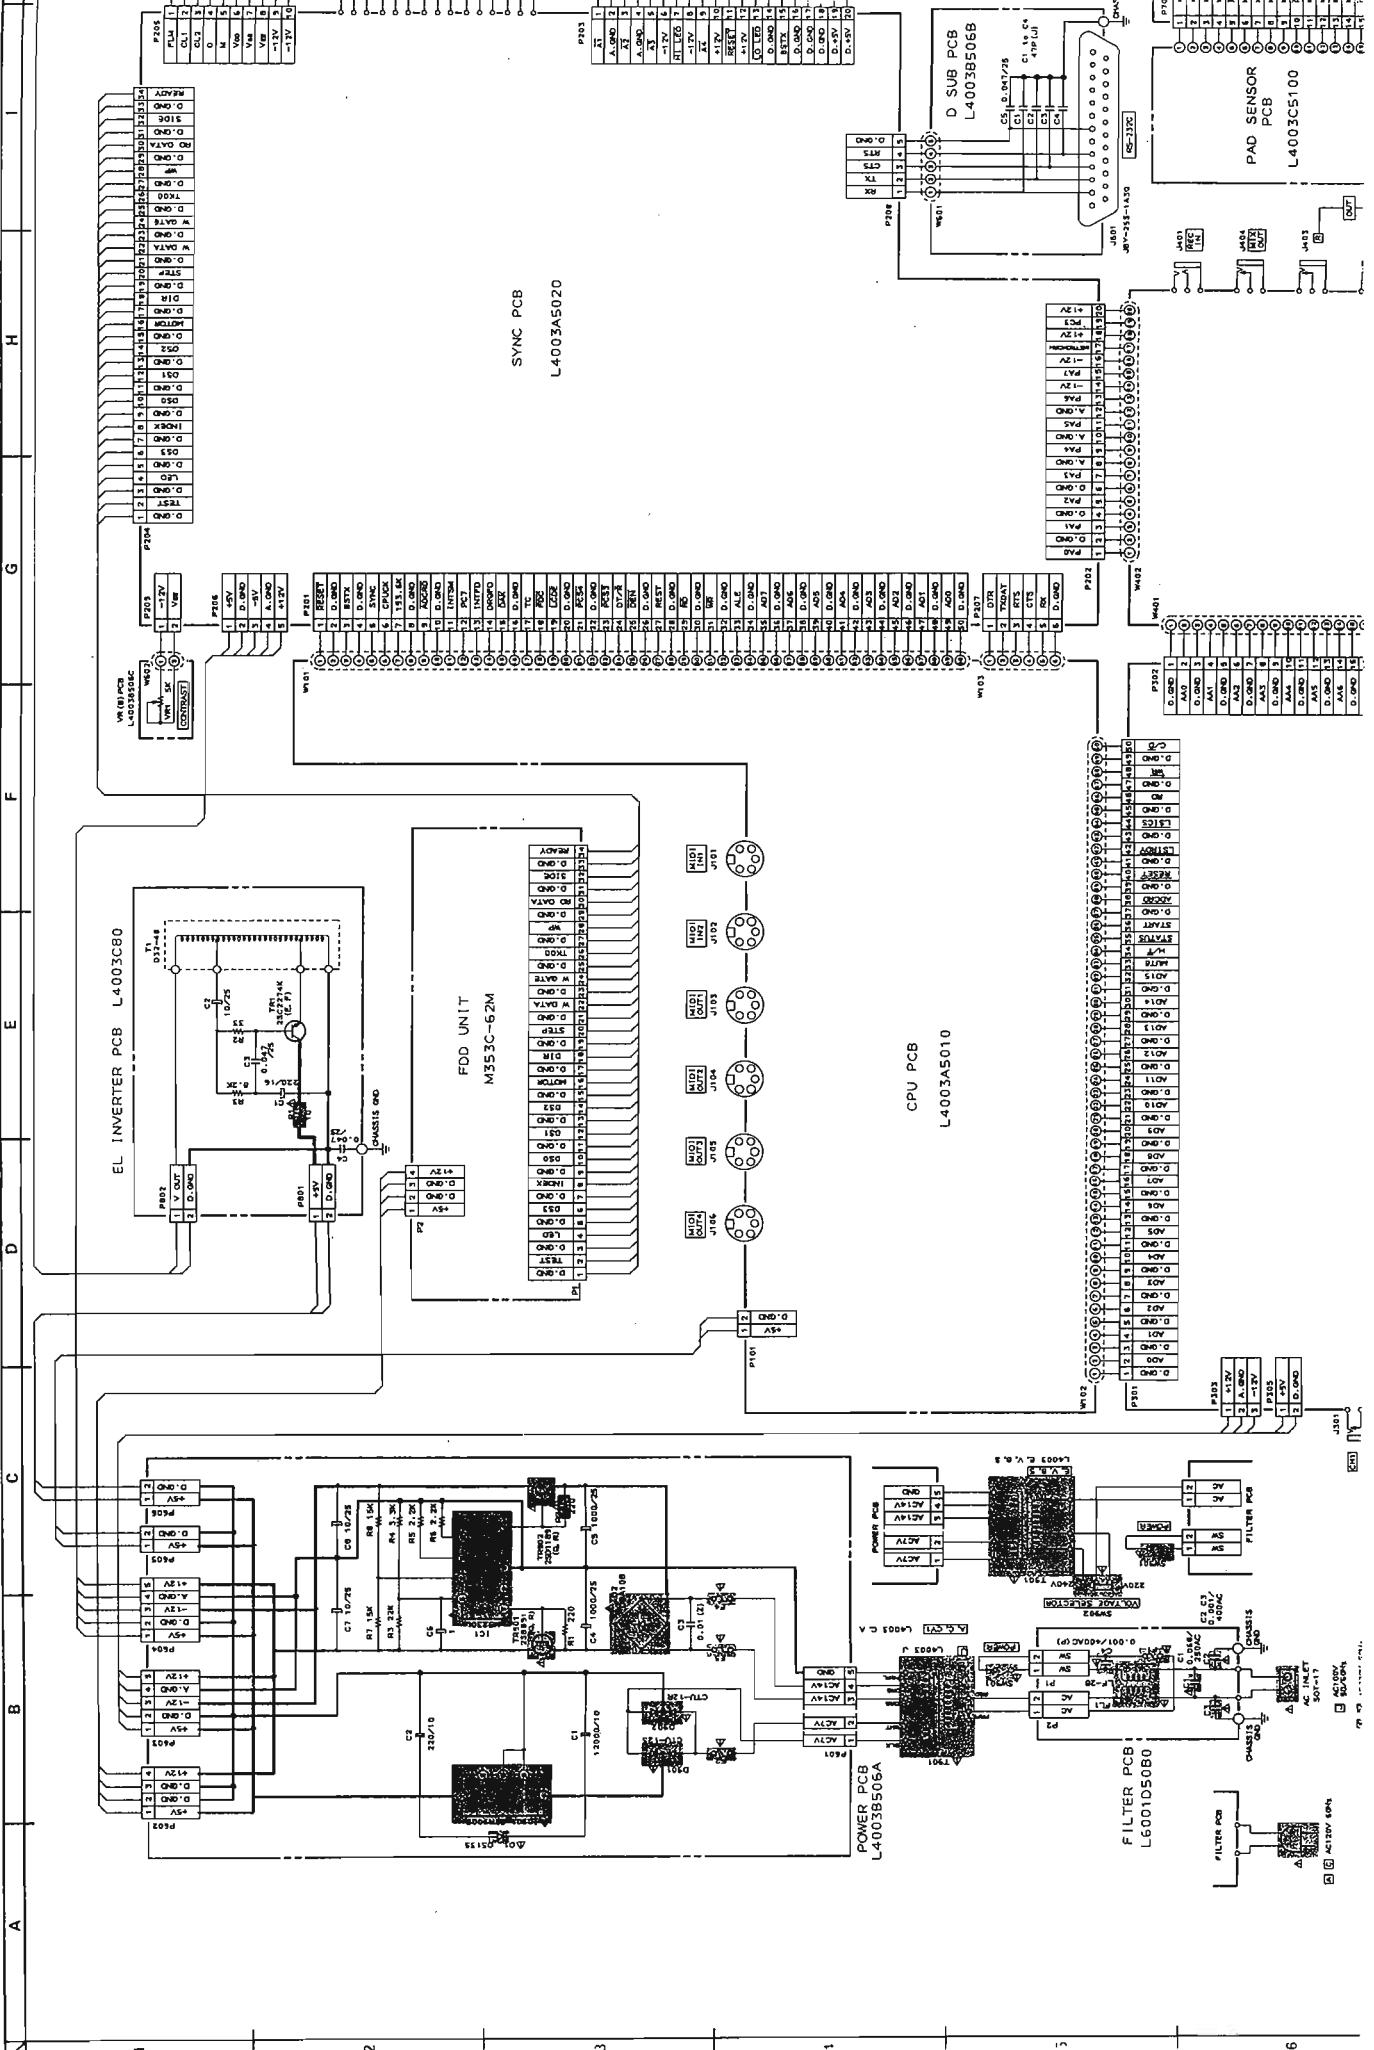

## 11. POWER P.C BOARD

Ref. No.	Part No.	Description
D1	*ED-361055	D SILICON DS135E-UB1
D2	*ED-330319	D SILICON DBA10B 100/1.0A
D901	*ED-365818	D SILICON CTU-12S 200/ 6.0A
D902	*ED-365819	D SILICON CTU-12R 200/ 6.0A
IC1	*EI-348123	IC M5230L
IC901	*EI-365820	IC STR9005
R1	*ER-324185	R CB H S10 FS RDS 1/4W 221J
R2	*ER-324185	R CB H S10 FS RDS 1/4W 221J
TR901	*ET-356817	TR 2SB891 Q,R
TR902	*ET-354083	TR 2SD1189 Q,R
F2	*EF-326639	FUSE TSC A 250V 3.15A [J]
F3	*EF-309388	FUSE TSC A 250V 800MA [J]
F4	*EF-309388	FUSE TSC A 250V 800MA [J]
F2A	*EF-323080	FUSE TSC 125V 3.15A [C,A]
F3A	*EF-310229	FUSE TSC 125V 1.00A [C,A]
F4A	*EF-310229	FUSE TSC 125V 1.00A [C,A]
F2B	*EF-623125	FUSE SEMKO T [E,V,S]
F3B	*EF-593706	FUSE SEMKO T 250V 500MA [E,V,S]
F4B	*EF-593706	FUSE SEMKO T 250V 500MA [E,V,S]
F2C	*EF-364518	FUSE BET T 250V 2.50A [B]
F3C	*EF-355374	FUSE BET T 250V 500MA [B]
F4C	*EF-355374	FUSE BET T 250V 500MA [B]

## 12. D SUB P.C BOARD

Ref. No.	Part No.	Description
J601	EJ-379612	PLUG JBY-25S-1A3G ***

## 13. VR (B) P.C BOARD

Ref. No.	Part No.	Description
VR1	EV-379613	VR ROTARY EVHCCAP20B53 B502

## 14. FILTER P.C BOARD


Ref. No.	Part No.	Description
C1	*EC-369670	C MMY V XE 683M 250AC
C2	*EC-358450	C CE V DNS102MBE B 102M 400AC
C3	*EC-358450	C CE V DNS102MBE B 102M 400AC
C4	*EC-338411	C CE V FZ 103P 400AC
FL1	*EO-360068	COIL LF LF-2 B
F1	*EF-311839	FUSE TSC A 250V 1.60A [J]
F1A	*EF-309392	FUSE TSC 125V 1.25A [C,A]
F1B	*EF-593706	FUSE SEMKO T 250V 500MA [E,V,S]
F1C	*EF-355374	FUSE BET T 250V 500MA [B]

## 15. EL INVERTER P.C BOARD

Ref. No.	Part No.	Description
R1	ER-322787	R CB H S10 FS RDS 1/4W 100J
TR1	ET-308977	TR 2SC2274K F F05
T1	BT-379599	TRANS PULSE D32-48


## 16. FINAL ASSEMBLY BLOCK

Ref. No.	Part No.	Description
1	BD-381924J	PANEL FRONT COMP PART
2	MB-330911	CUSHION RUBBER
3	SD-378251	PANEL LEATHER PART
4	ZS-379293	WS RND31X100STL CMT
5	SK-378252A	KNOB PUSH(A)
6	SK-378252B	KNOB PUSH(B)
7	SK-378253A	KNOB OPERATE(A)
8	SK-378253B	KNOB OPERATE(B)
9	SK-378253C	KNOB OPERATE(C)
10	SK-378253D	KNOB OPERATE(D)
11	ES-365943	SW EWT-XDFK2550B
12	SE-362389A-A	MASK VOLUME(A)
13	ZW-321317	PW21X040X050PSL
14	ZS-362266	PAN20X02STL BNI
15	SE-376331	PAD
16	BA-379695	PC PAD SENSOR
17	SP-380192J	PANEL LCD(A) PART
18	EM-378267	IND LCD 240082
19	SP-380172J	PANEL LCD(B)
20	ZS-353268	BID30X10STL NI3
21	ZS-421806	PAN30X08STL CMT
22	ML-380175J	ARM LOCK
23	ZG-3B0174J	SP PULL ARM LOCK
24	ZW-270101	RING E 300SUP CMT
25	EJ-378269	PLUG B10P-ER 10P
26	SA-332850	FOOT ROUND
27	ZS-360715	ST PAN30X08STL CMT C080
28	*BT-378271	TRANS POW L4003 J [J][T901]
28A	*BT-378272	TRANS POW L4003 C,A [A,C,Y1][T901]
28B	*BT-378273	TRANS POW L4003 E,V,B,S [E,V,B,S][T901]
29	ZS-369535	ST BR30X10STL NI3
30	ZW-516993	N30STL CMT 1
31	BB-375768	FLOPPY DISK MF353C-62M
32	*EJ-358633	SOCKET INLET SOT-17 2P [J,E,V,B,S,Y1]
33	ZS-311746	T2CTS30X08STL BNI
34	*EZ-302906	STRAIN RELIEF SR-6N-4 [C,A,Y1]
35	*ES-306430	SW SLIDE J-S4013#01 01-2
36	ZS-360952	PT BR30X08STL NI3
37	*ES-364478	SW SEESAW SDDT SPST TYPEA T8.5
38	ZS-338591	BID30X08STL NI3
39	*EW-365947	AC CORD 250 SKP210KS17B A [J]
39A	*EW-357931	AC CORD 3 CORES VM0033A SJT18A [C,Y1]
39B	*EW-366055	AC CORD 250 KP11WSJT18 UC [A]
39C	*EW-359641	AC CORD 2C KP-419C/KS-17 EV [E,V]
39D	*EW-358631	AC CORD 2C KS-17 LTBS2F BS [B]
39E	*EW-358630	AC CORD 2C KP560 LTSA2F KS17 S [S]
40	SP-369956	PANEL SIDE
41	SE-370057	MASK SIDE
42	ZS-321783	ST BID40X10STL NI3
43	ZS-345107	ST BR30X08STL NI3
44	SK-380638J	KNOB(A-6)
45	SK-380281J	KNOB(A-2)
46	SK-380293J	KNOB(A-3)
47	SK-364219B	KNOB SLIDE(B)
48	EW-379635	WIRE ASSY MPC60 W901 34P
49	EW-379636	WIRE ASSY MPC60 W902 10P

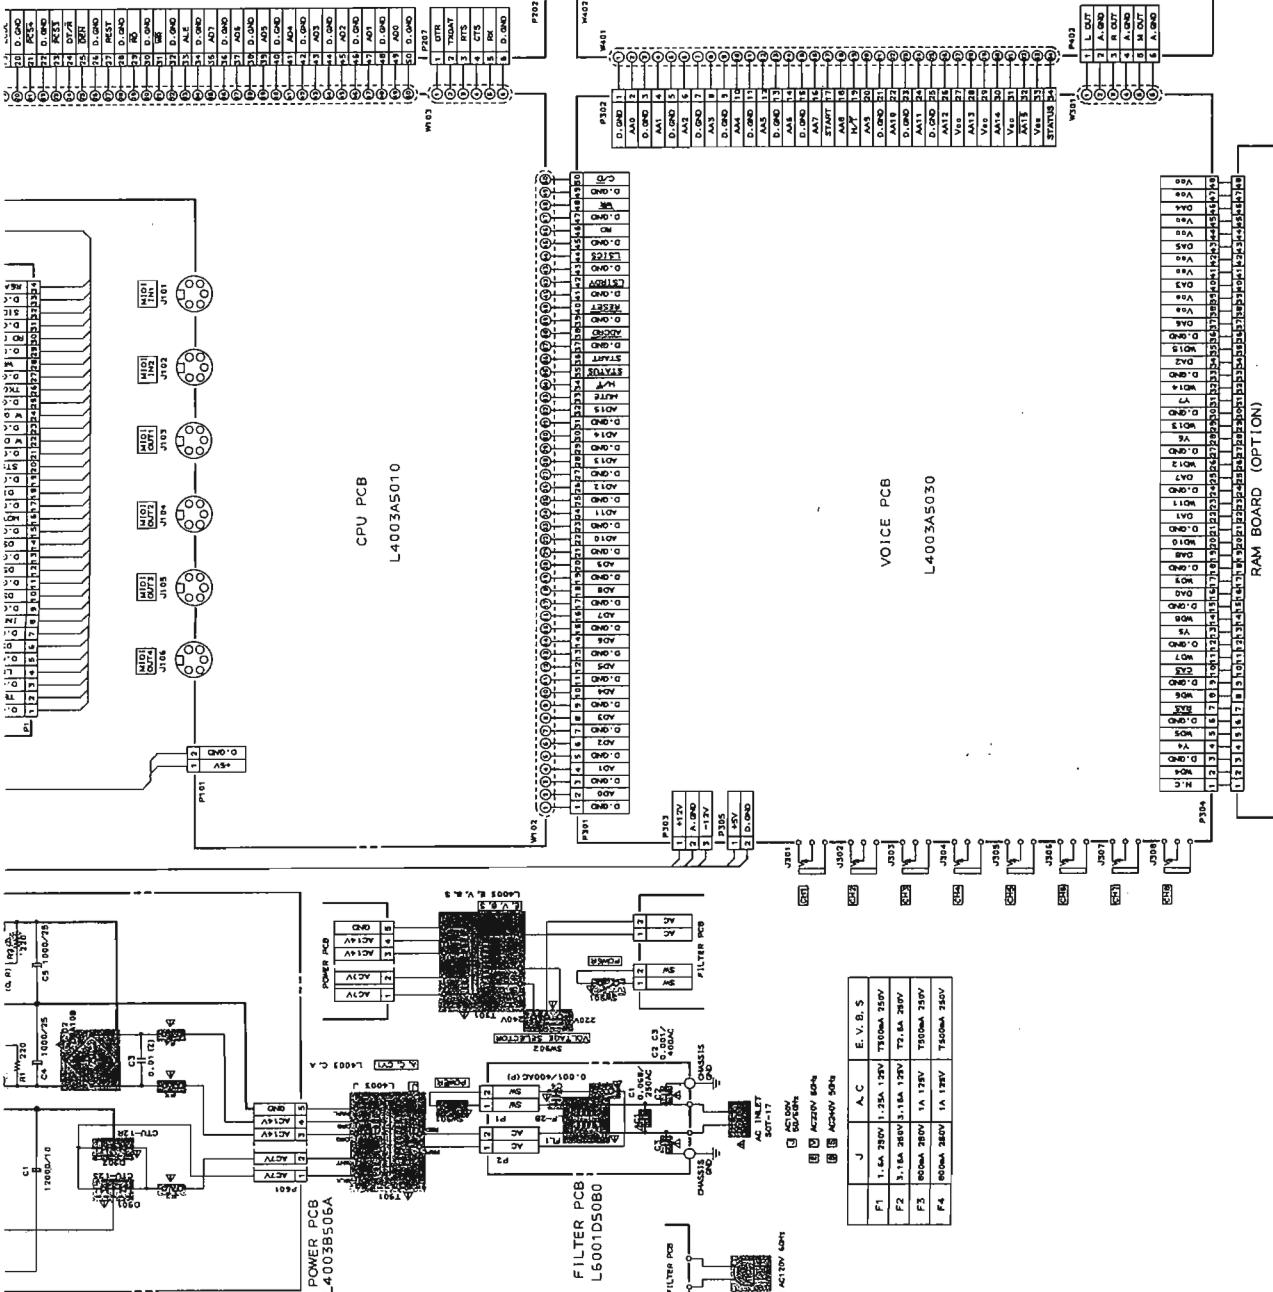

MPC60 CPU  
SCHEMATIC DIAGRAM

NO. 7-2 871217A

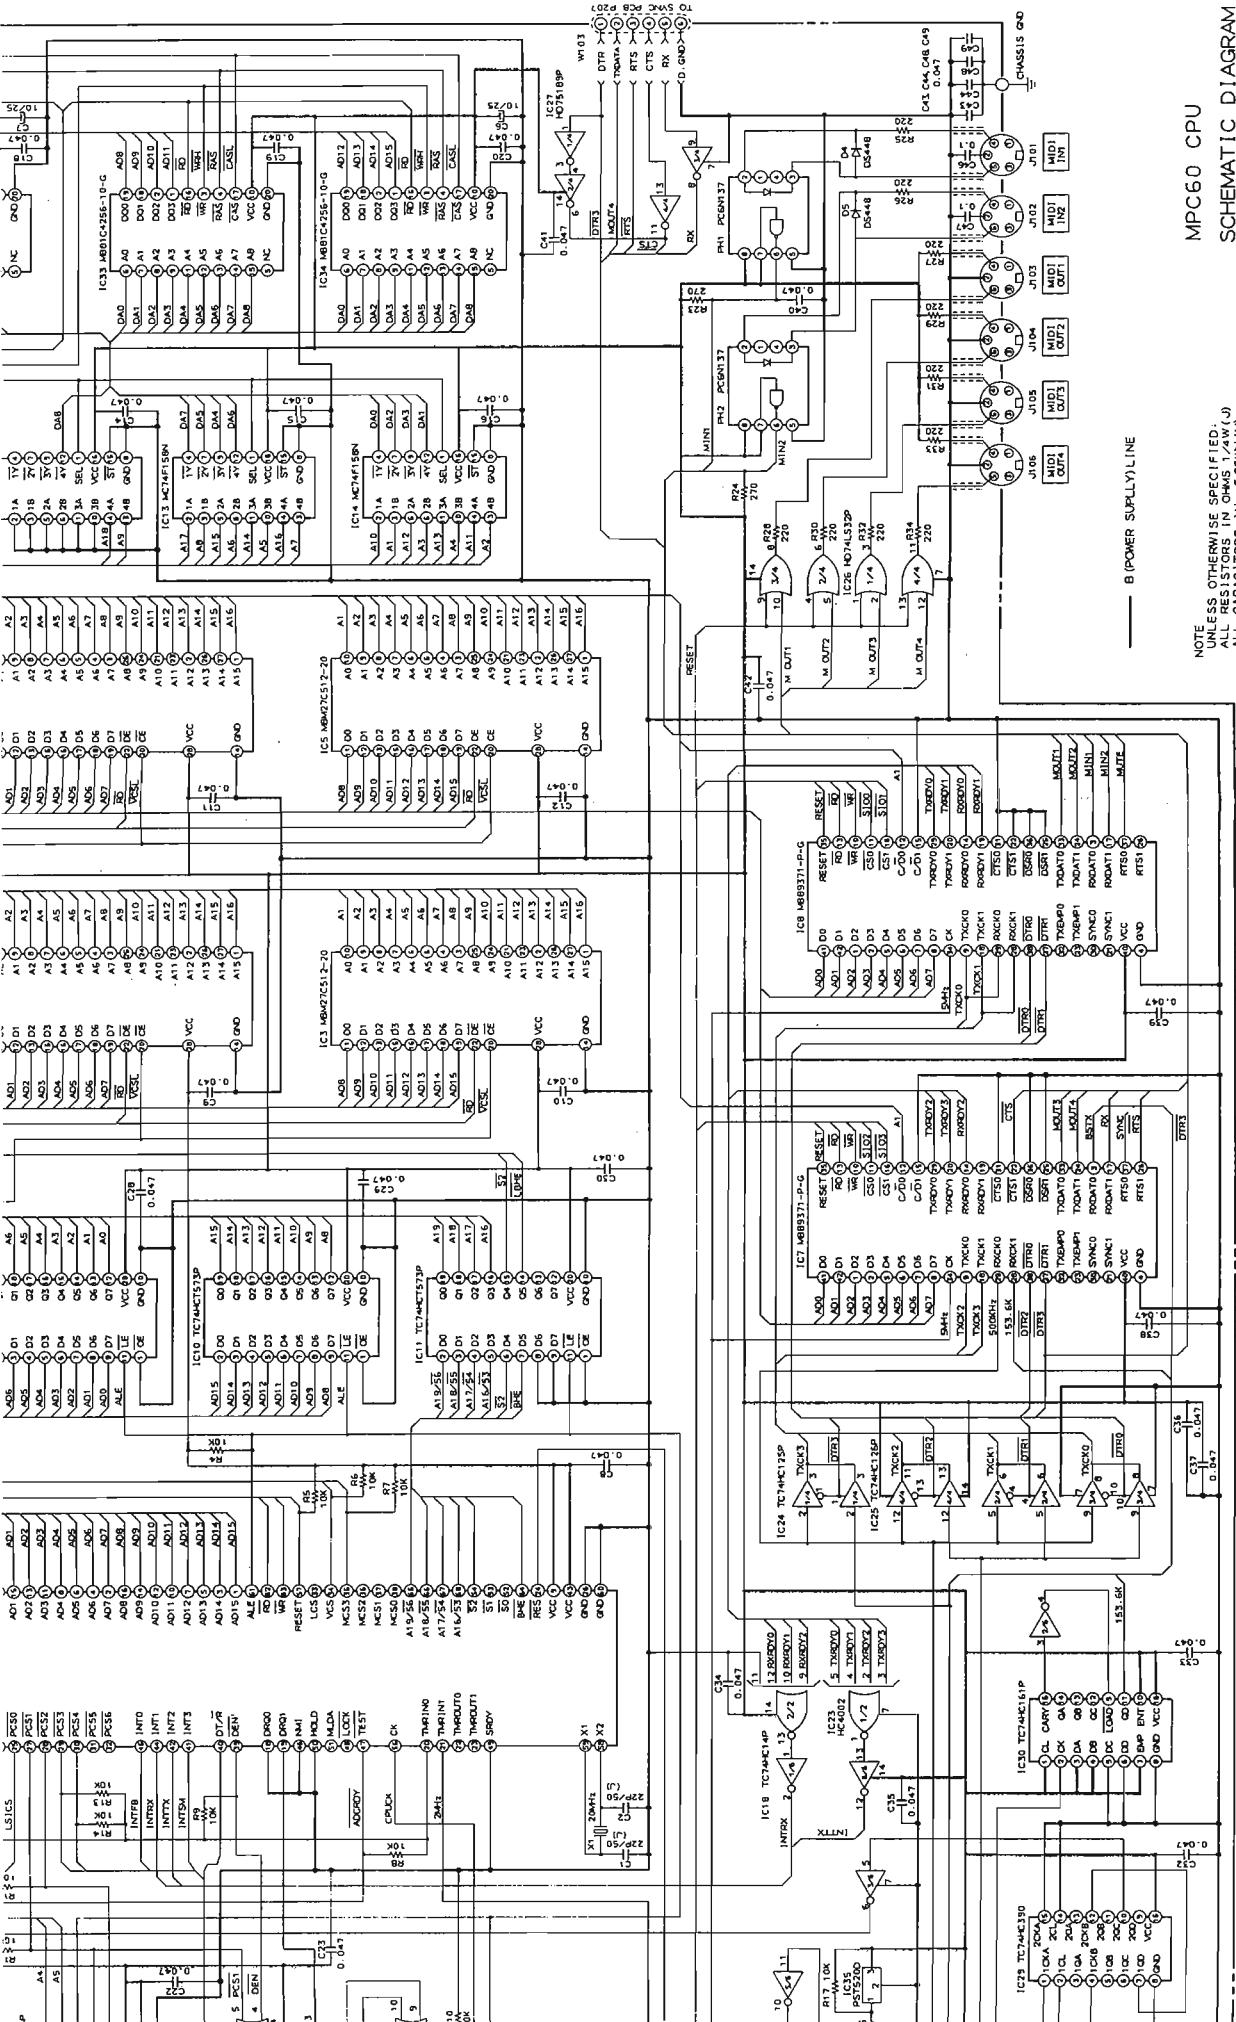

K

J

I

H

G

F

E

C

K

J

I

H

G


F


E


D


C

TO VOICE PCB

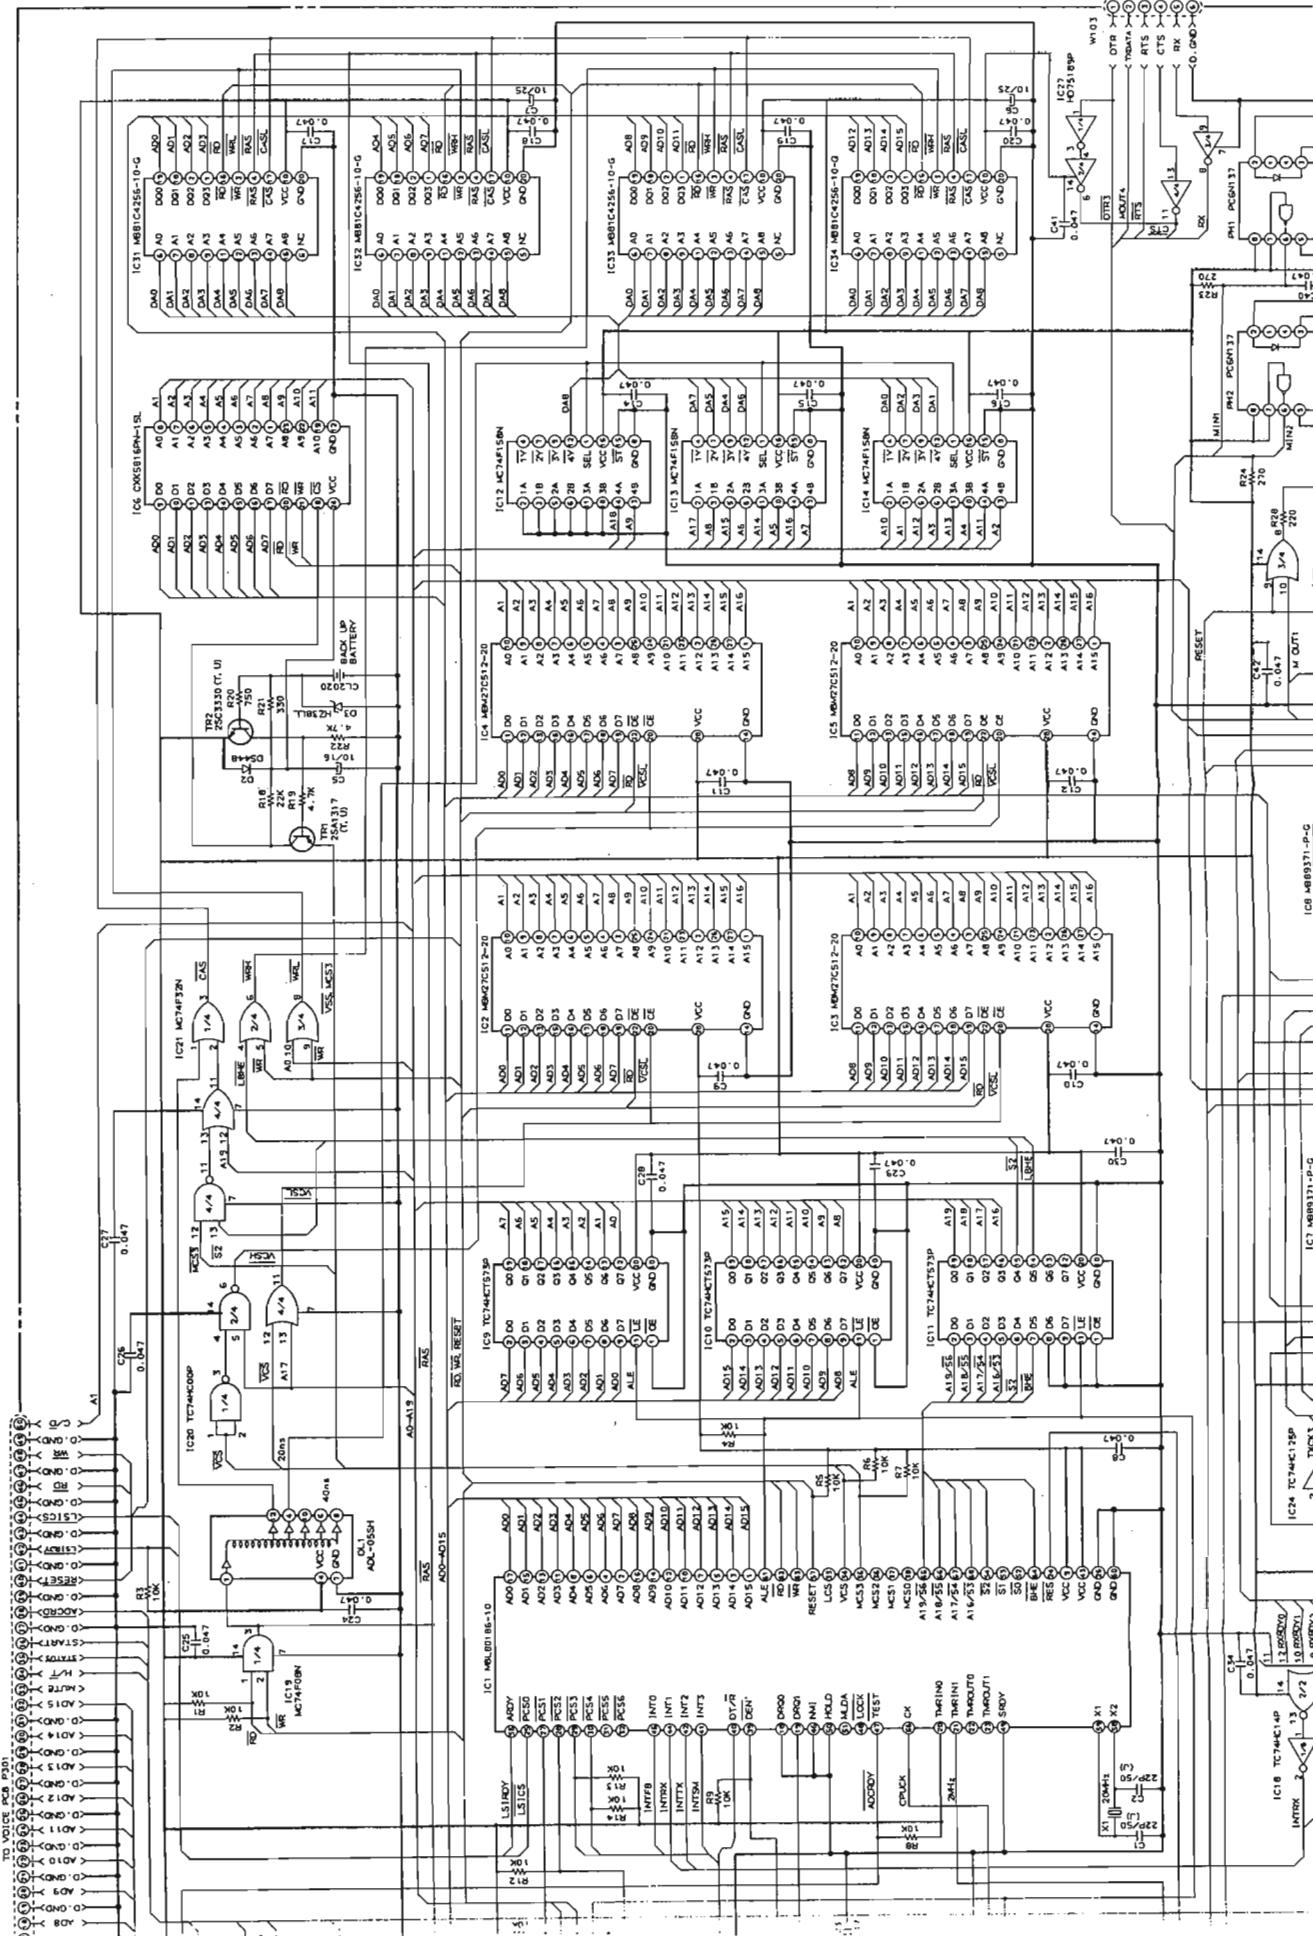

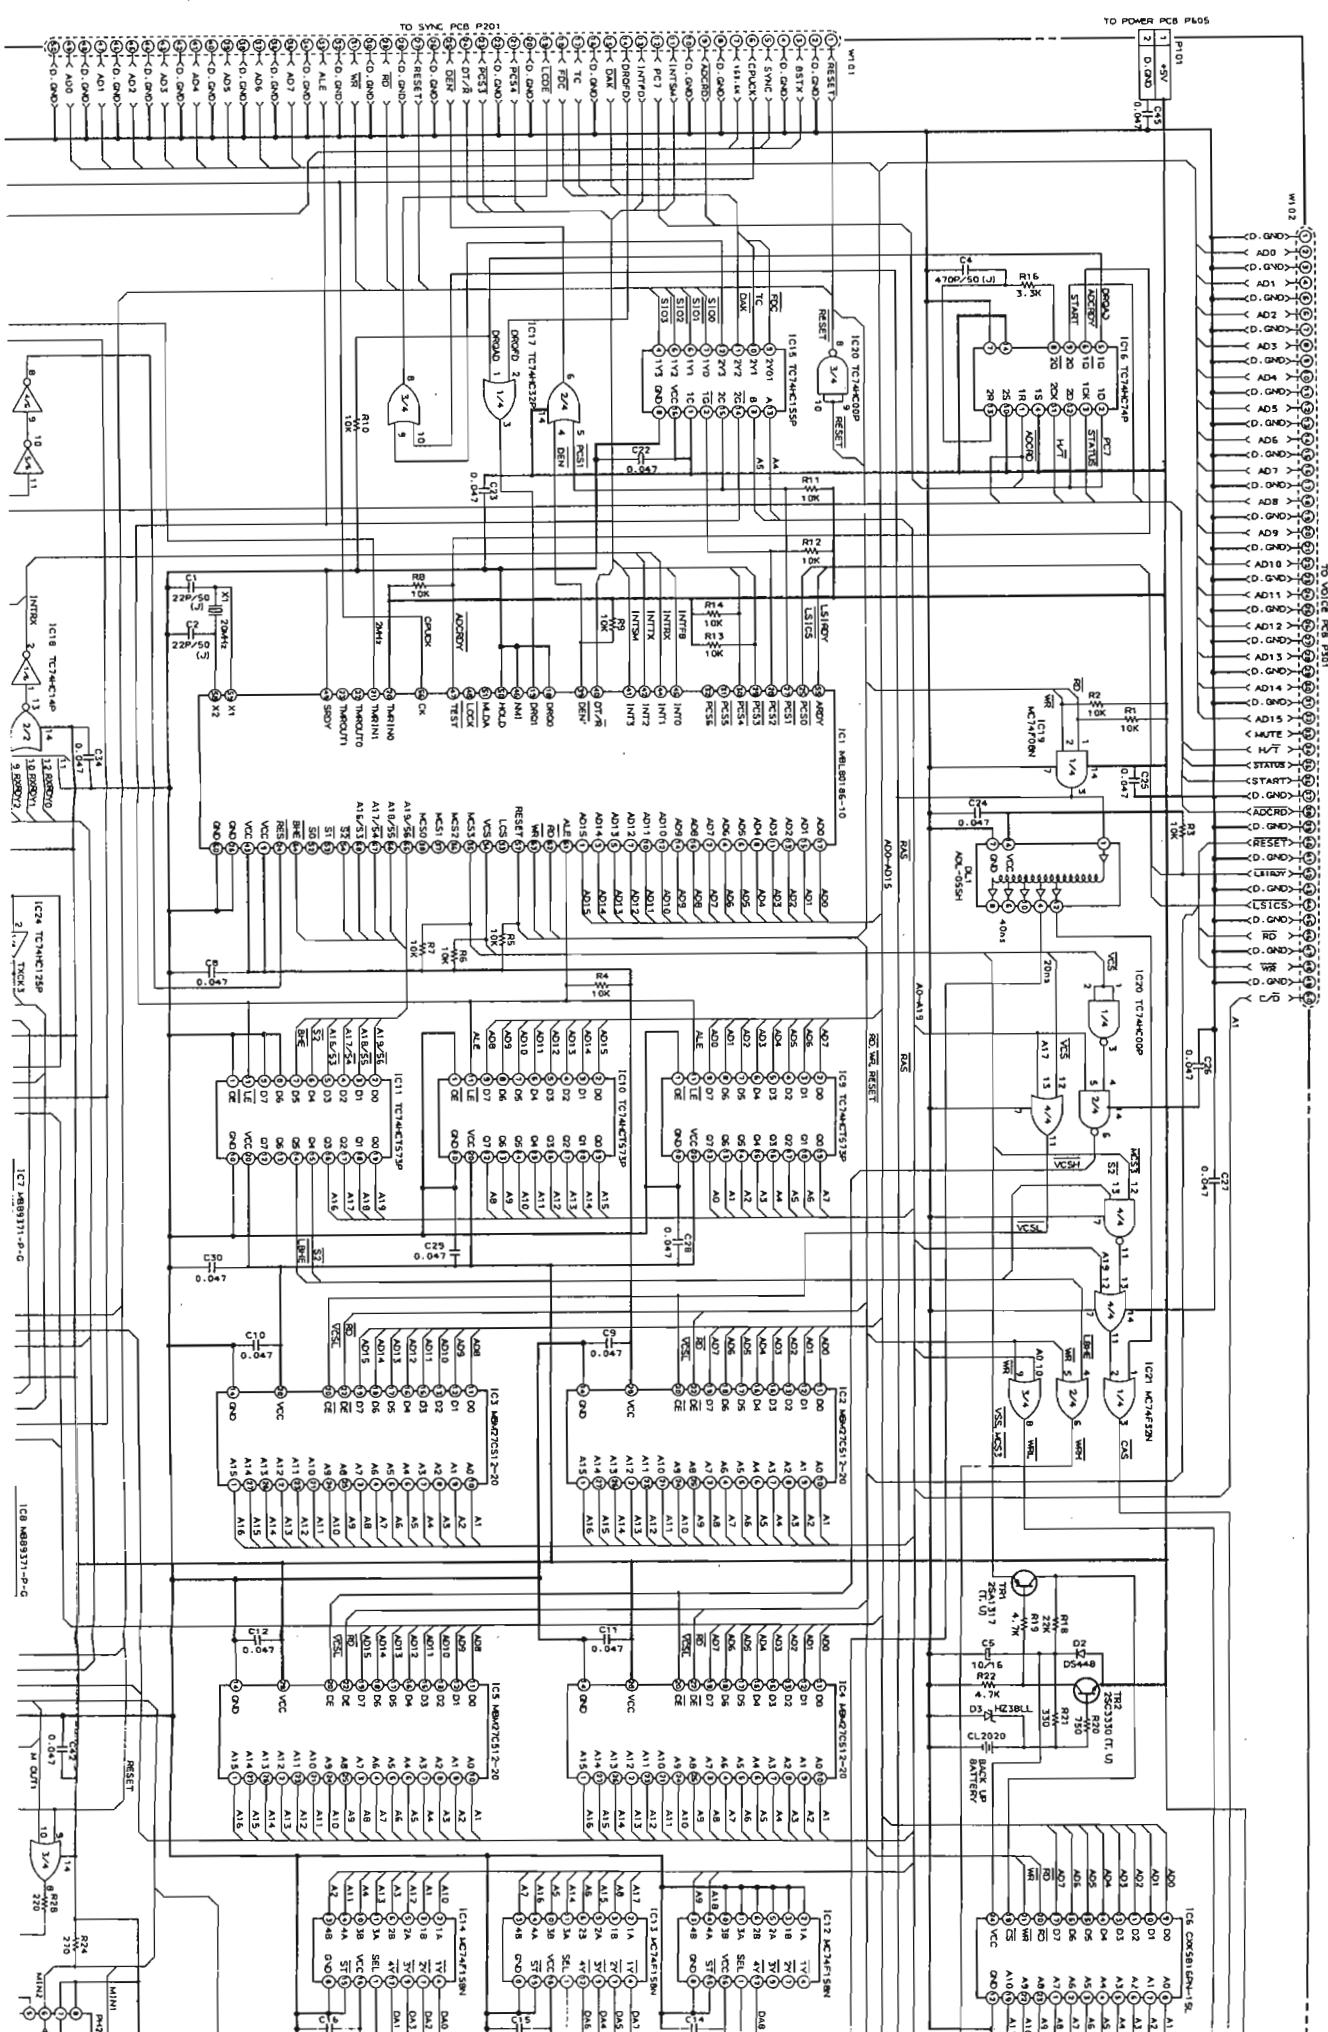

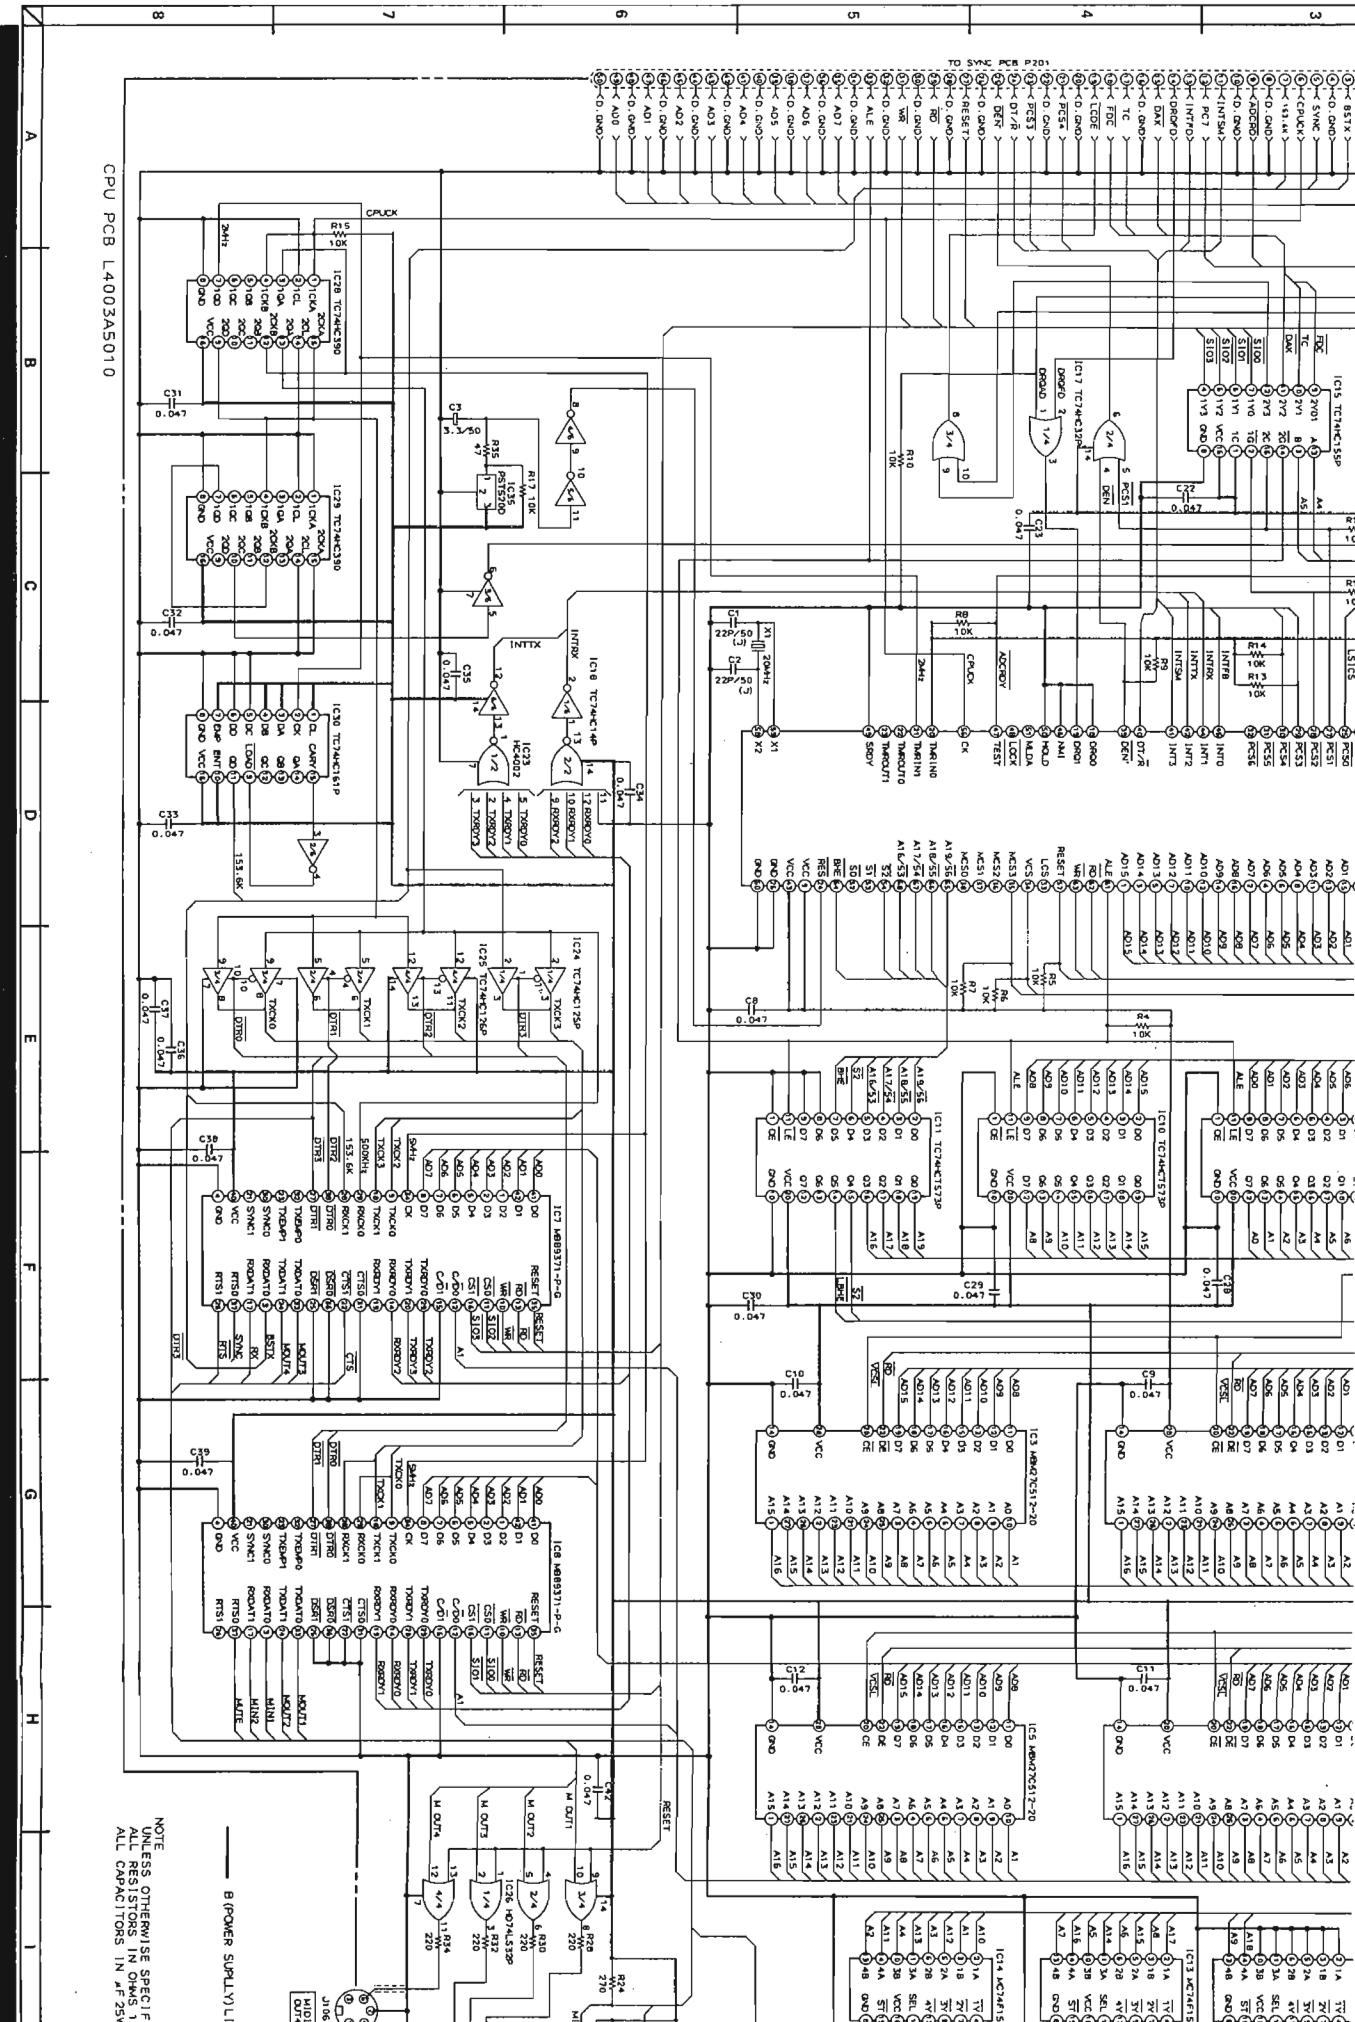

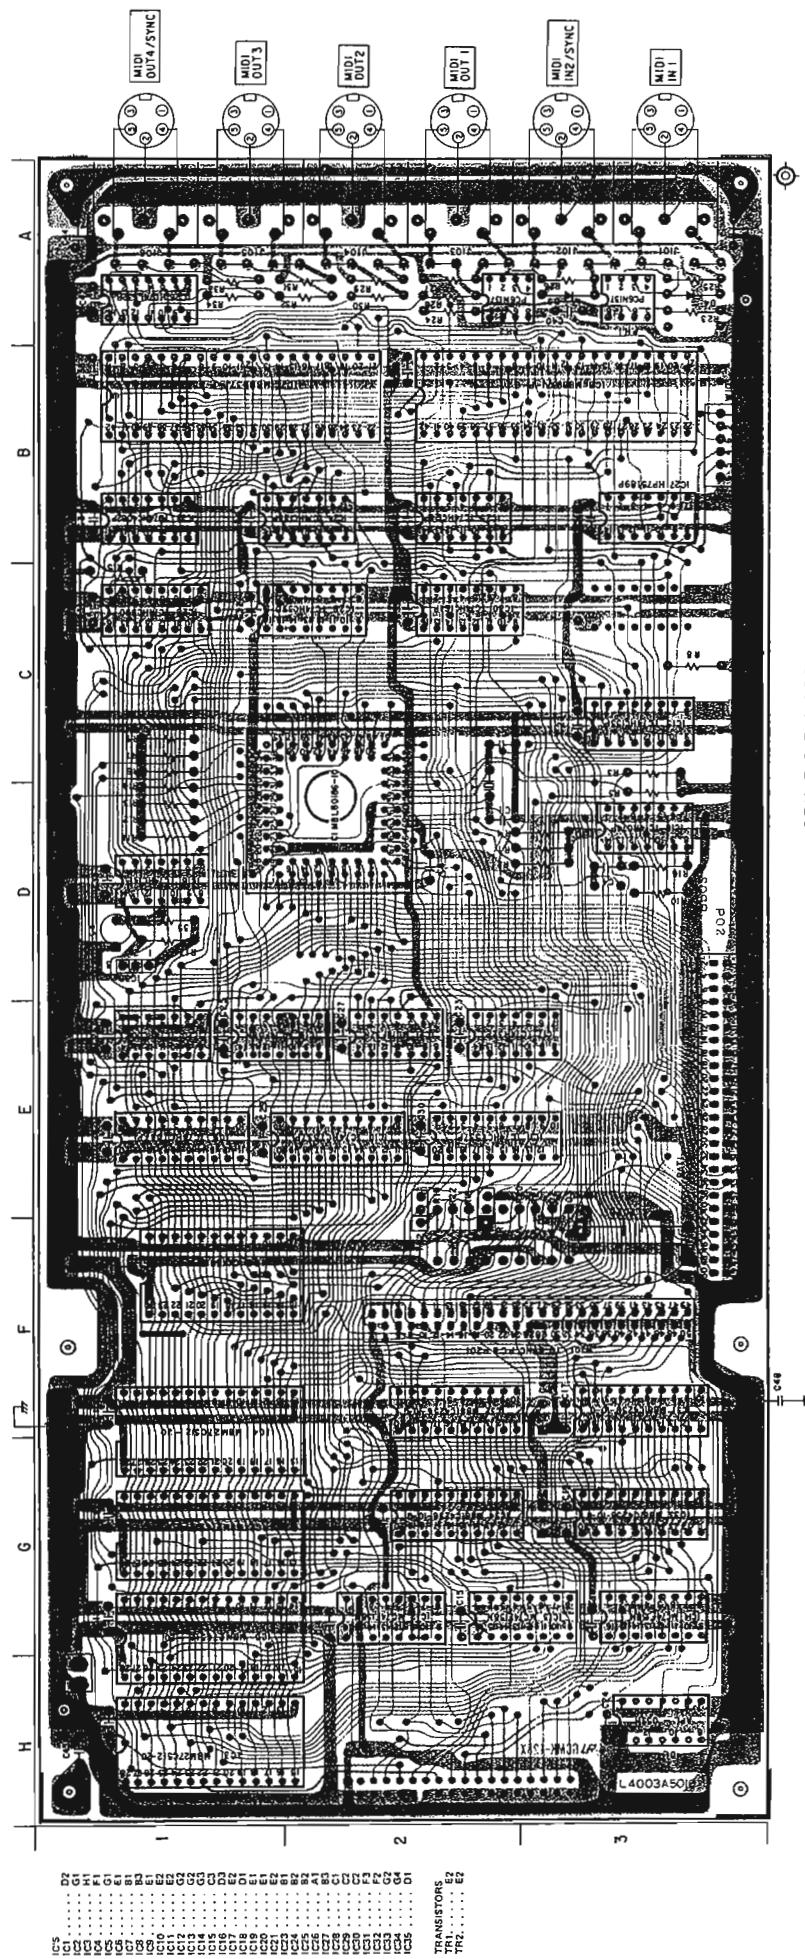

CPU PCB L4003A5010

• • • = NPN TRANSISTOR  
• • • = PNP TRANSISTOR

2SA1317  
2SC3330

IC5

IC1 .. C3

IC2 .. D2

IC3 .. E1

IC4 .. E2

IC5 .. C1

IC6 .. E3

IC7 .. E3

IC8 .. D2

IC9 .. C2

IC10 .. D3

IC11 .. E3

IC12 .. C1

IC13 .. B1

IC14 .. C3

IC15 .. B3

IC16 .. B2

IC17 .. E3

IC18 .. D2

IC19 .. B3

IC20 .. D1

IC21 .. D1

IC22 .. B2

IC23 .. B3

IC24 .. B2

IC25 .. A2

IC26 .. A2


IC27 .. A1

IC28 .. A3

IC29 .. A3

IC30 .. A3


IC31 .. B2

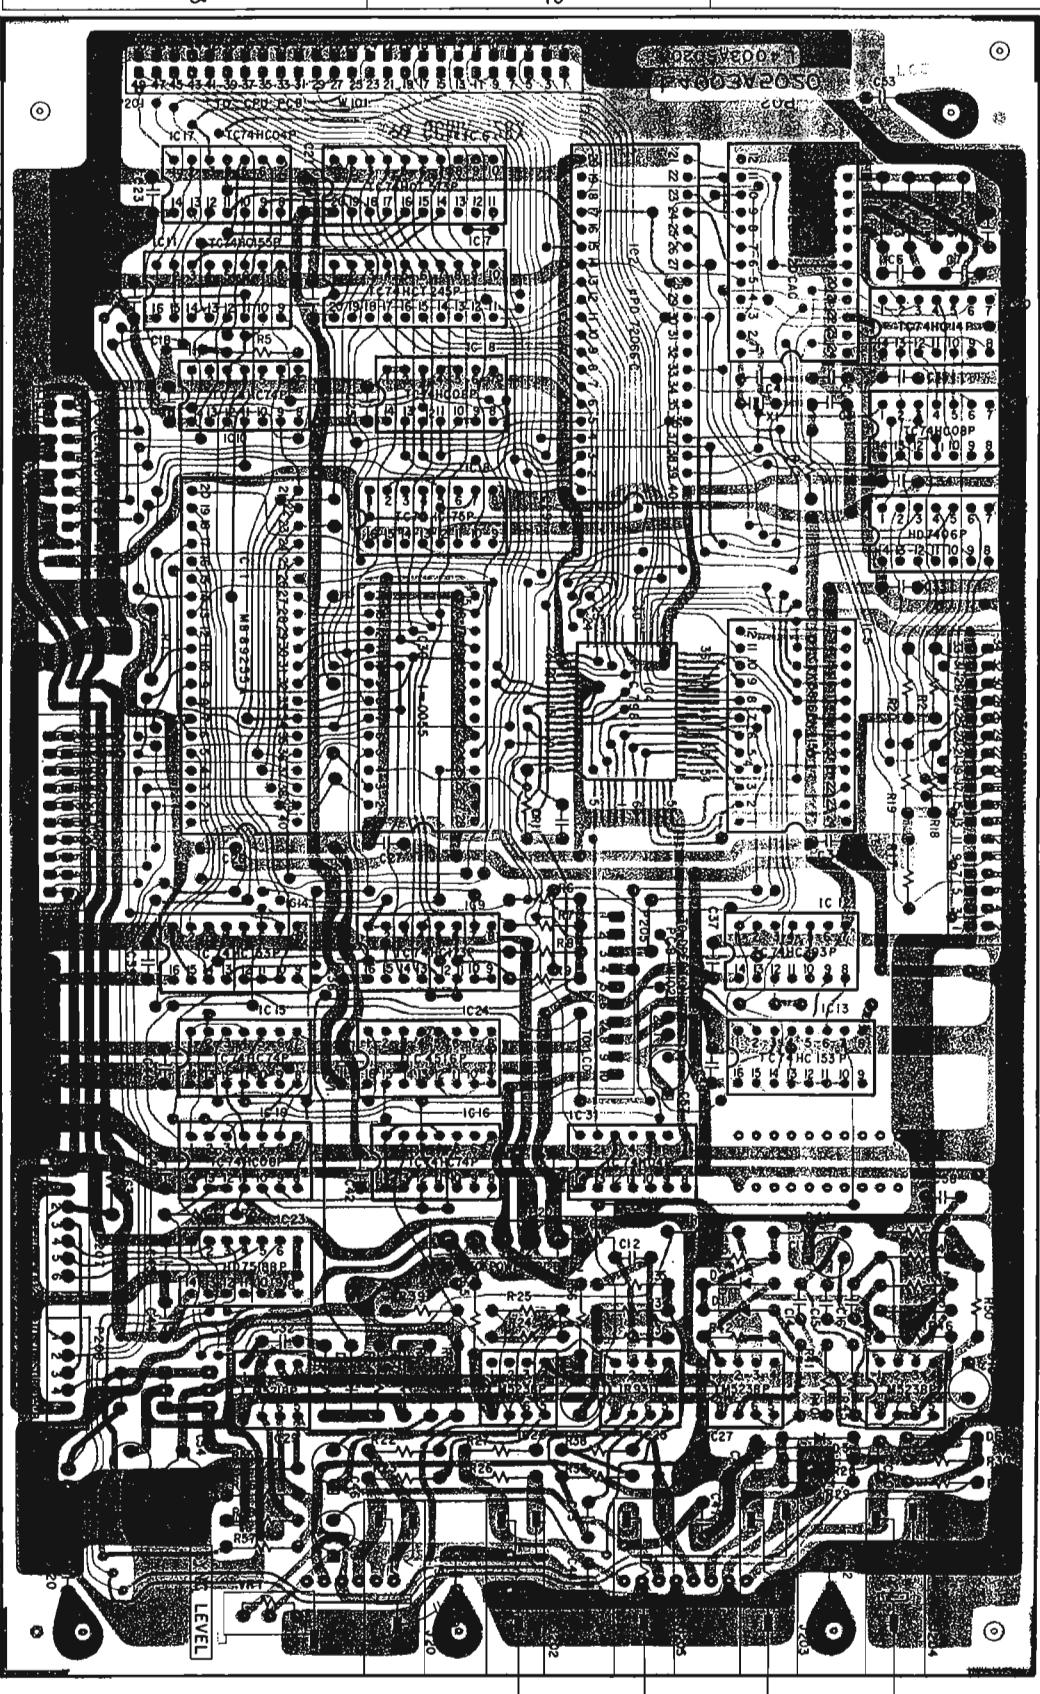

WARNING: Δ INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY. REPLACE ONLY CRITICAL COMPONENTS ONLY. ☺ MANUFACTURER'S RECOMMENDED PARTS.

AVERTISSEMENT: Δ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DÉGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.


SYNC PCB L4003A5020

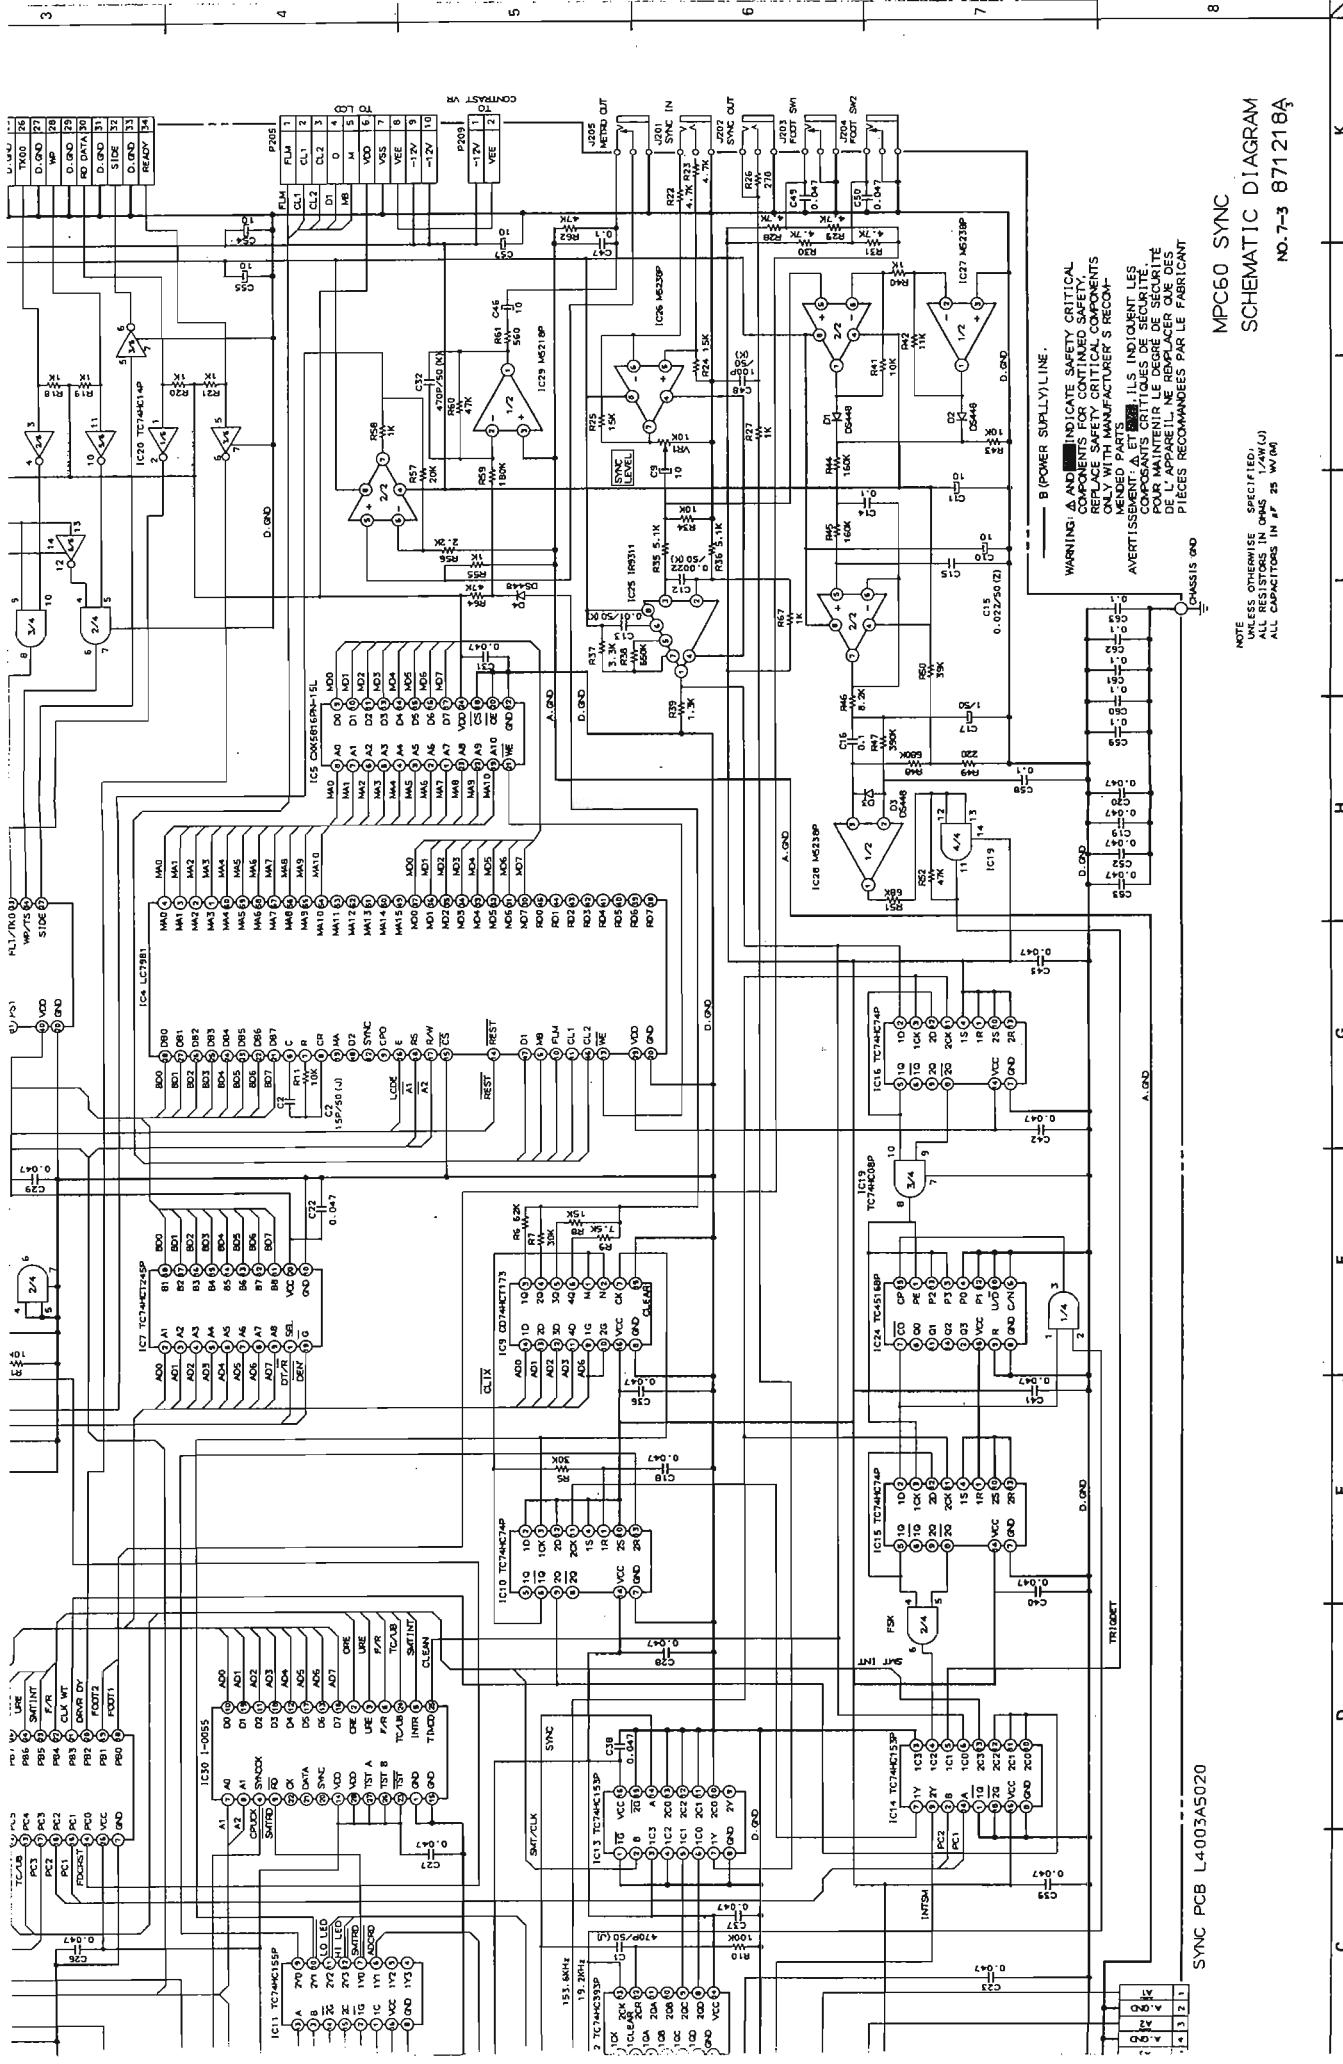



MPC60 SYNC  
SCHEMATIC DIAGRAM  
NO. 7-3 871218A

NOTE: UNLESS OTHERWISE SPECIFIED,  
ALL RESISTORS IN OHMS 1/4W (1)  
ALL CAPACITORS IN  $\mu$ F 25 V (6)

WARNING: **A** AND **B** INDICATE SAFETY CRITICAL  
COMPONENTS FOR CONTINUED OPERATION.  
REPLACE SAFETY CRITICAL COMPONENTS  
ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.  
AVERTISSEMENT: **A** ET **B** SONT INDICATIFS  
LES COMPOSANTS CRITIQUES POUR LA SÉCURITÉ  
DU SÉGMENT. NE PAS remplacer ces composants par des  
PIÈCES recommandées par le fabricant.

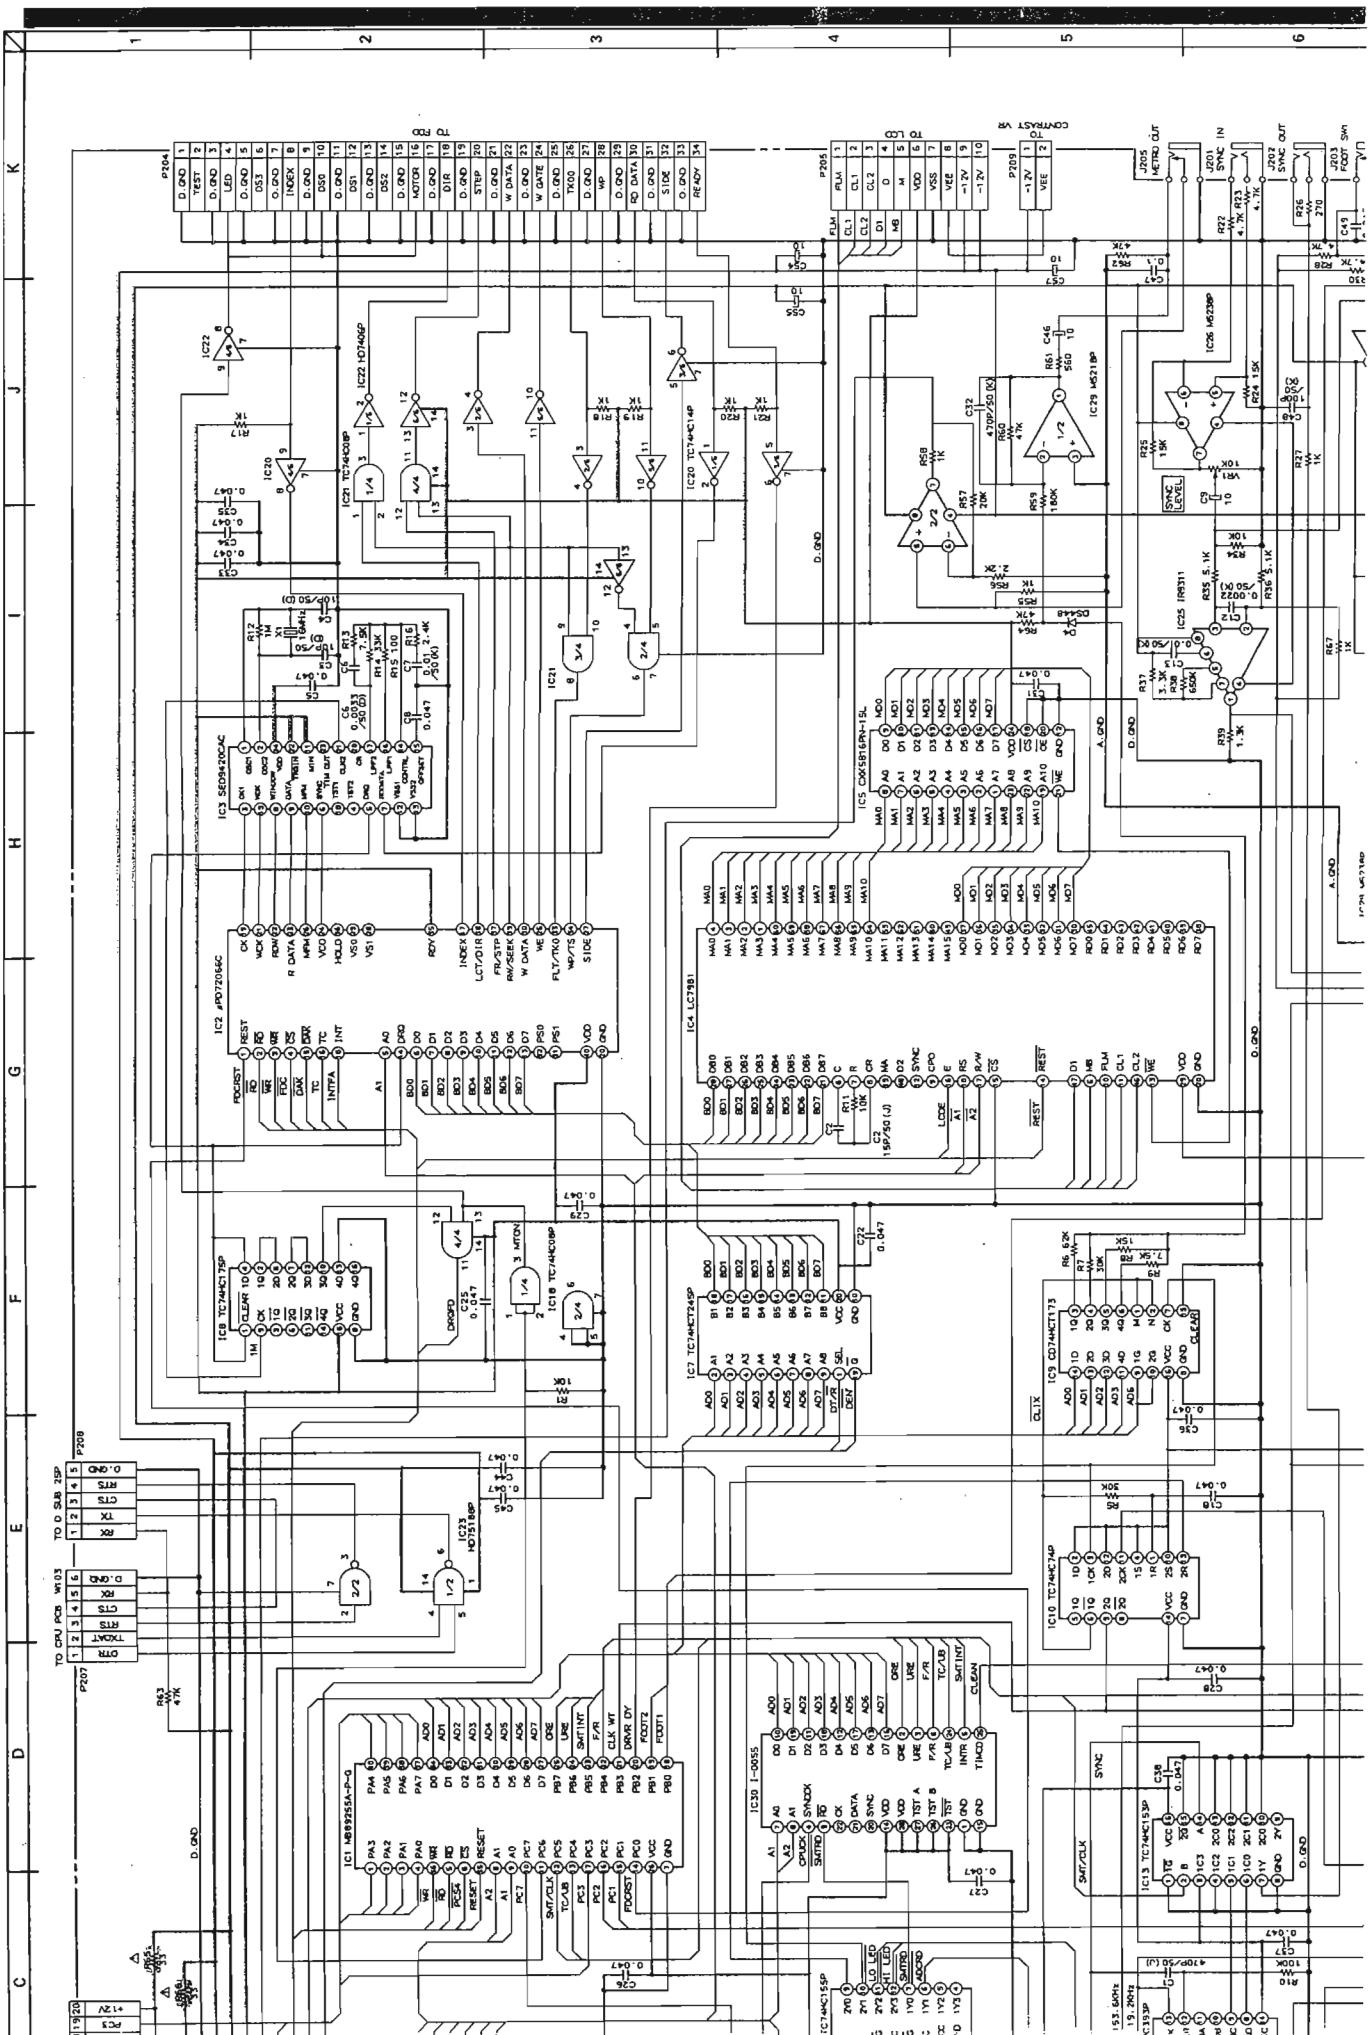

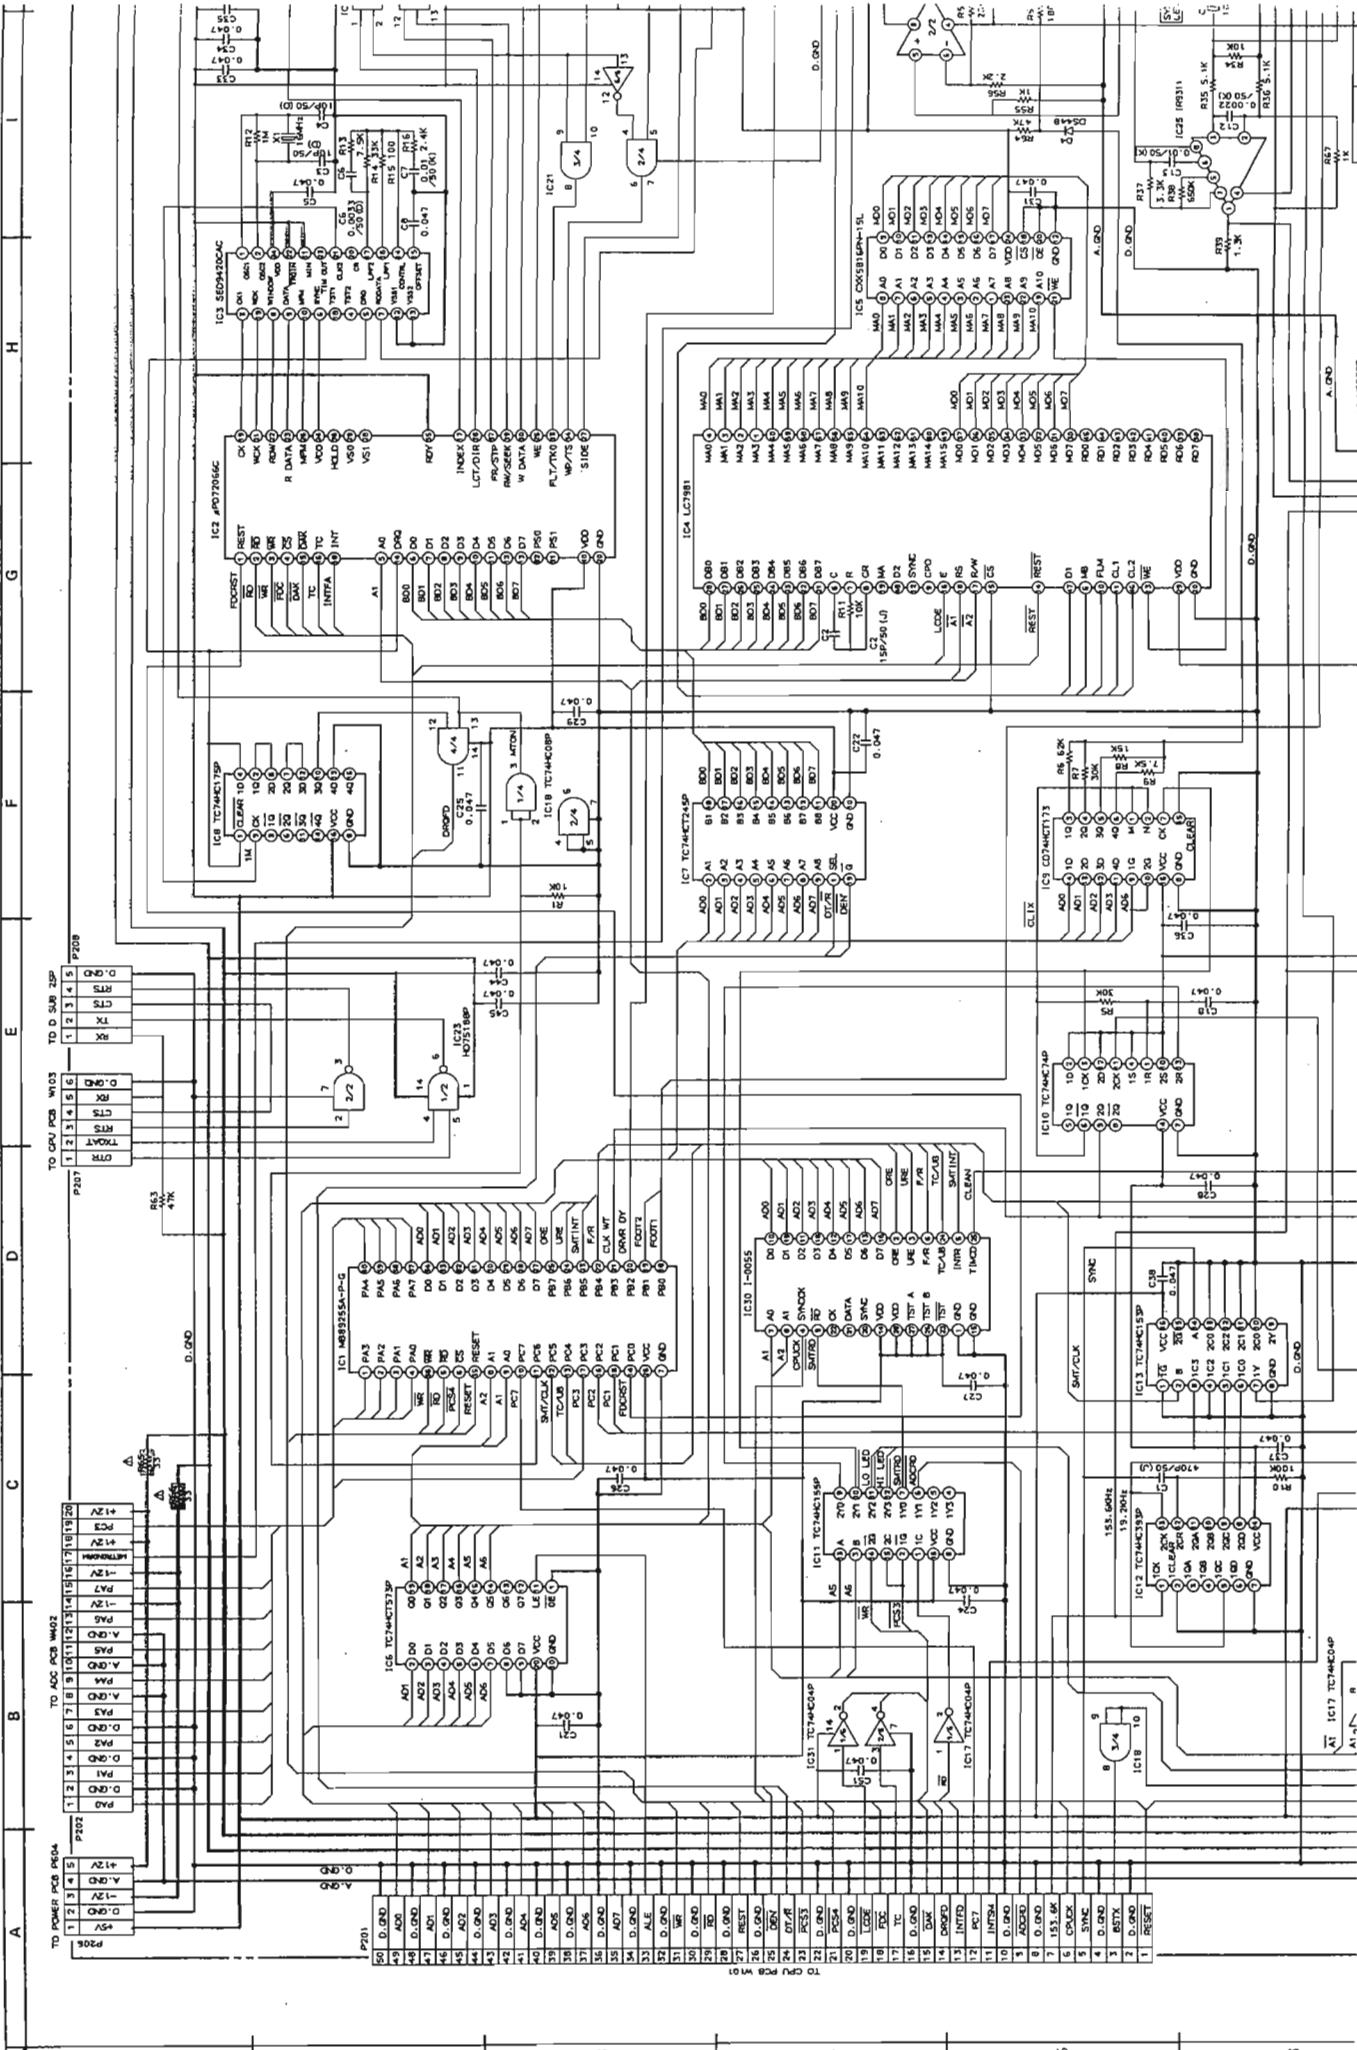

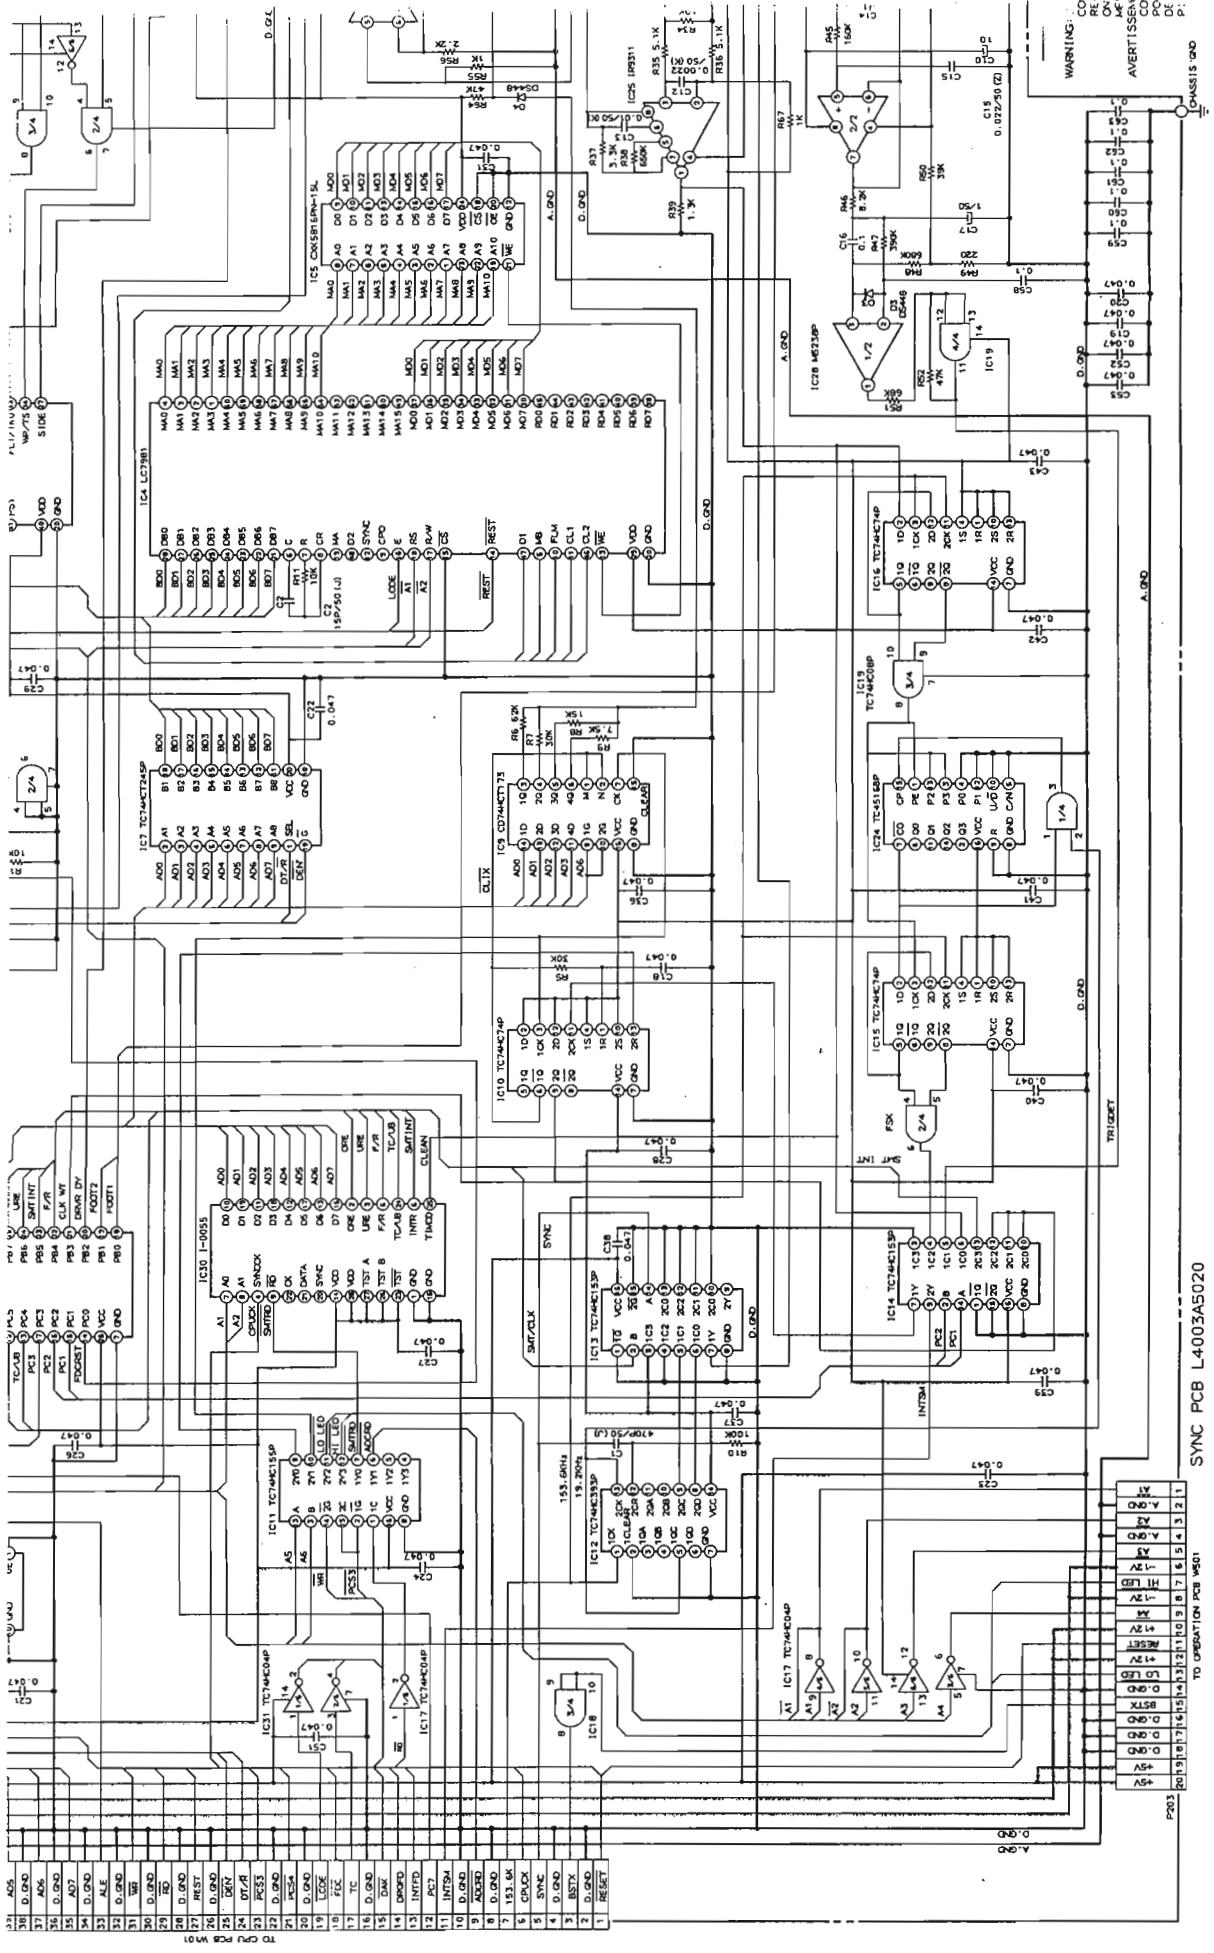



SYNC PCB L4003A5020


TO OPERATION PCB M501


NOTE:  
UNLESS OTHERWISE  
STATED,  
ALL RESISTORS IN OHMS  
AND CAPACITORS IN  $\mu$ F

AVERTISSEMENT:  
CO  
BE  
ON  
MF  
CO  
PO  
DC  
P:

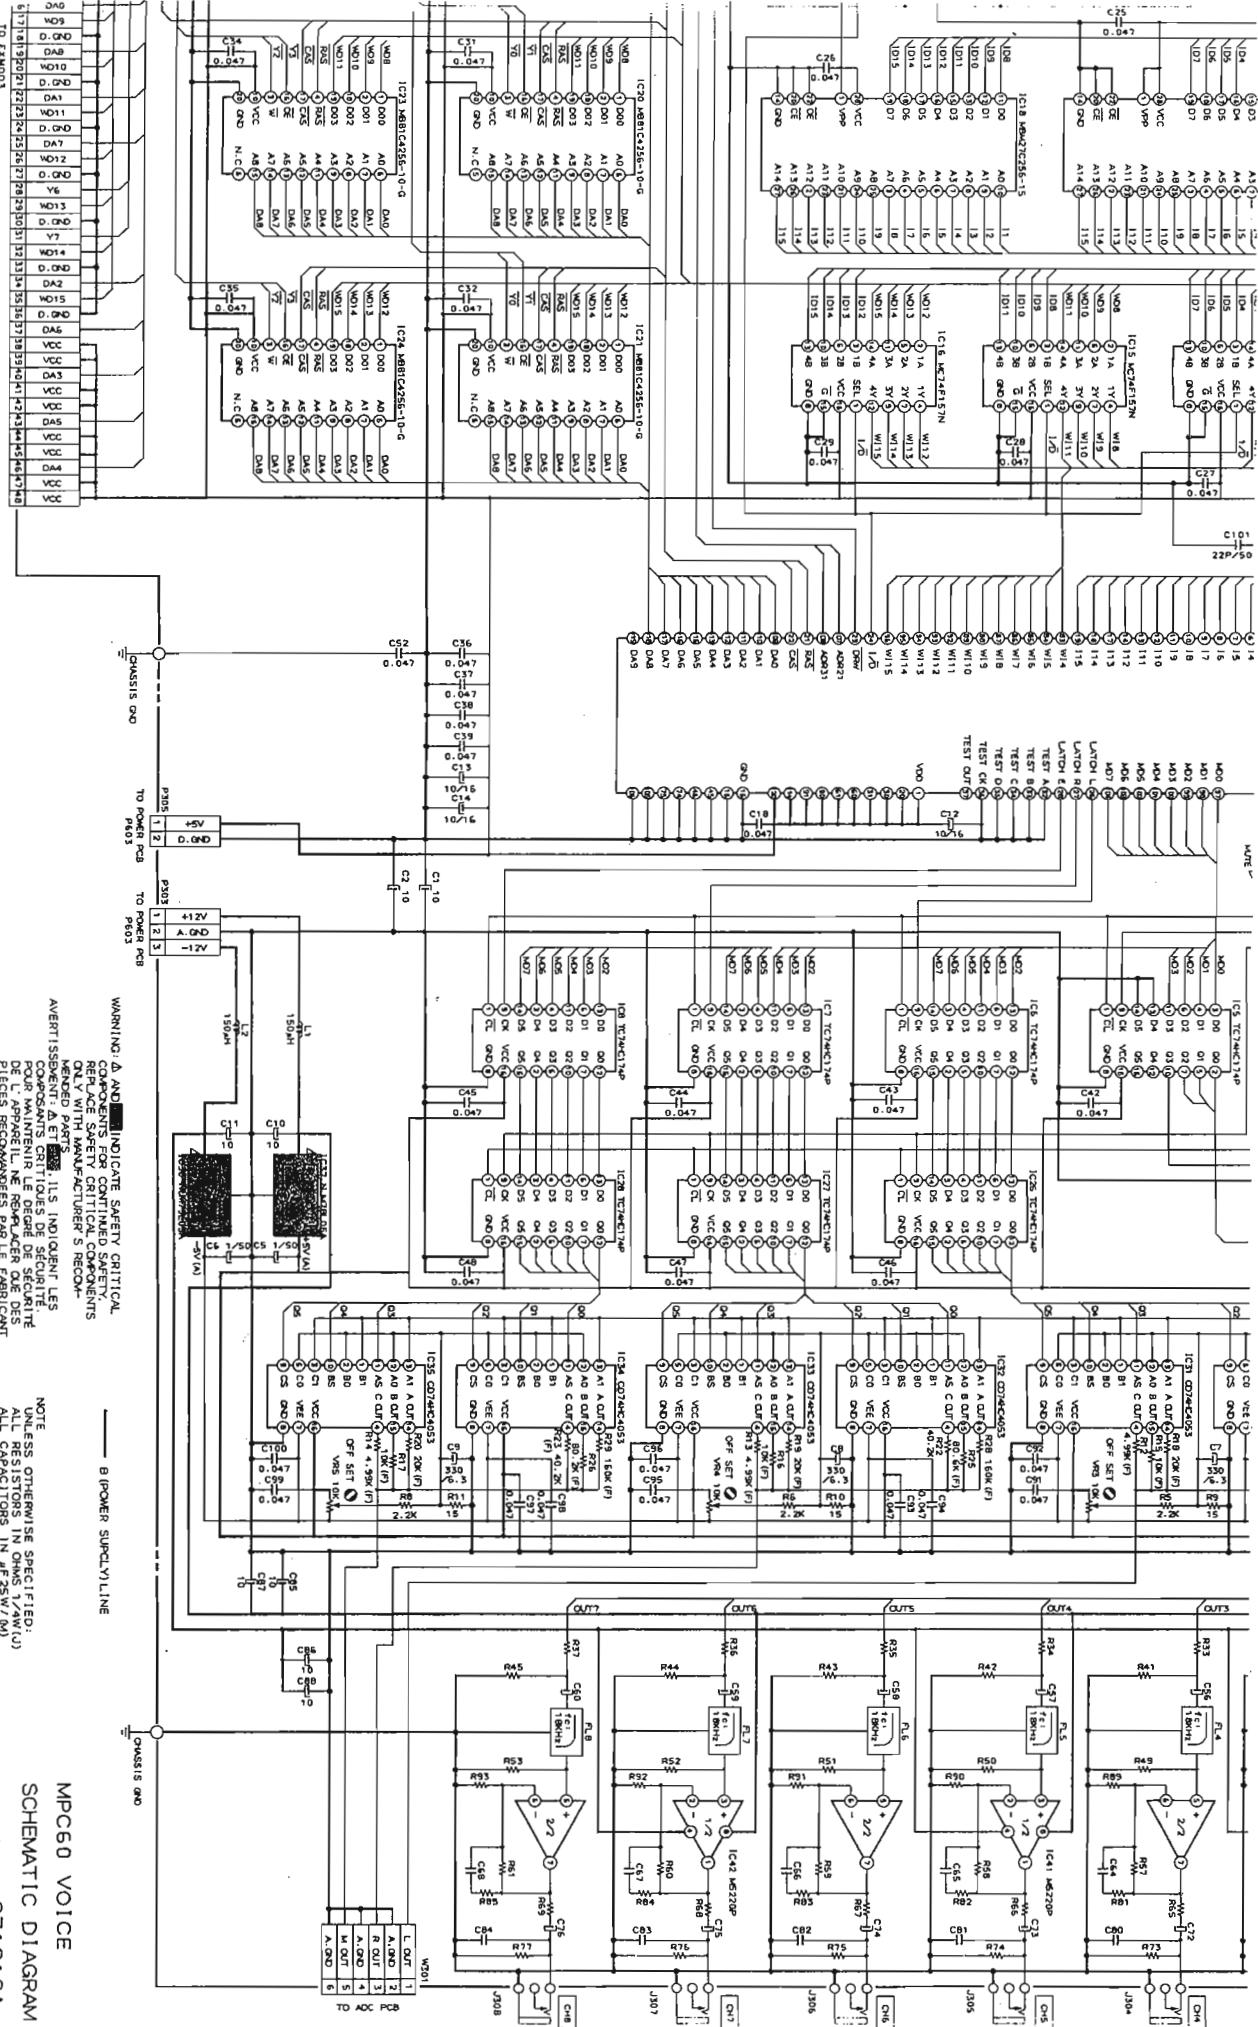

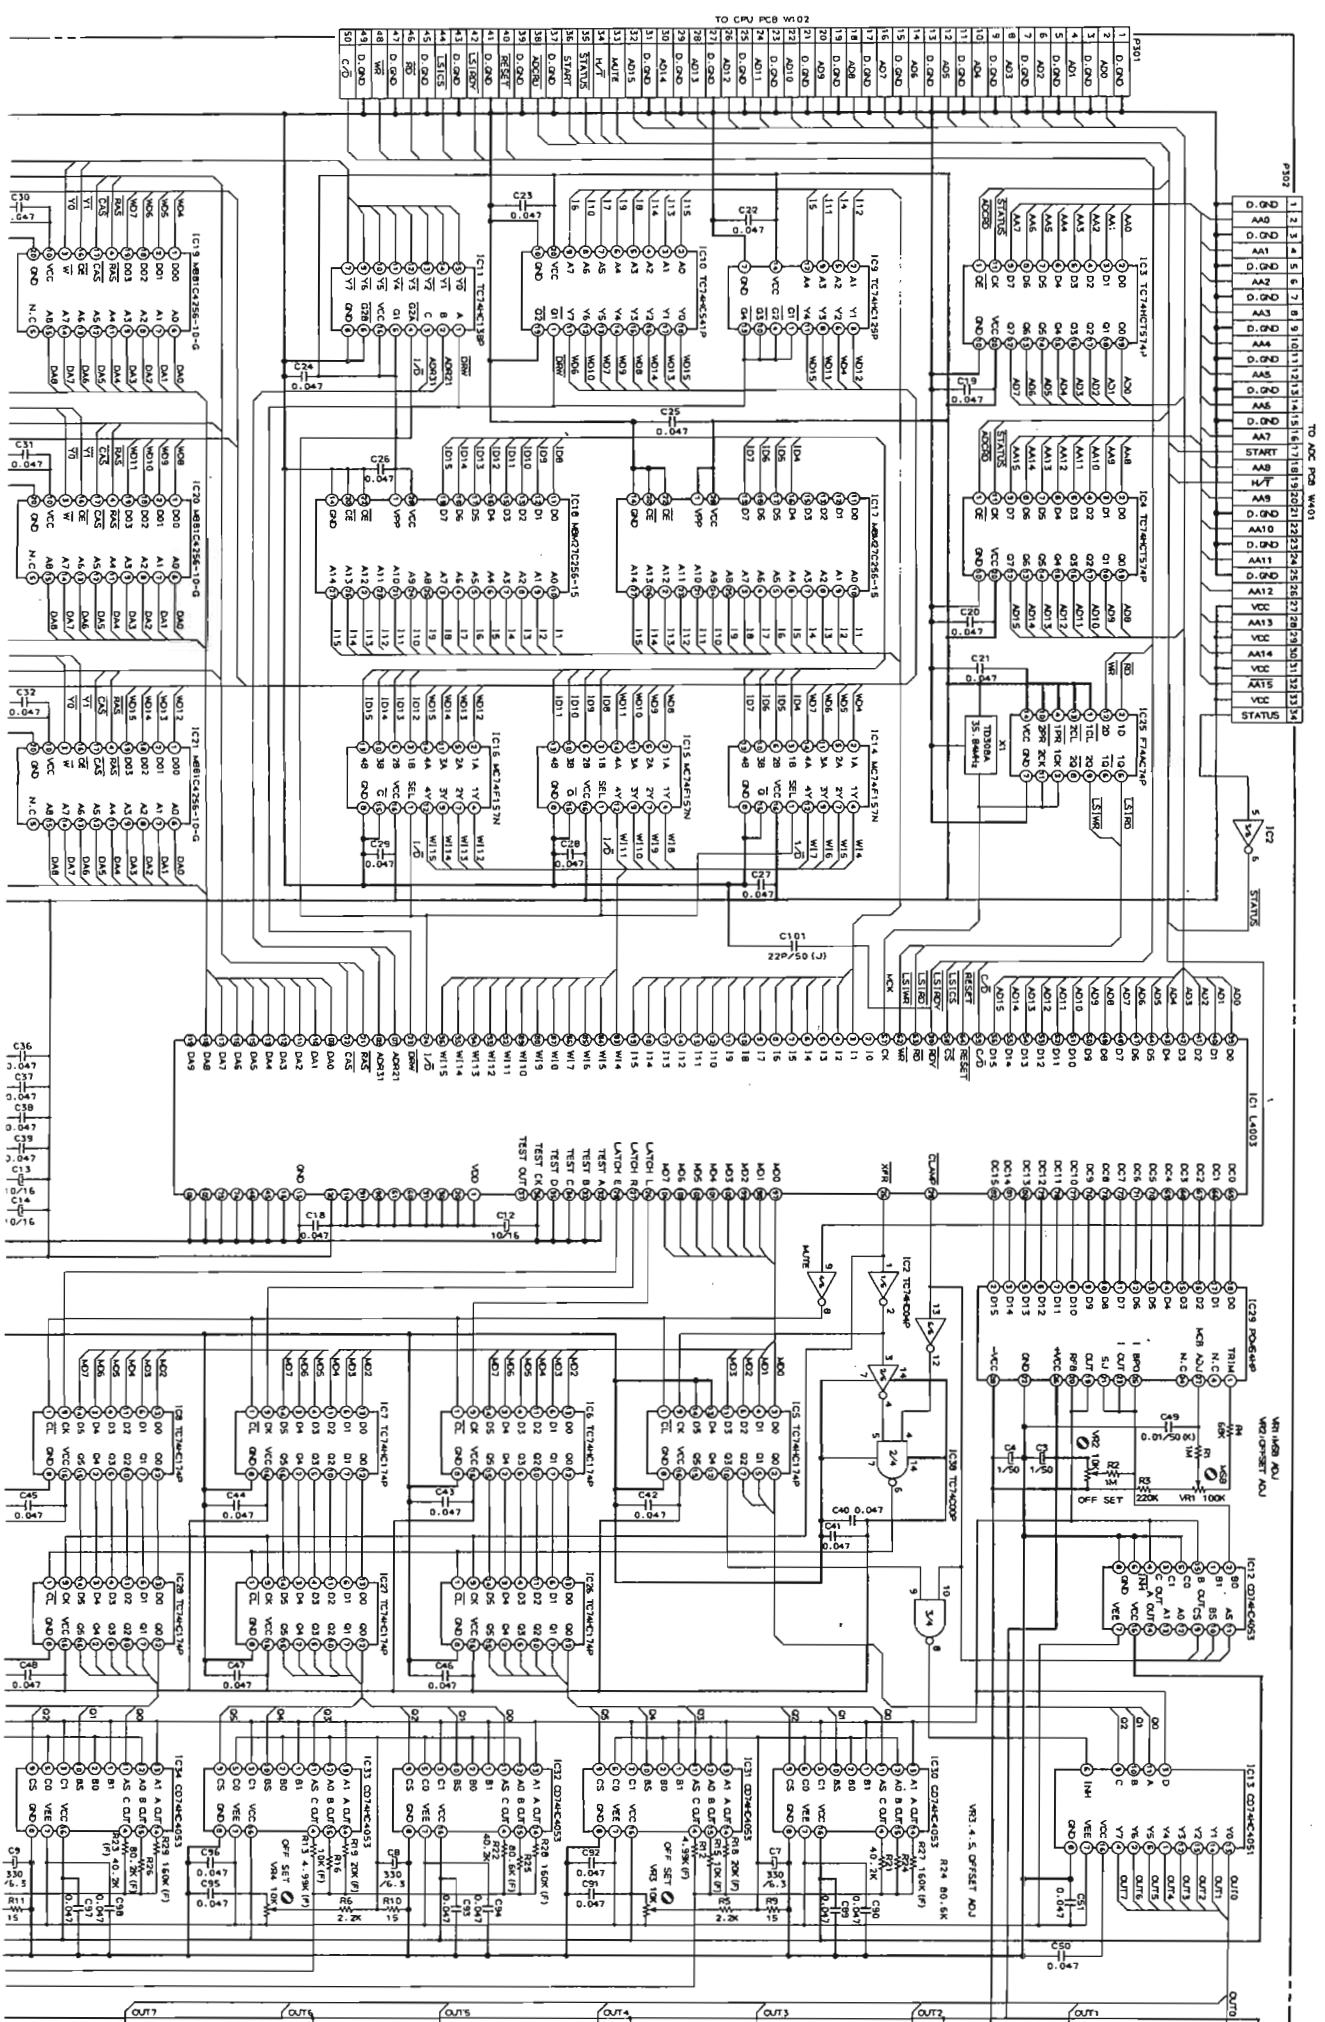

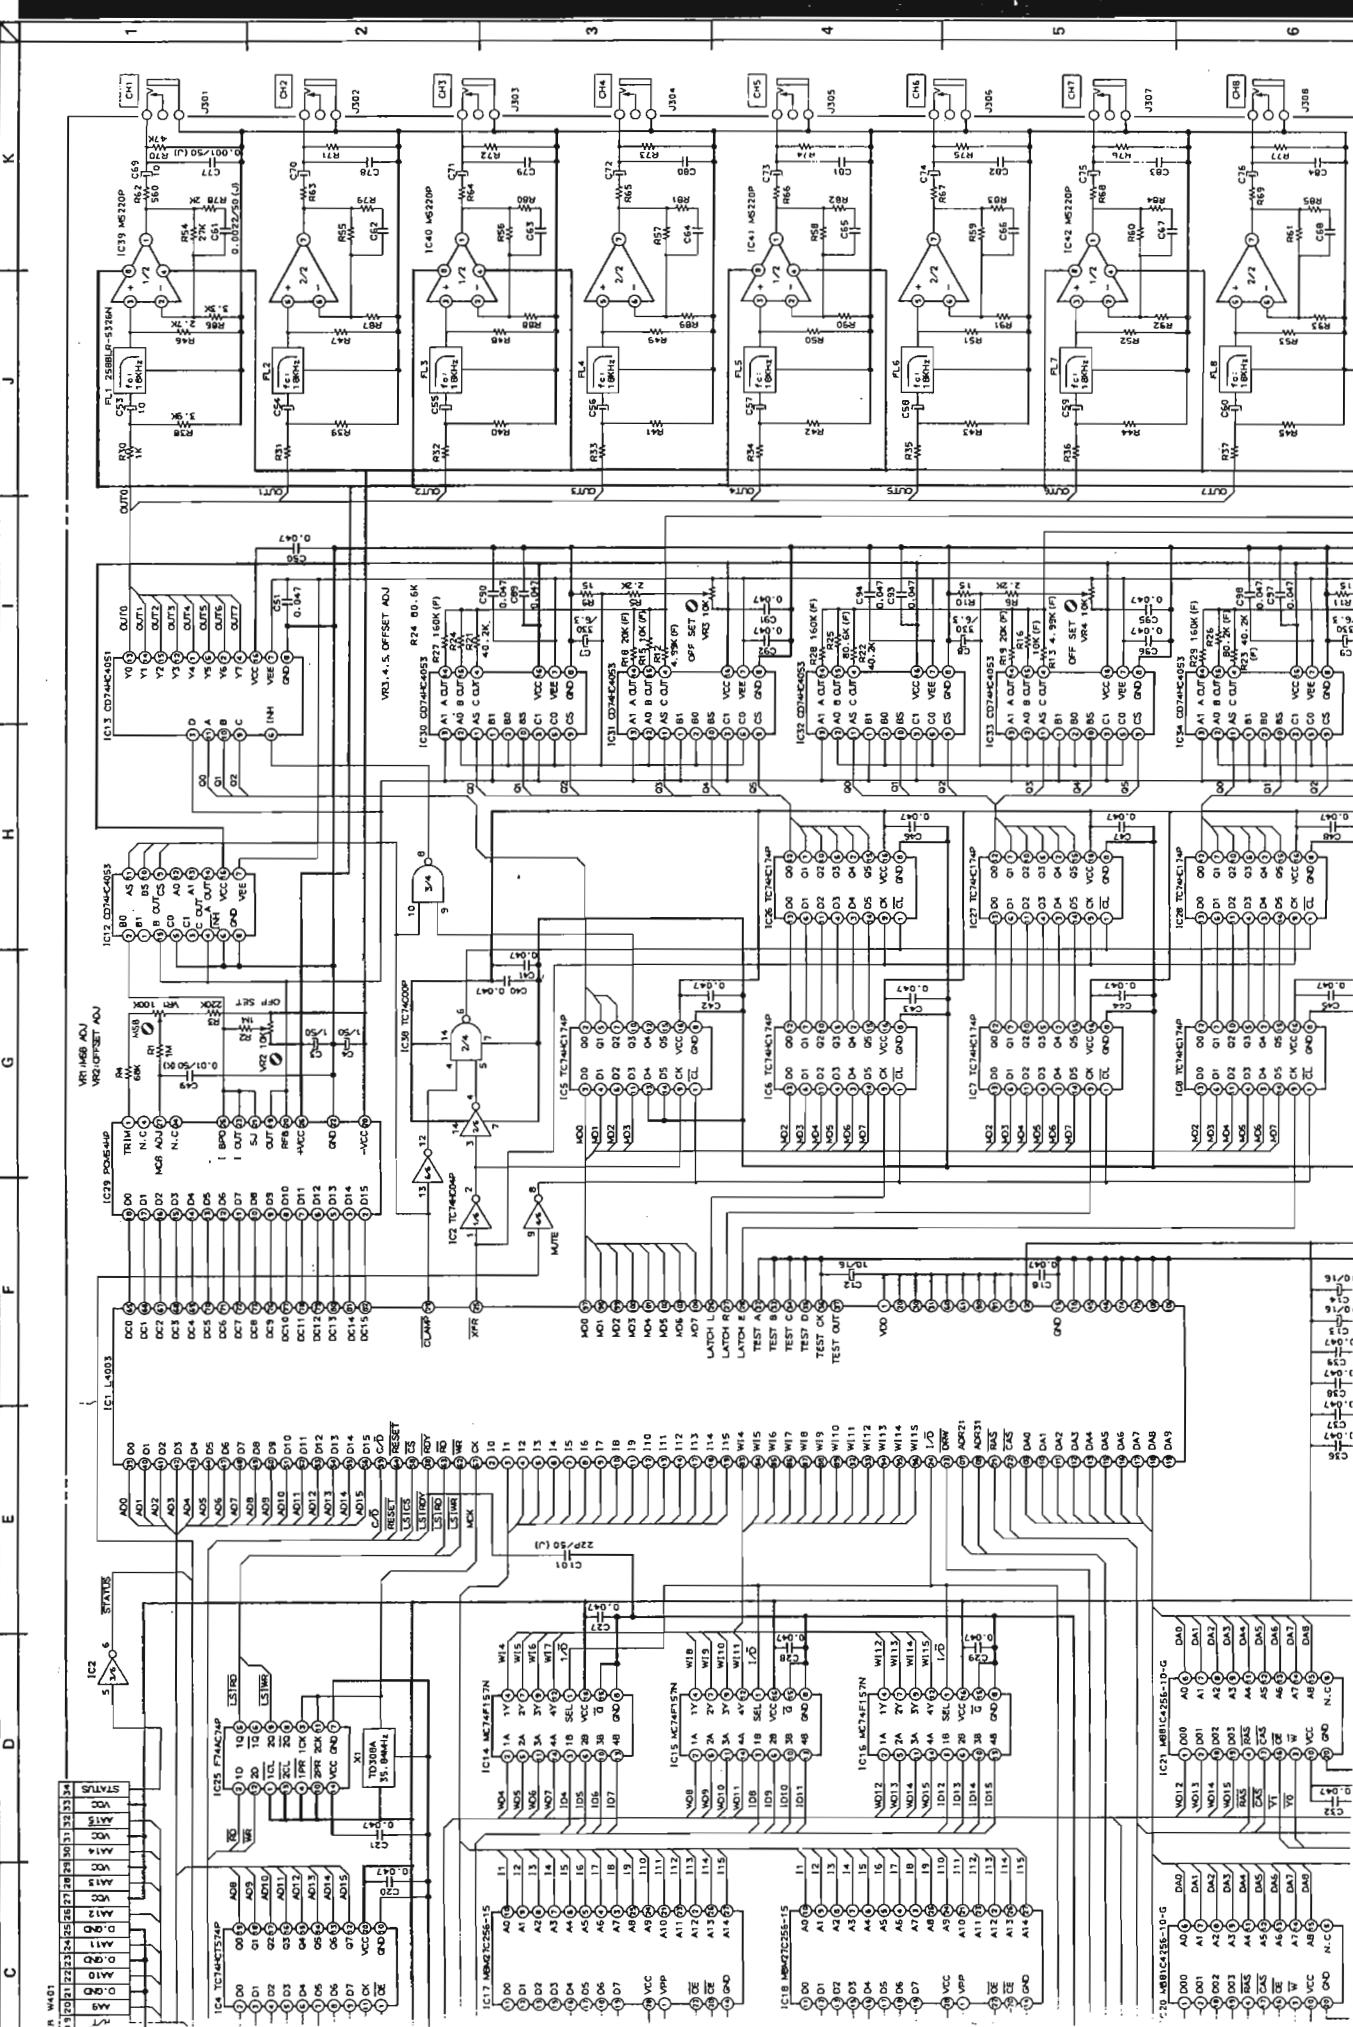

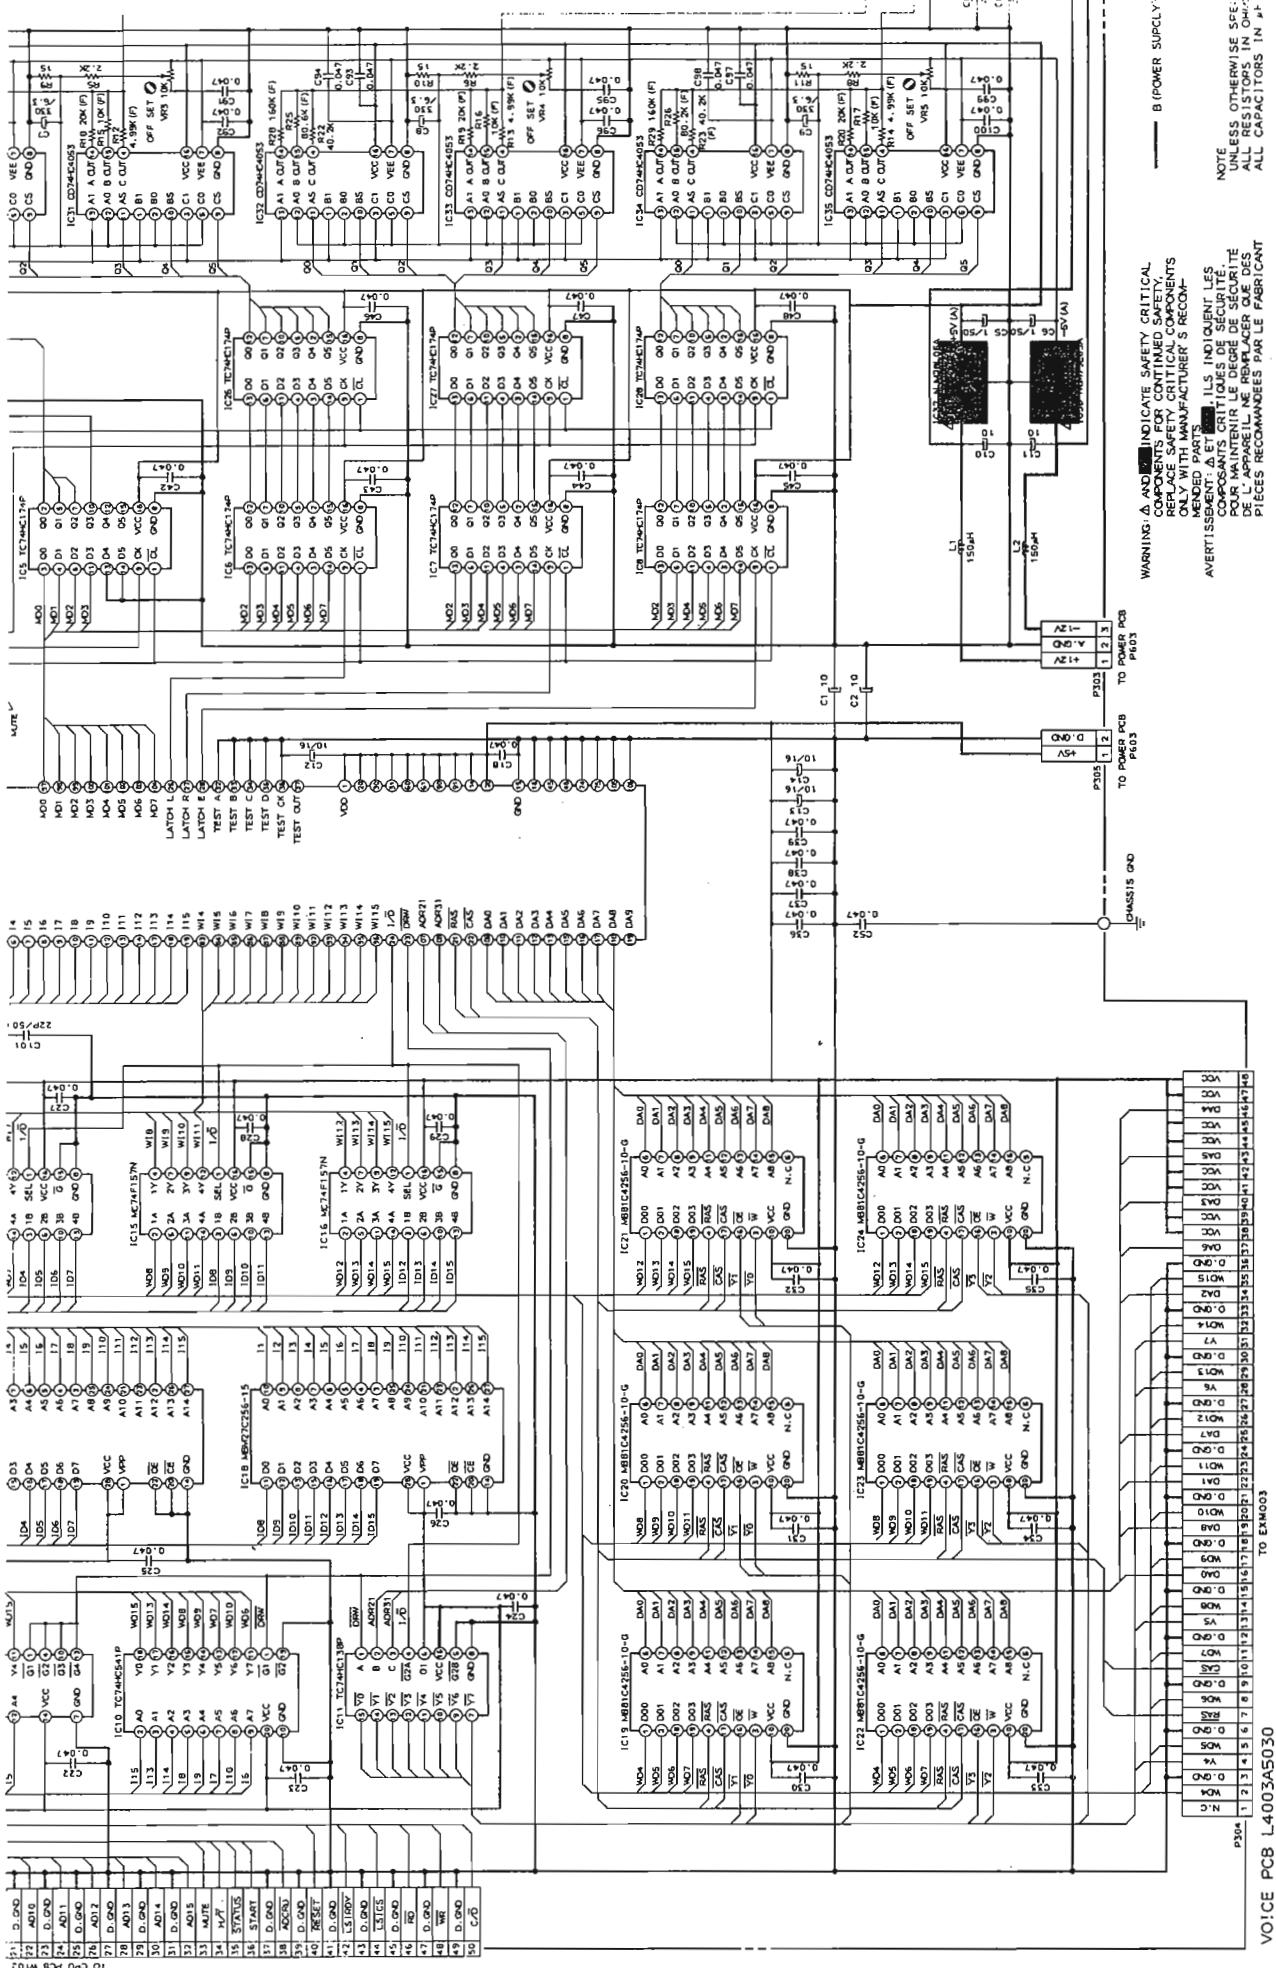

VIOICE PCB L4002A5030

TO EXNO33

8

3

4

5

6

7

H

G

F


E

D

C

B

A

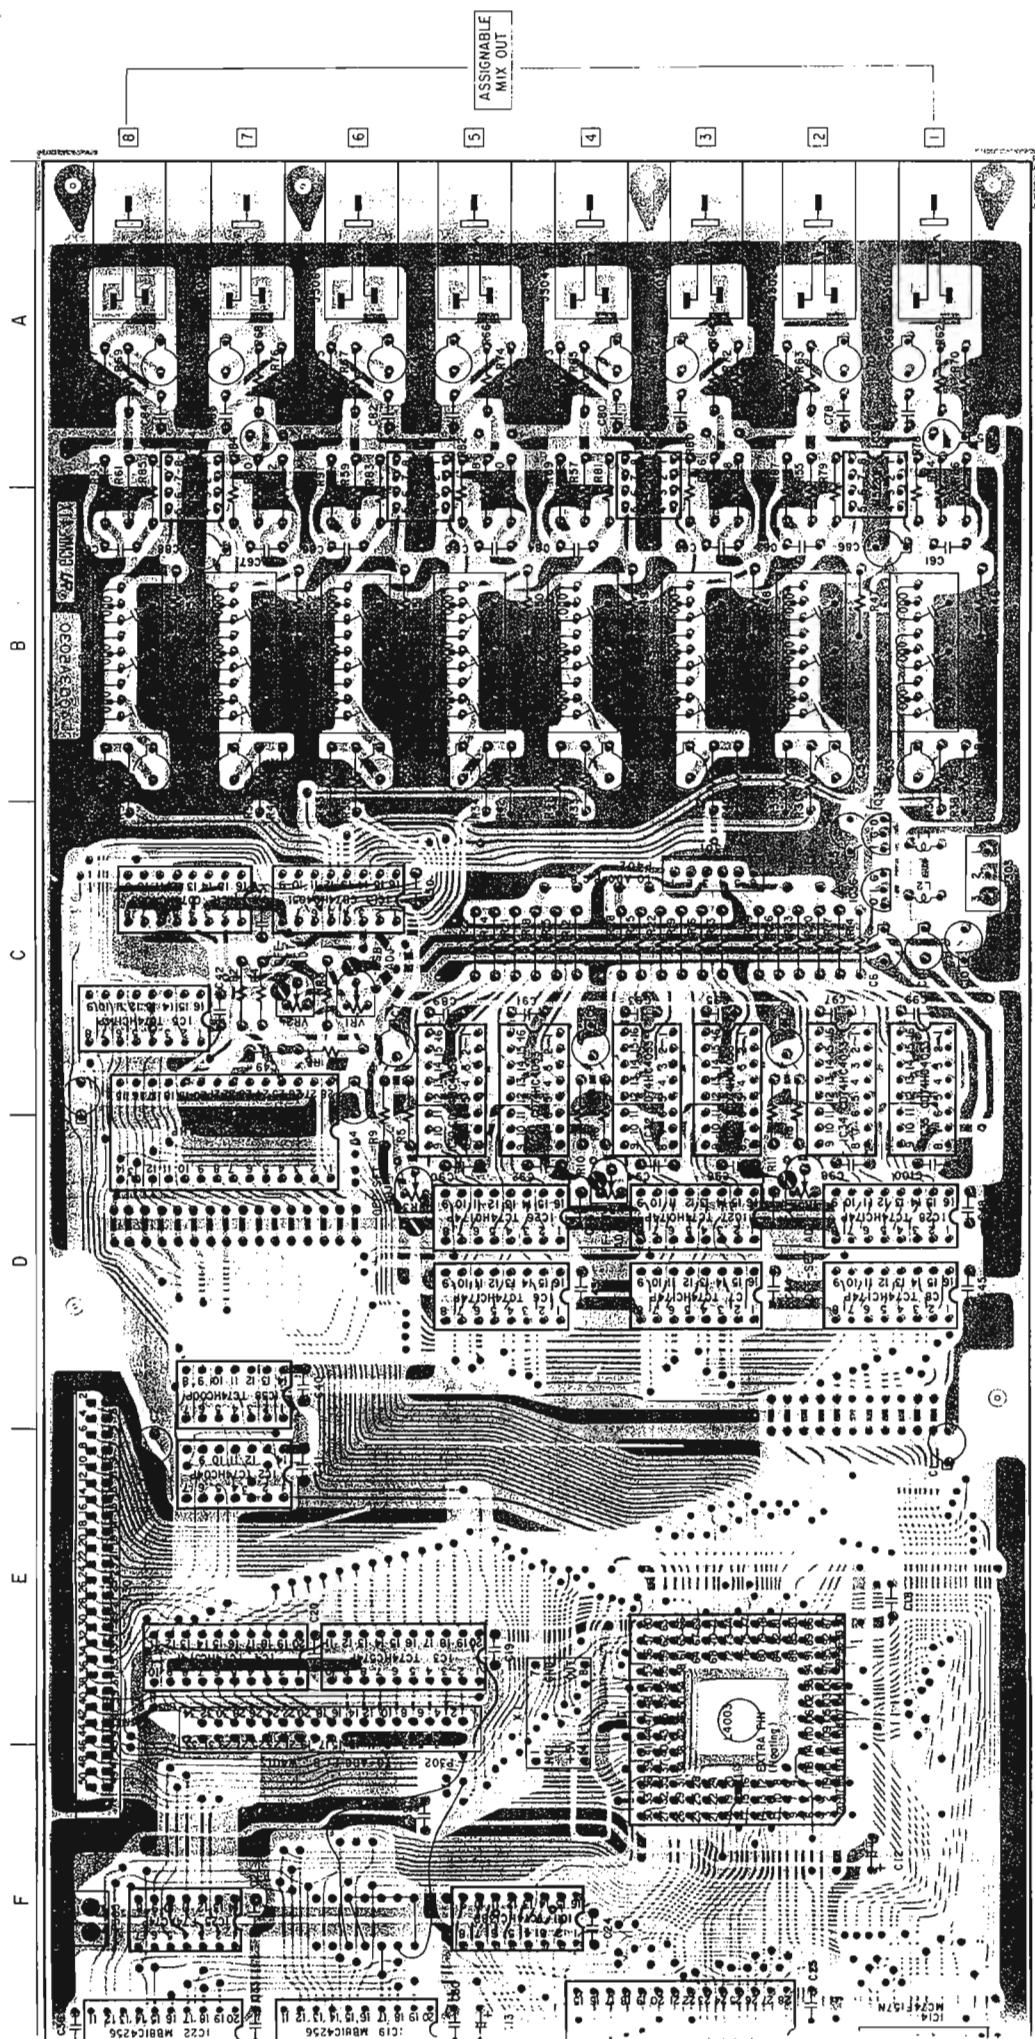


VOICE PCB L4003A5030

WARNING: A INDICATES THE USE OF SURFACE MOUNT COMPONENTS FROM SUPPLIERS WHO CAN GUARANTEE 100% LEAD-FREE. RECOMMENDED SUPPLIERS: Digi-Key, Mouser Electronics, and Jameco.

WARNING:  $\Delta$  INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY.  
REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S  
RECOMMENDED PARTS.

AVERTISSEMENT:  $\Delta$  INDIQUE LES COMPOSANTS CRITIQUES POUR LA SÉCURITÉ.  
GARDER LA SÉCURITÉ DES COMPOSANTS CRITIQUES SEULEMENT AVEC LES PIÈCES  
RECOMMANDÉES PAR LE FABRICANT.

VOICE PCB L4003A5030

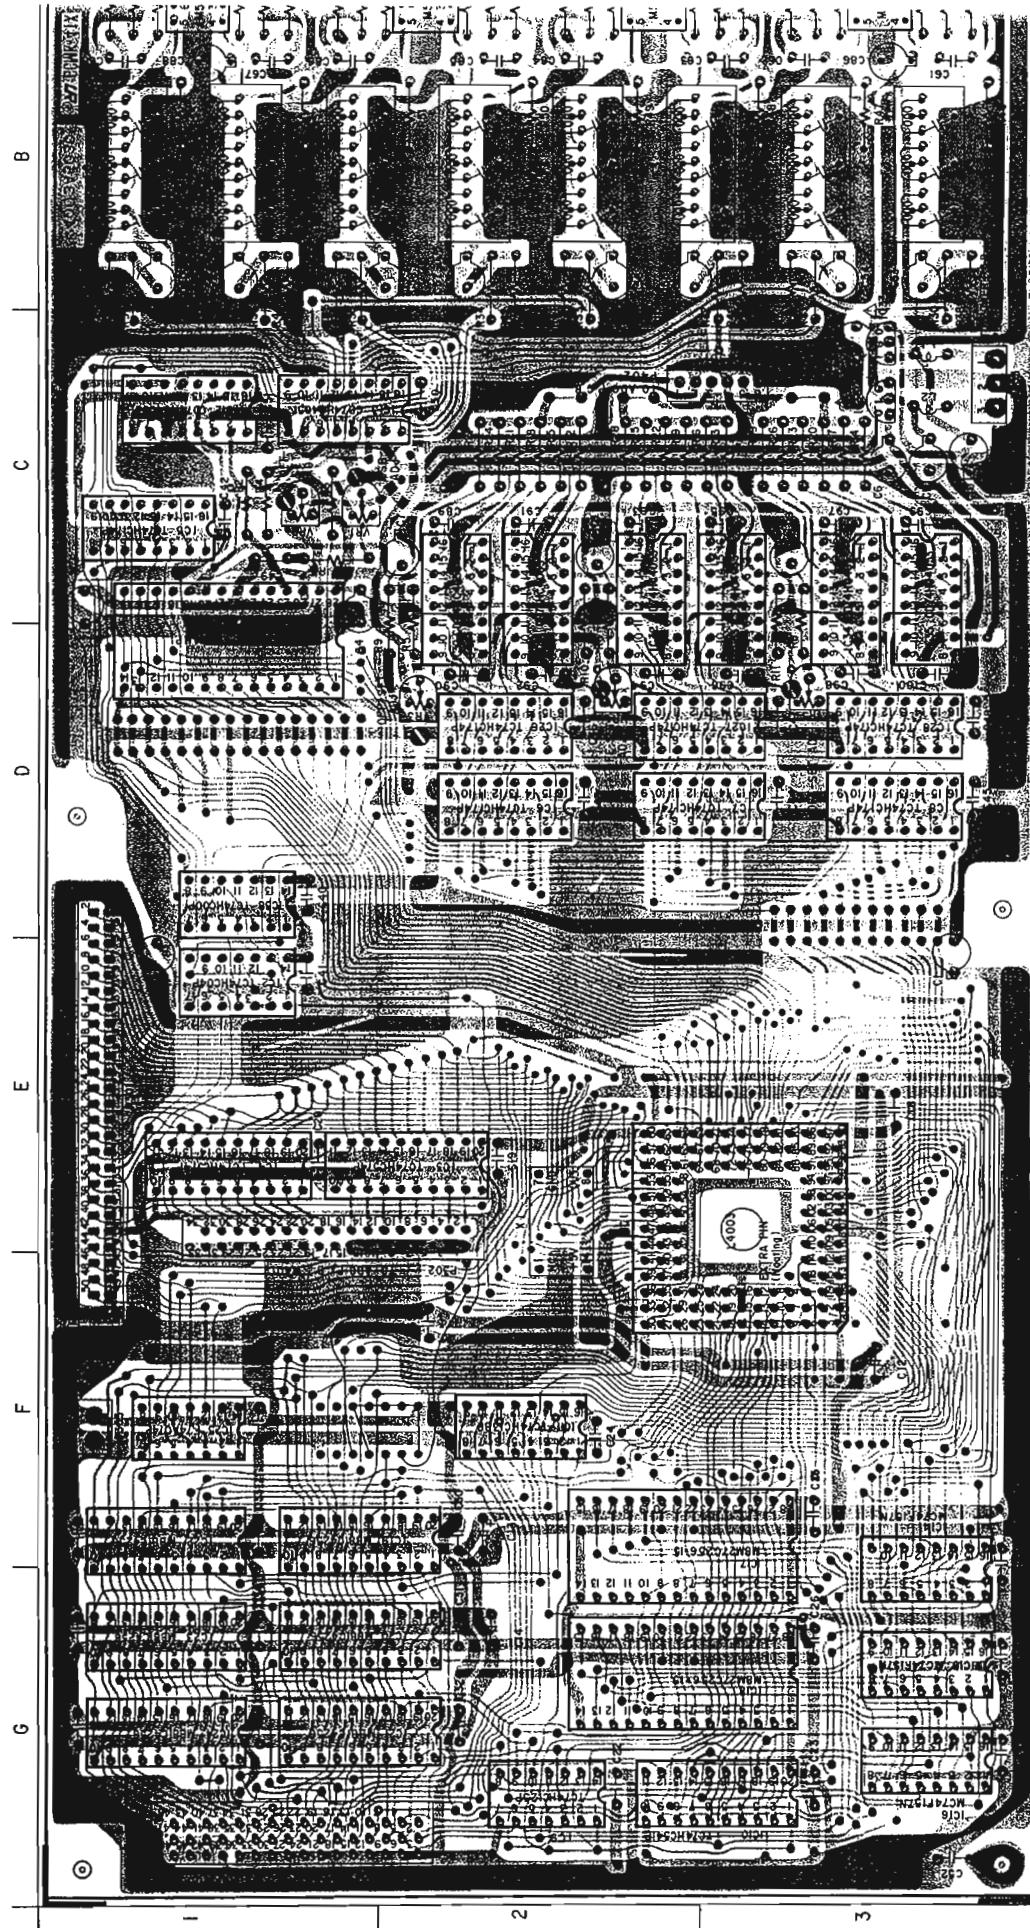

IC5

E1

E2

C1

C2

D1

D2

D3

D4

D5

D6

D7

D8

D9

D10

D11

D12

D13

D14

D15

D16

D17

D18

D19

D20

D21

D22

D23

D24

D25

D26

D27

D28

D29

D30

C1

C2

C3

C4

C5

C6

C7

C8

C9

C10

A1

A2

A3

A4

A5

A6

A7

A8

A9

A10

A11

A12

A13

A14

A15

A16

A17

A18

A19

A20

A21

A22

A23

A24

A25

A26

A27

A28

A29

A30

A31

A32

A33

A34

A35

A36

A37

A38

A39

A40

A41

A42

P1

P2

P3

P4

P5

P6

P7

P8

P9

P10

CONNECTORS

P101

P102

P103

P104


P105


W301

2


3


4

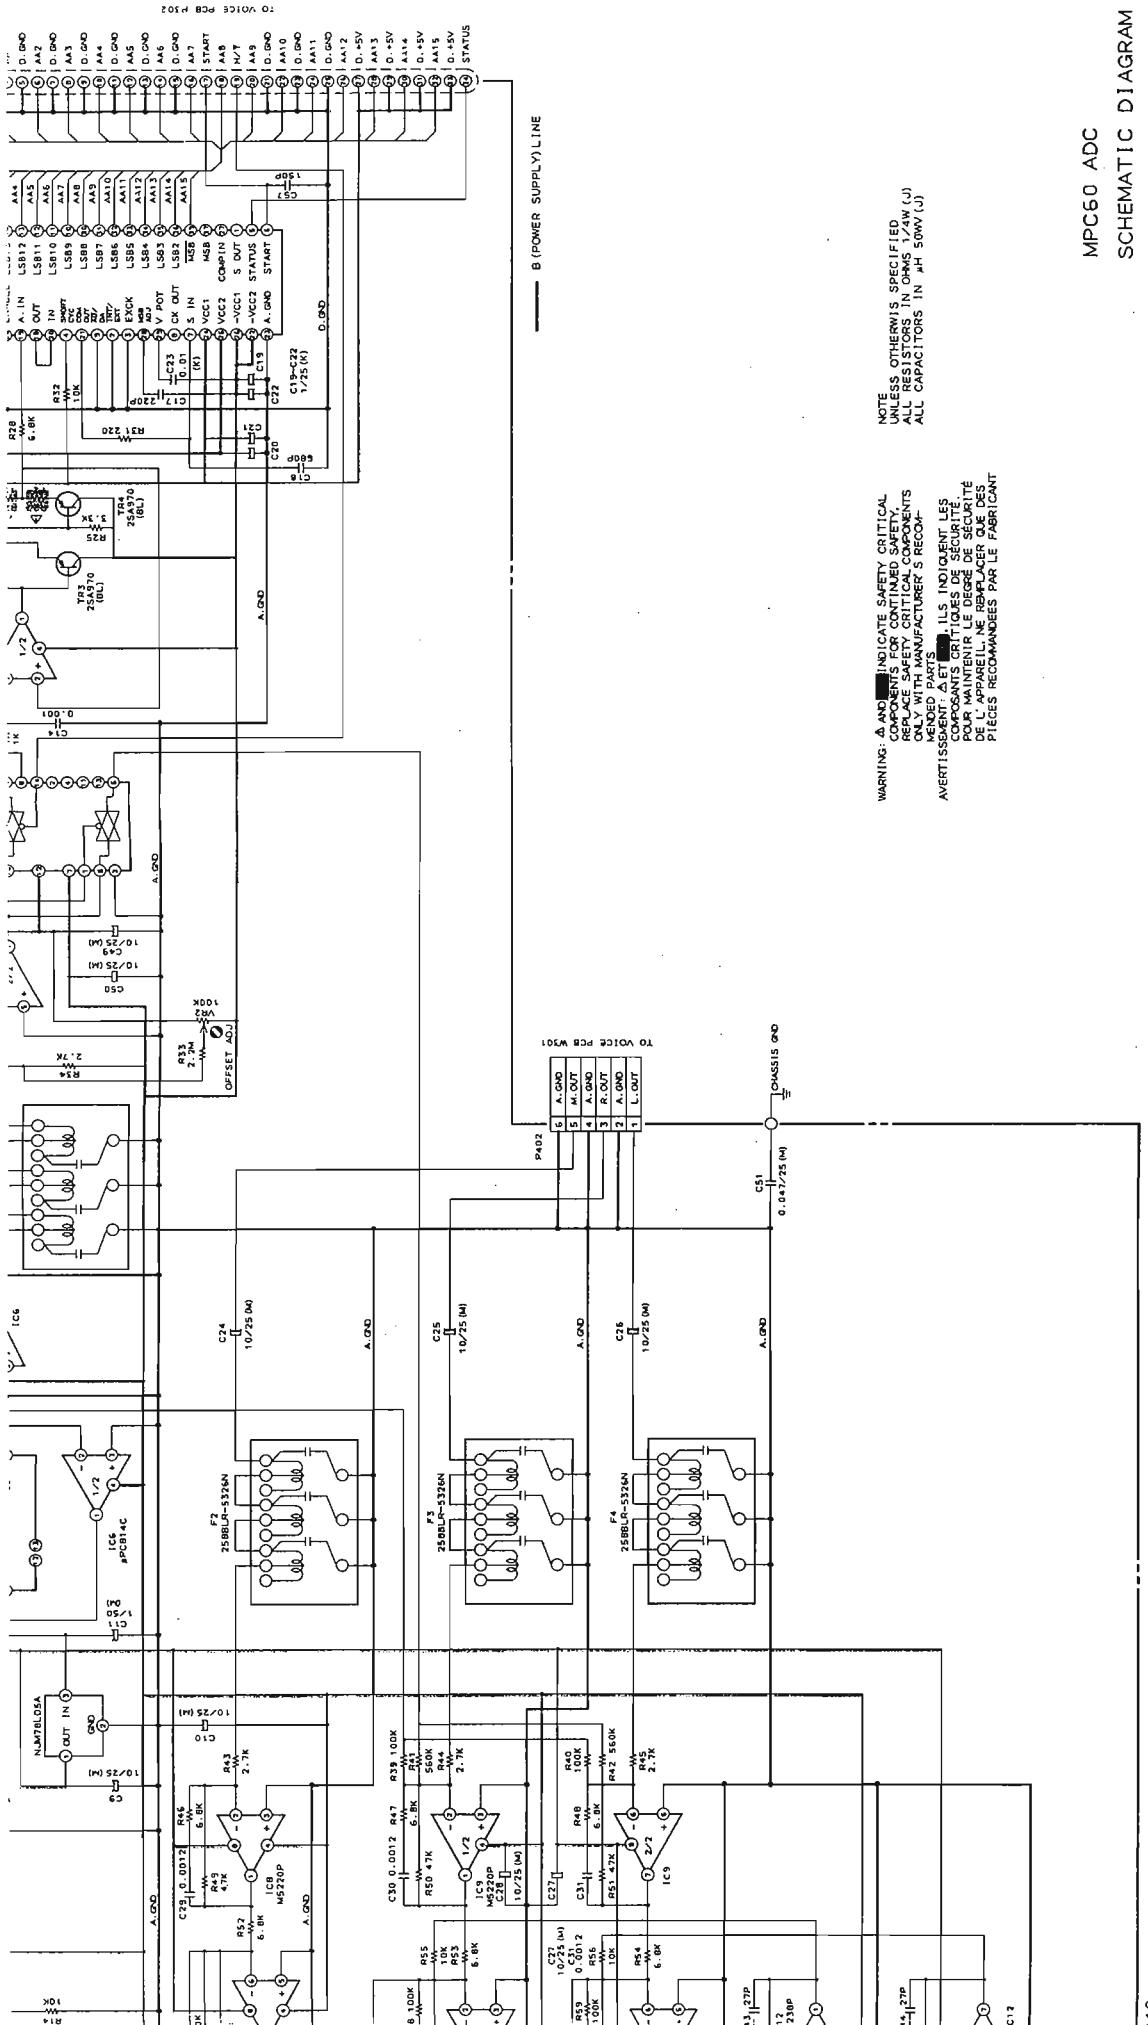

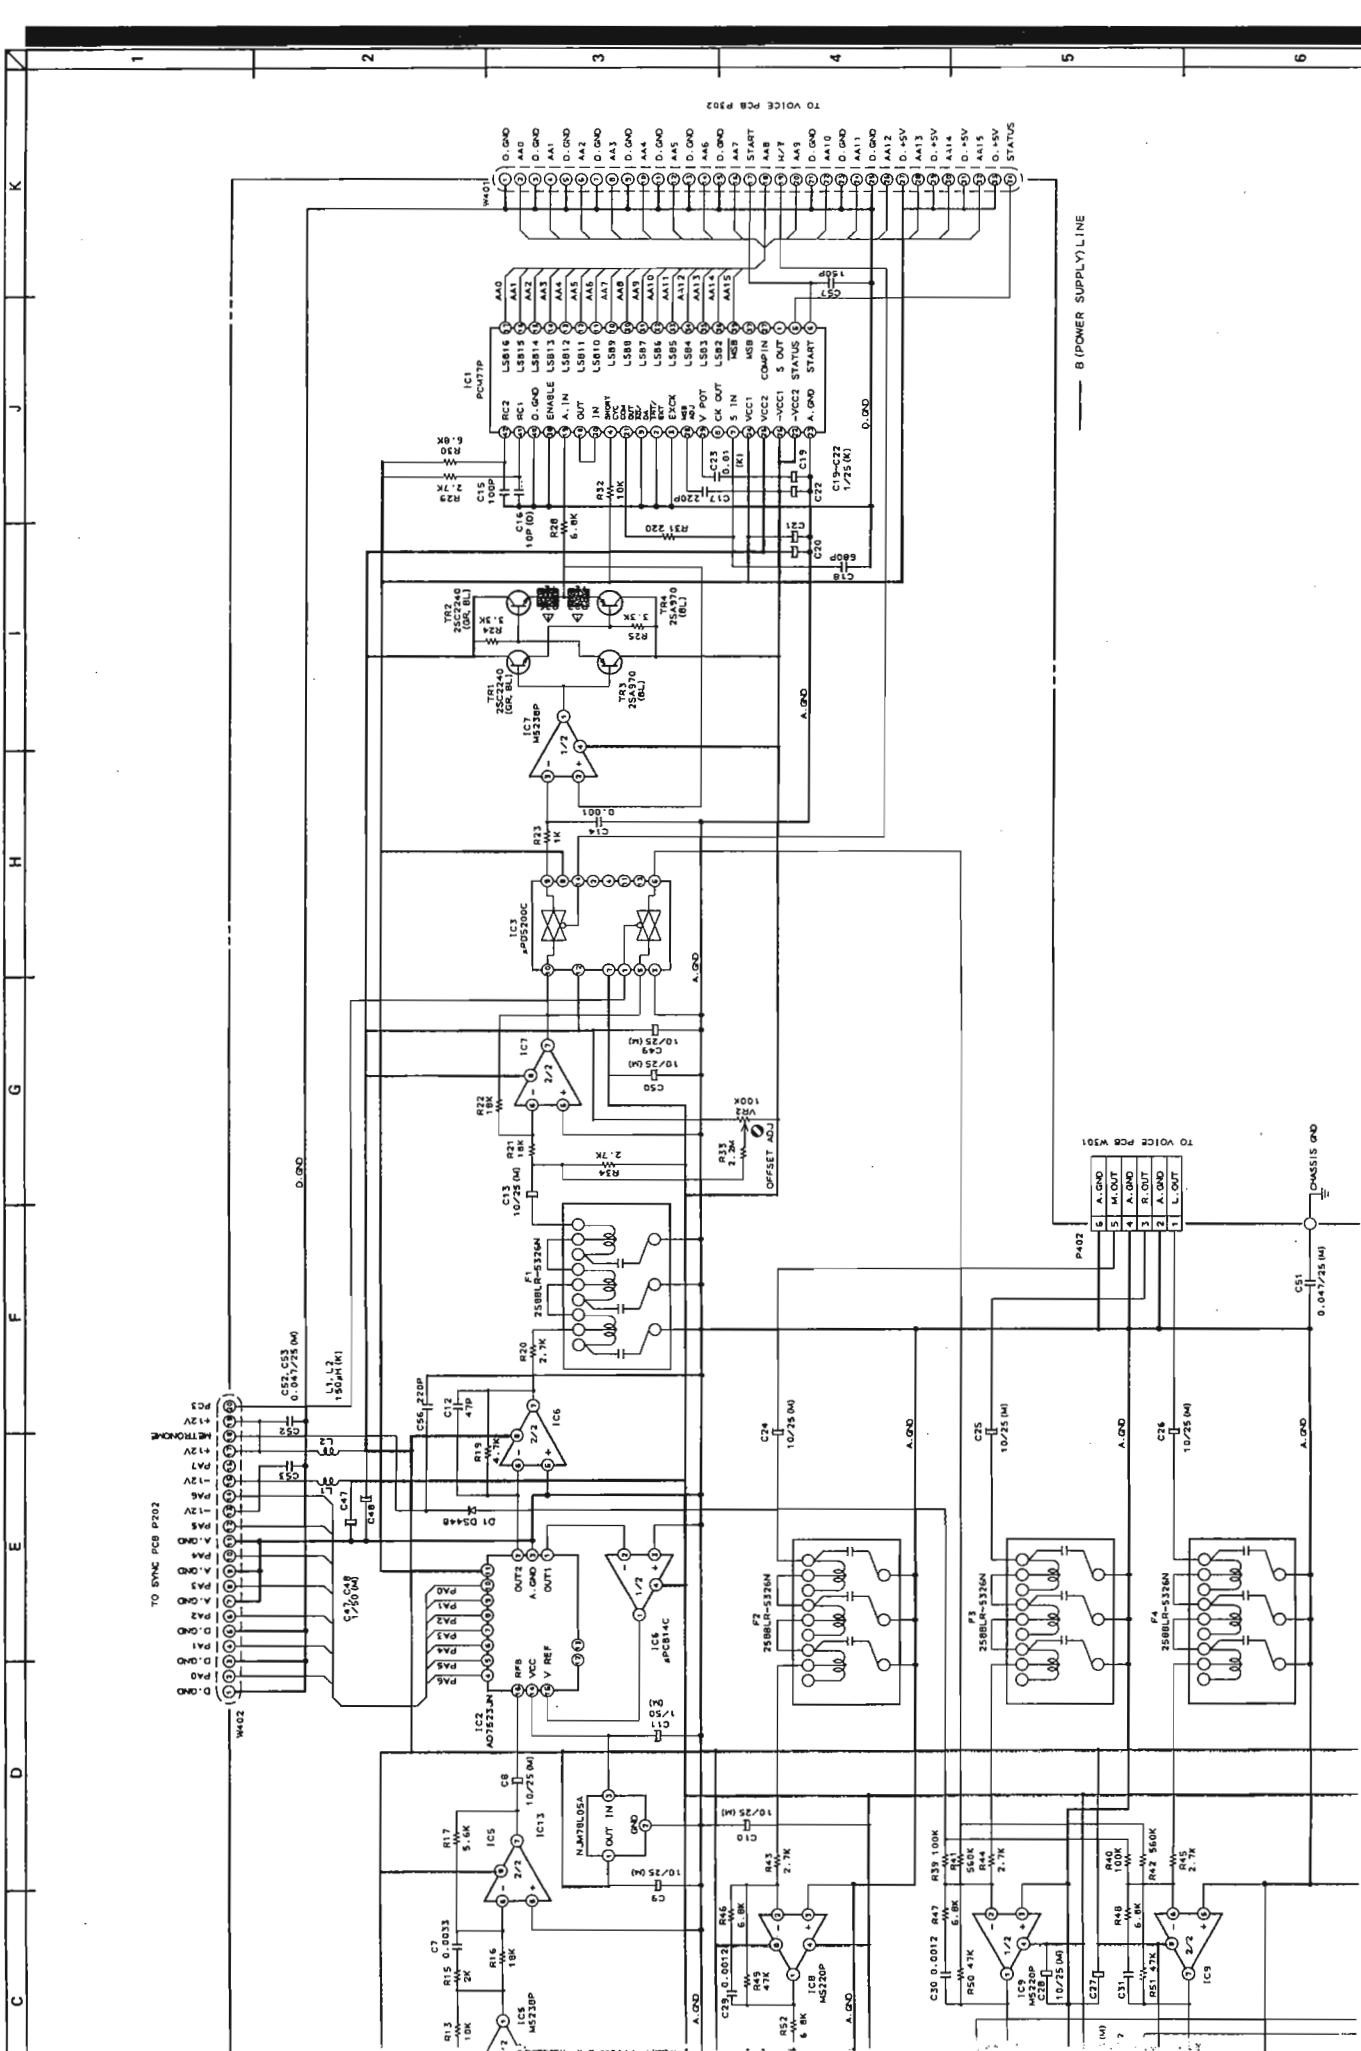


A B C D E F G H

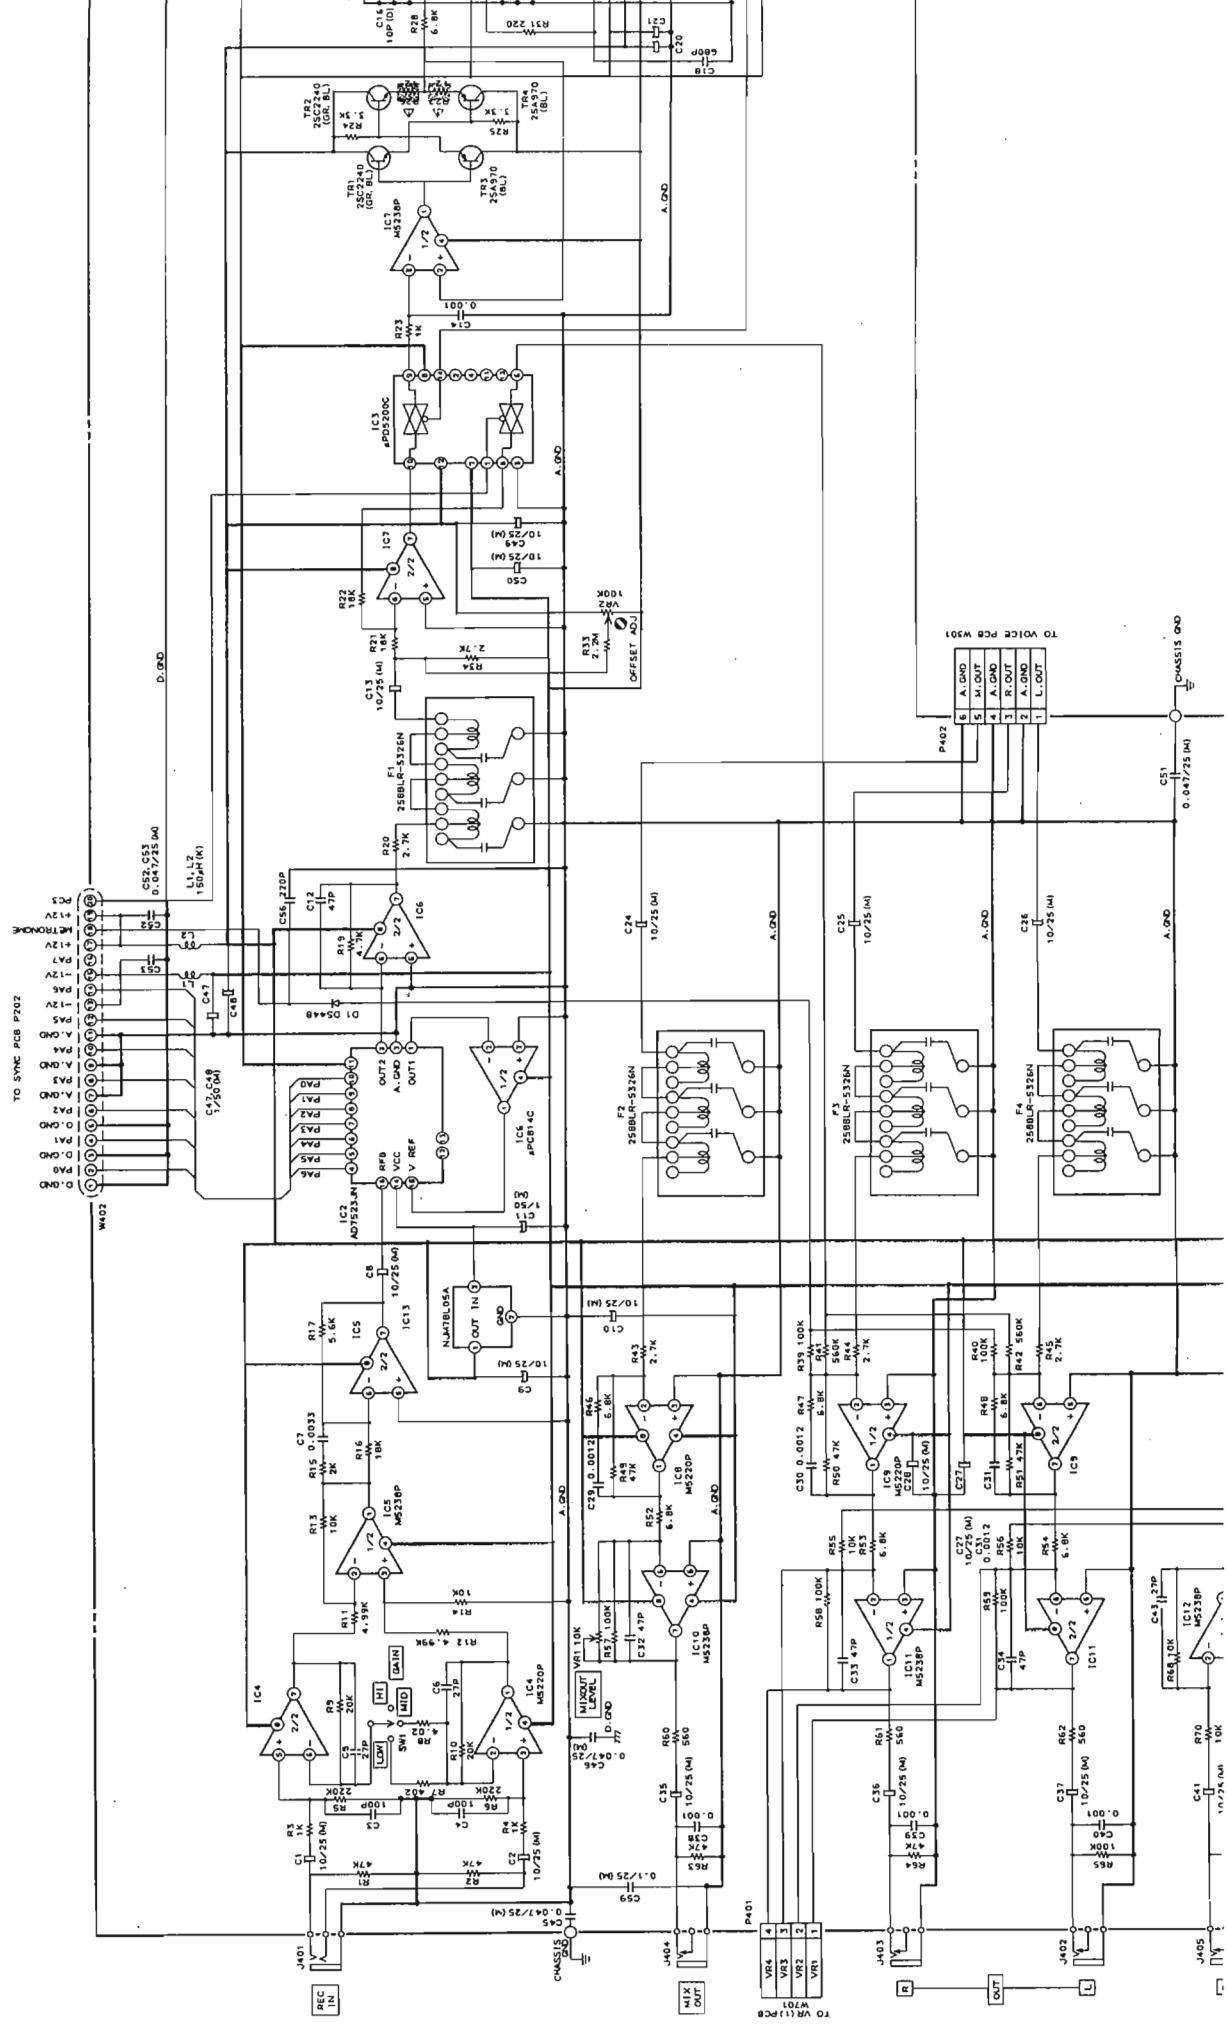

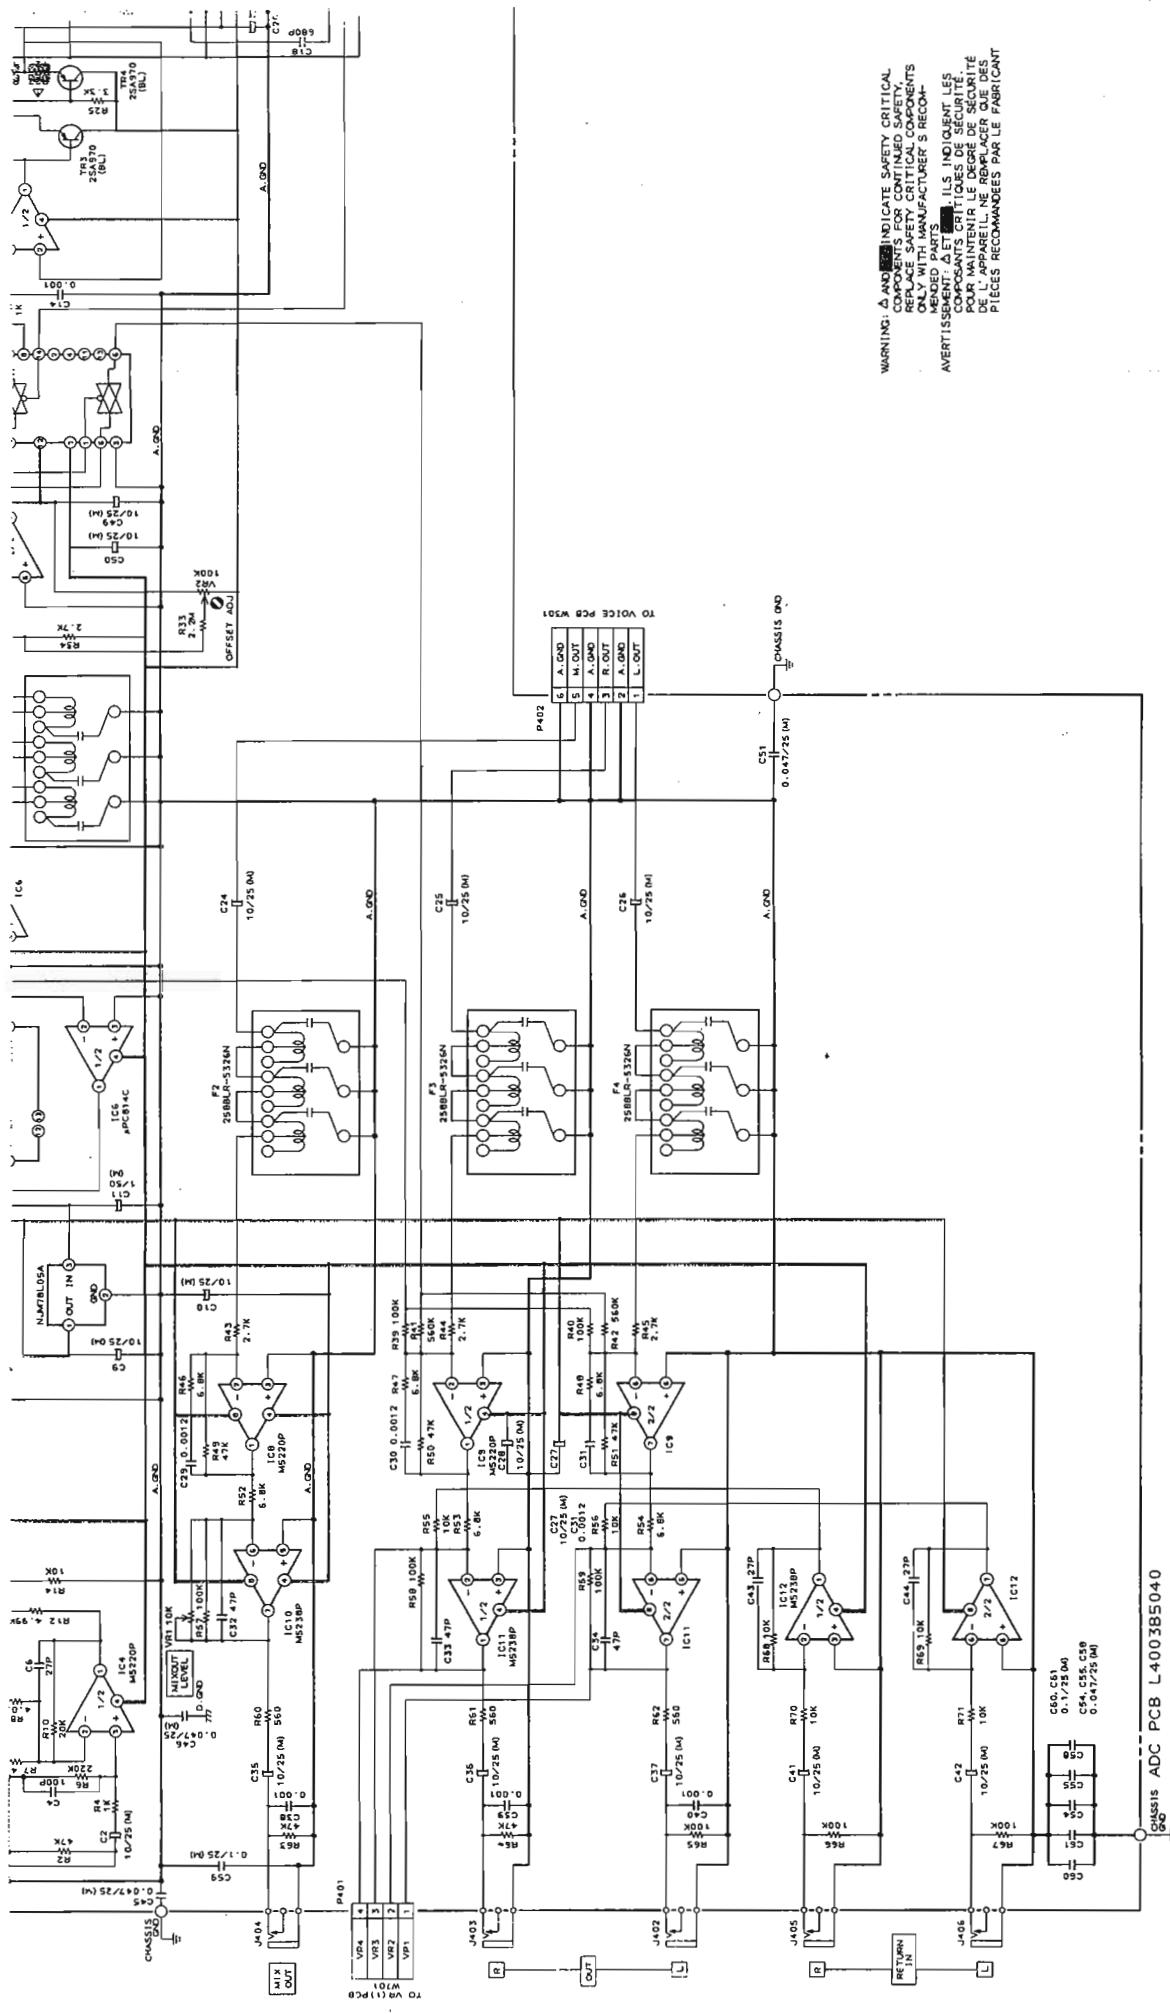



VR (A) PCB  
L4003B507B

ADC PCB L4003B5040

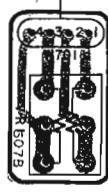

STEREO MIX VOLUME


B  
B  
= NPN TRANSISTOR  
B  
= PNP TRANSISTOR

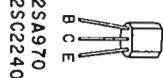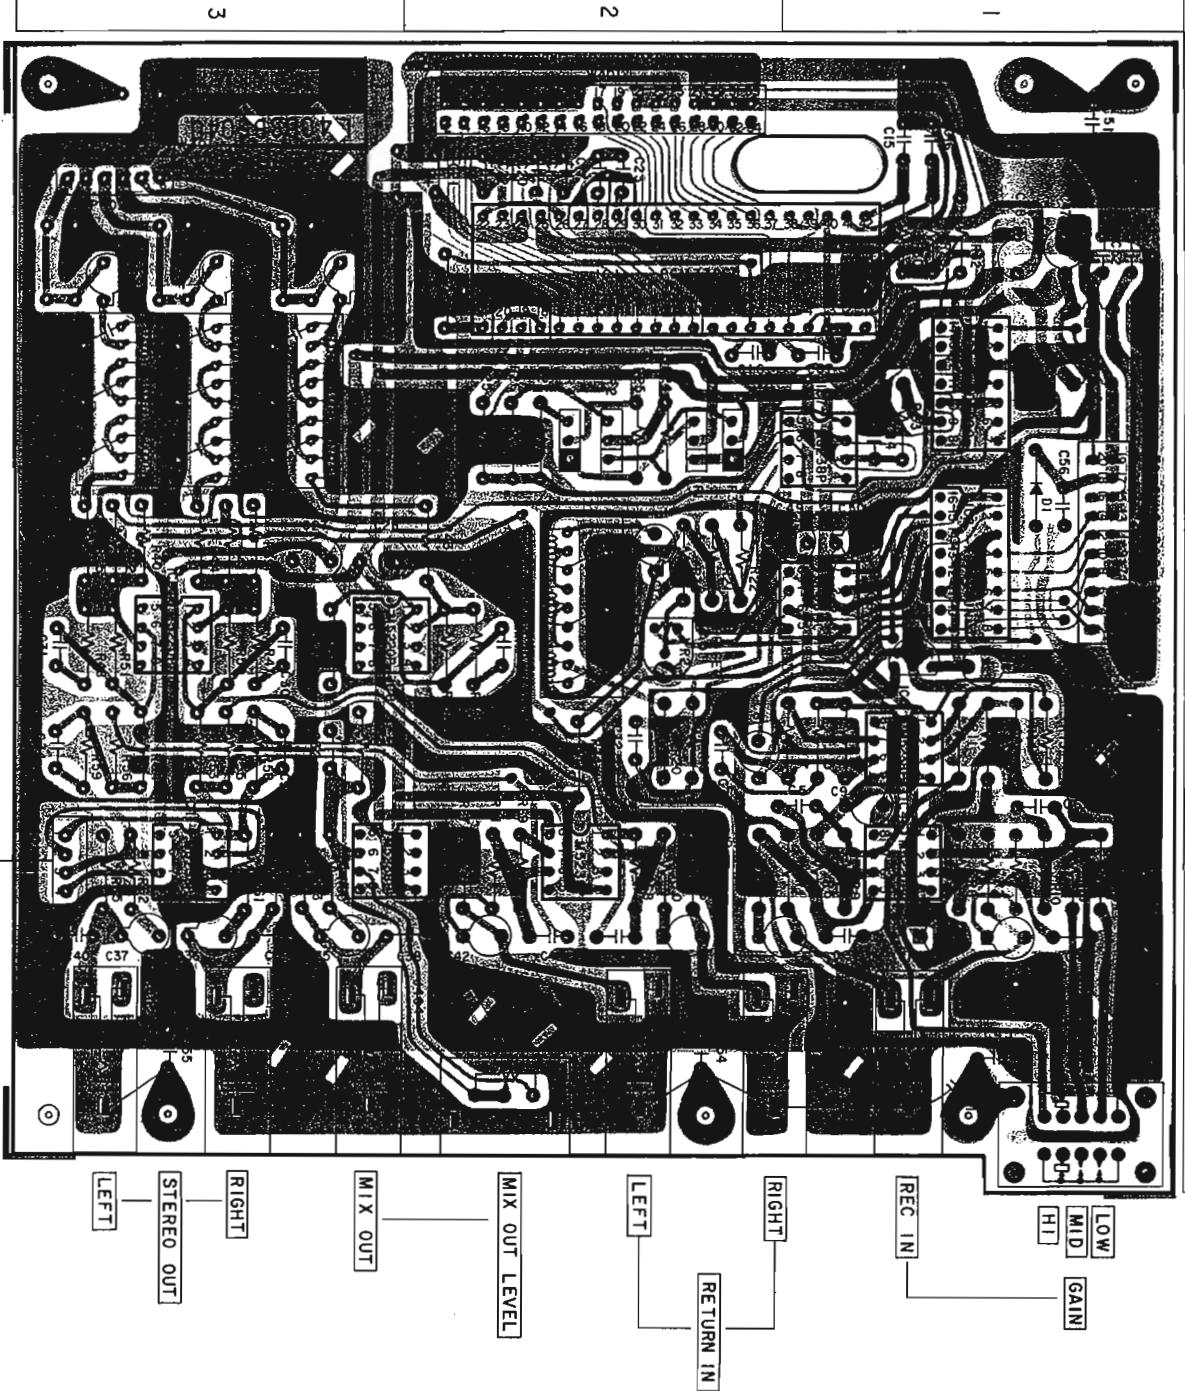


B C E

2SA970

2SC2240

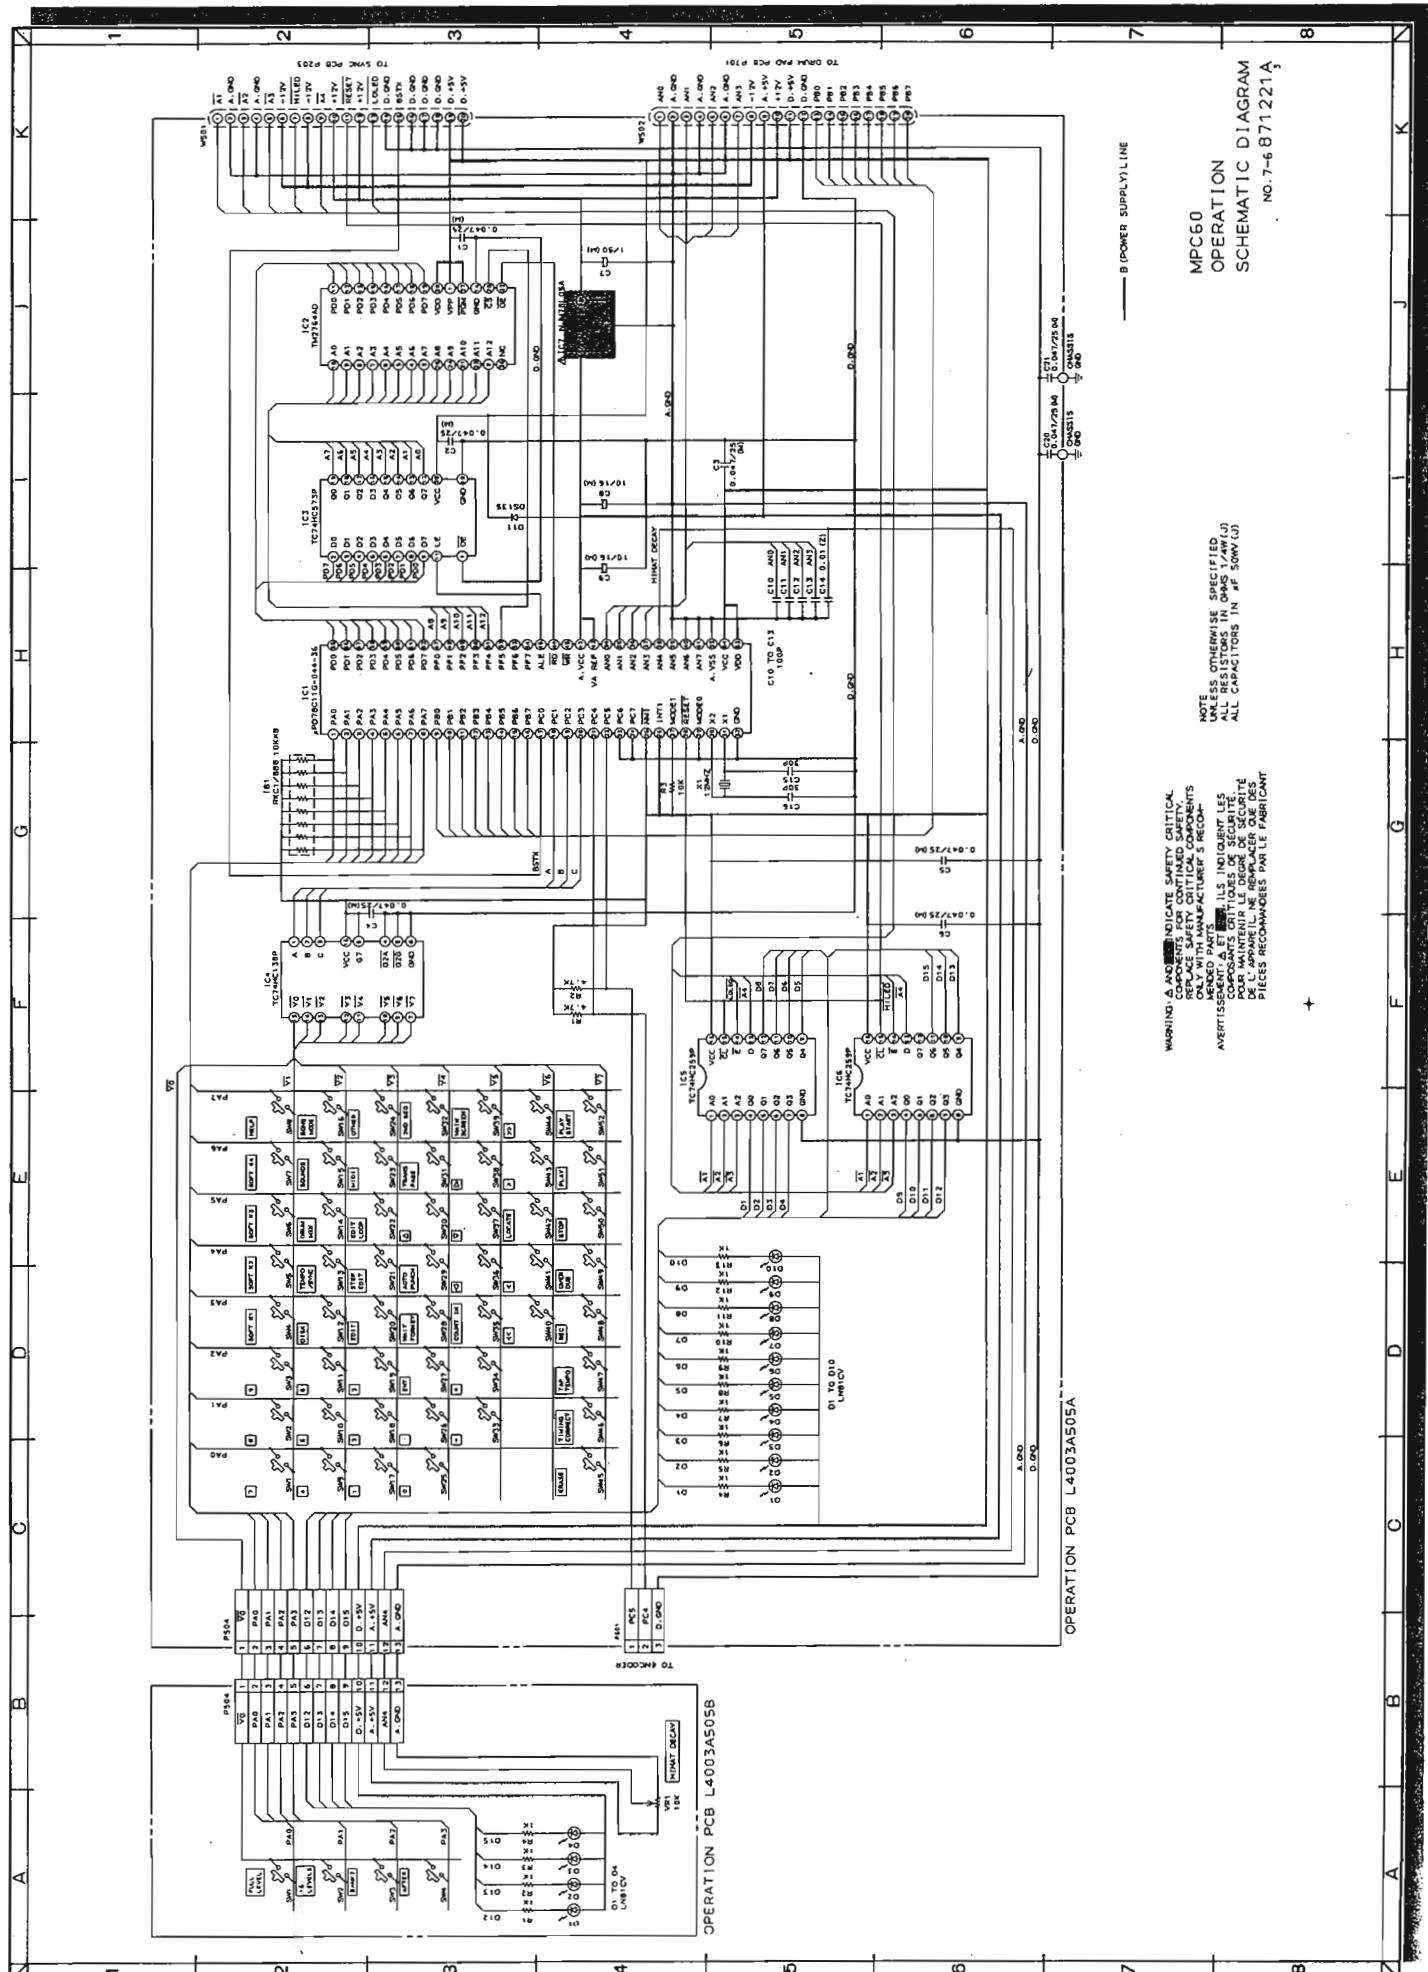


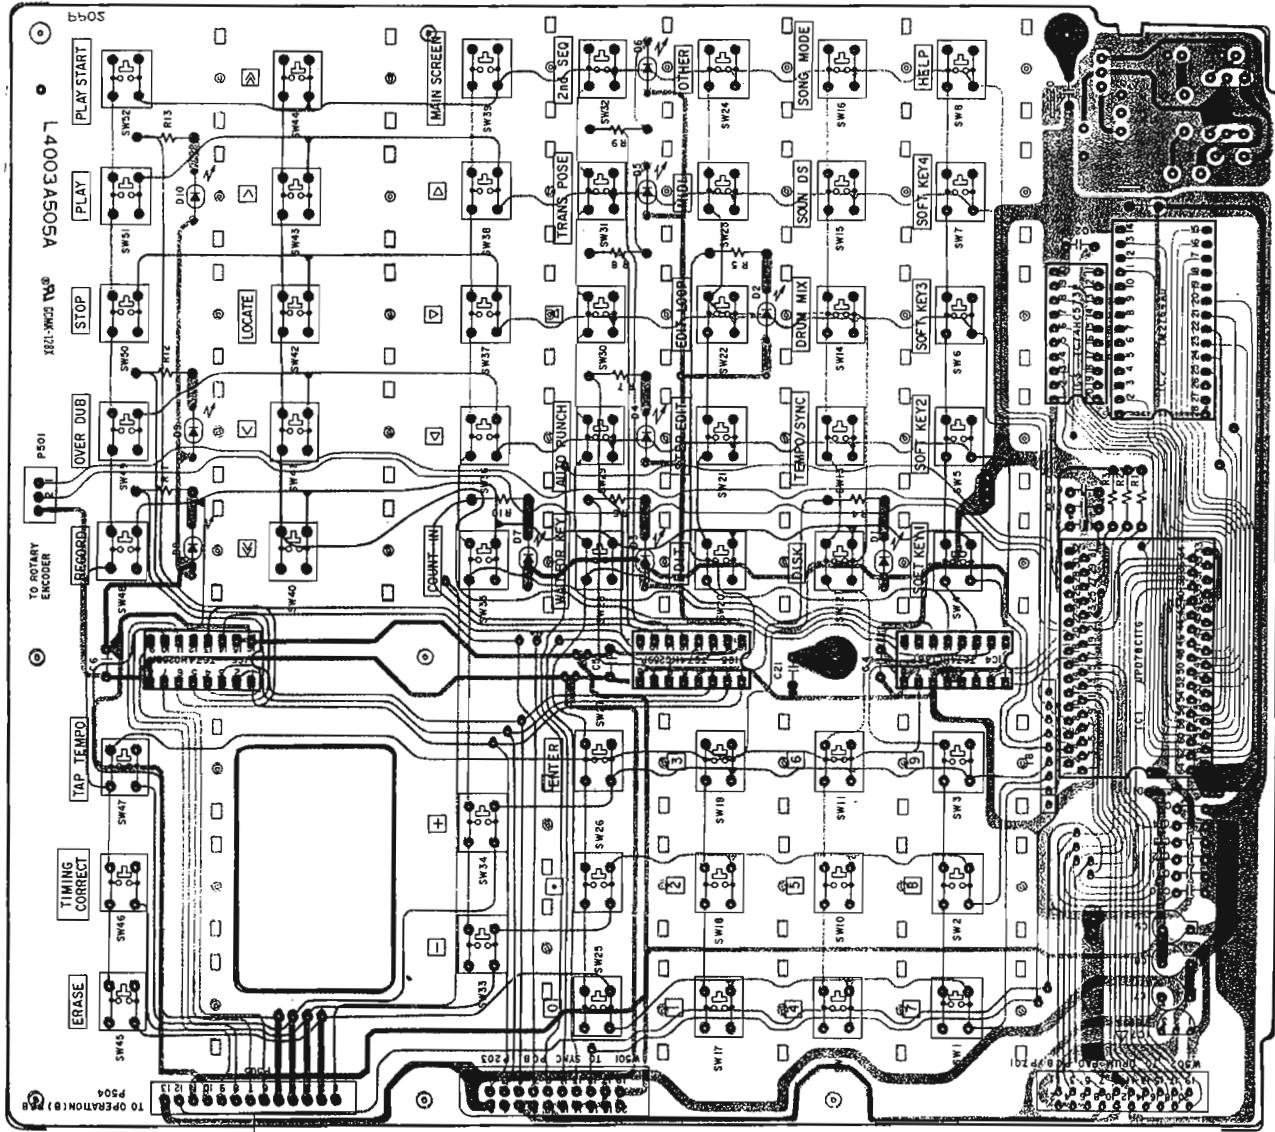


OPERATION (A) PCB L4003A505A


WARNING:  $\triangle$  INDICATES SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFE  
REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURE  
RECOMMENDED PARTS

AVERTISSEMENT:  $\triangle$  INDIQUE LES COMPOSANTS CRITIQUES POUR LA SECURITE  
POUR MAINTENIR LE DEGRÉ DE SECURITE DE L'APPAREIL,  
NE REMPLACER QUE PAR DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

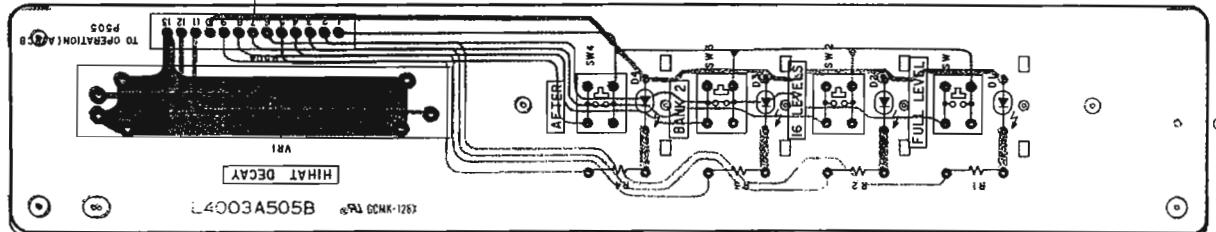



OPERATION (B) PCB L4003A505B

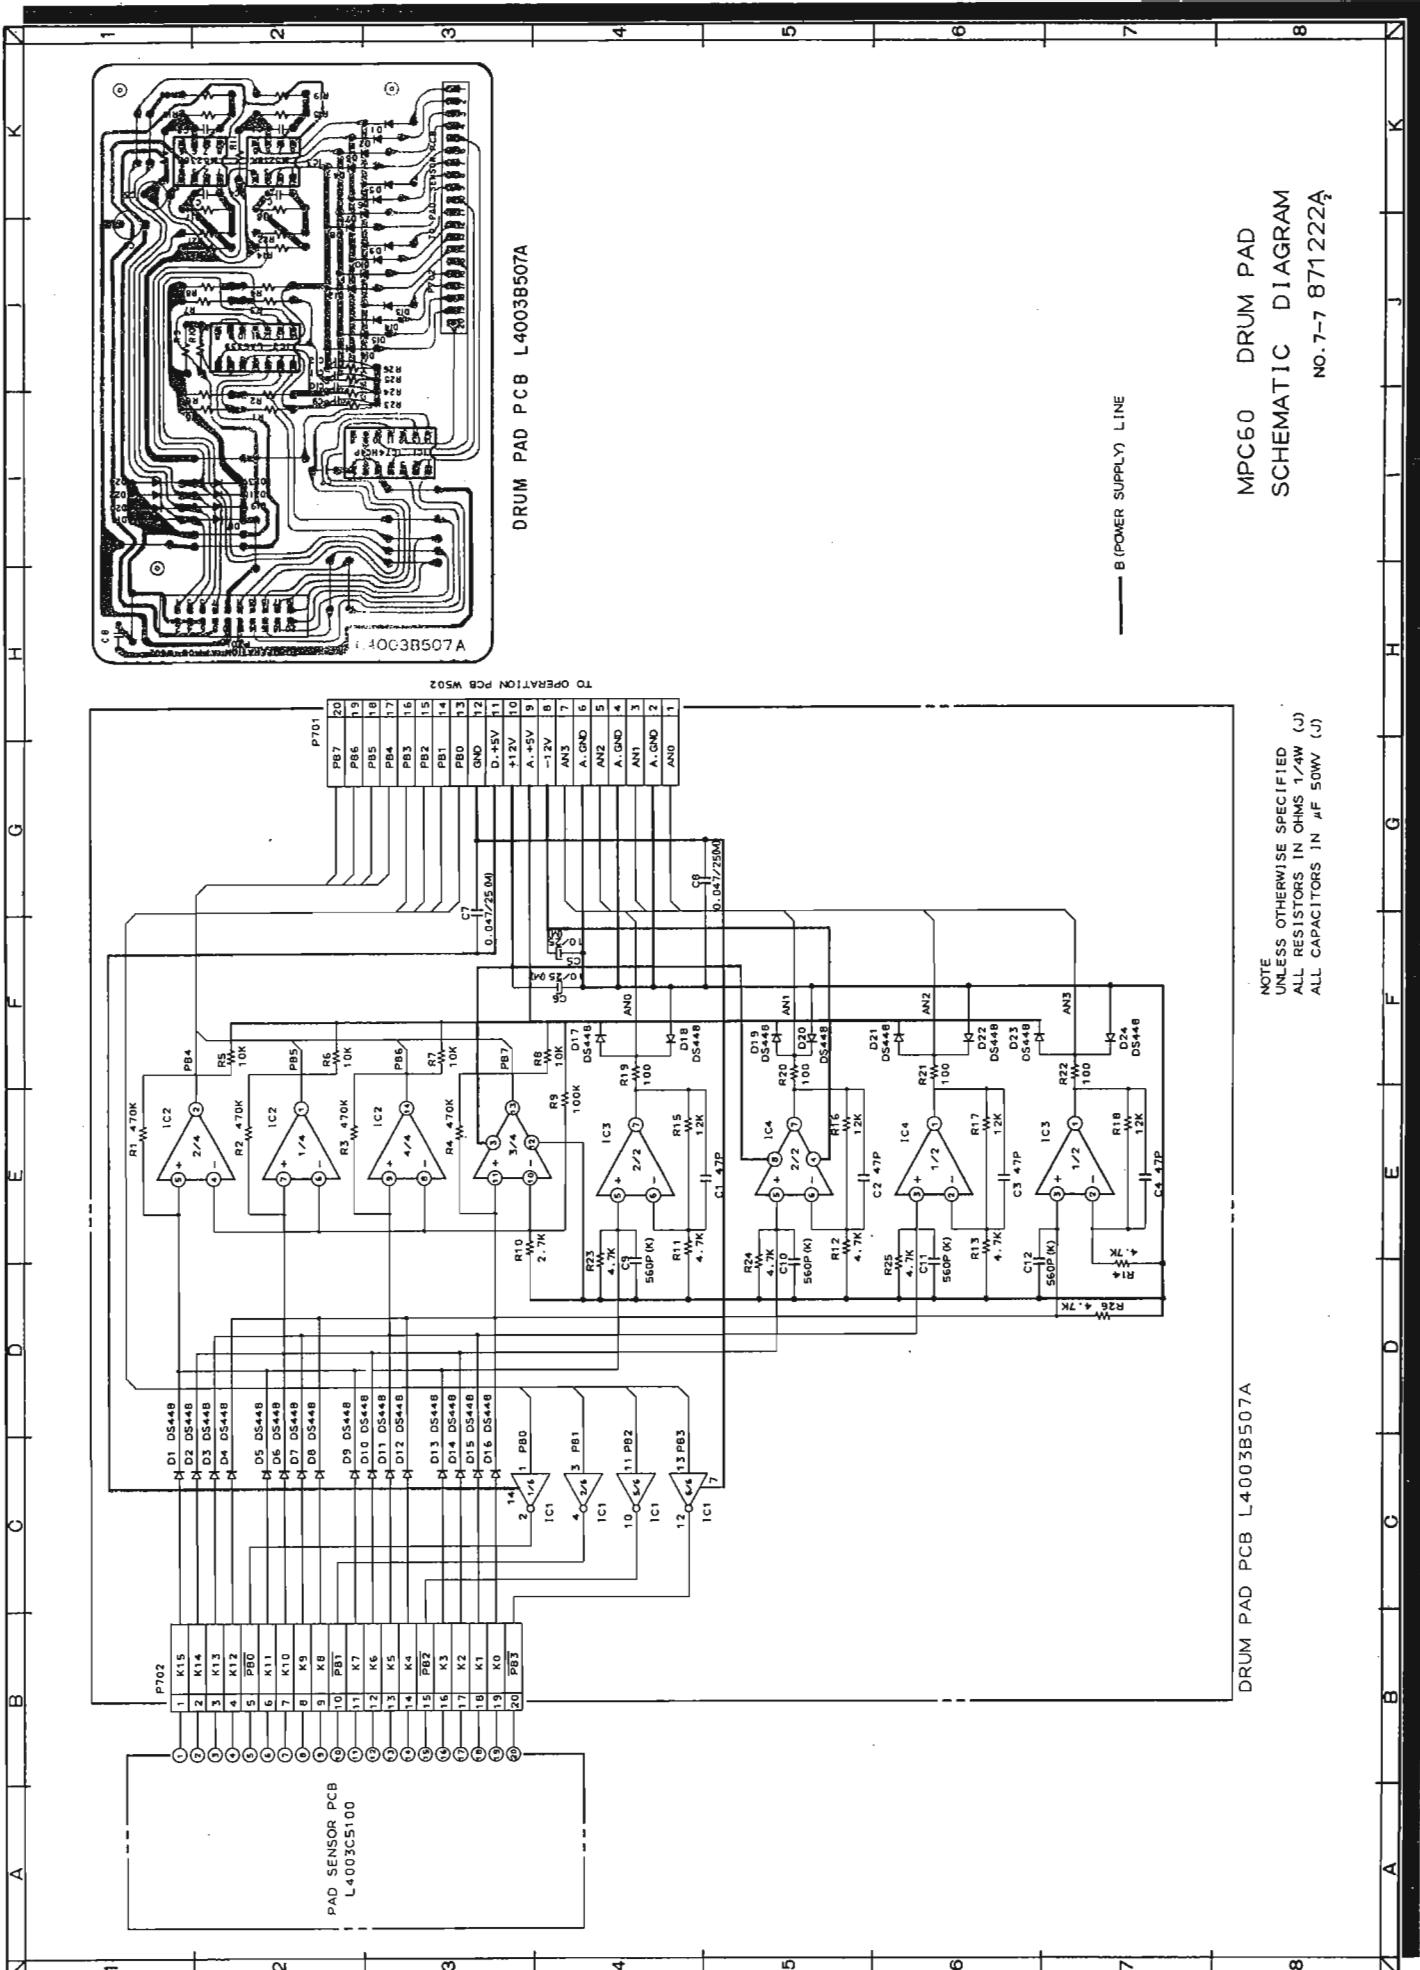

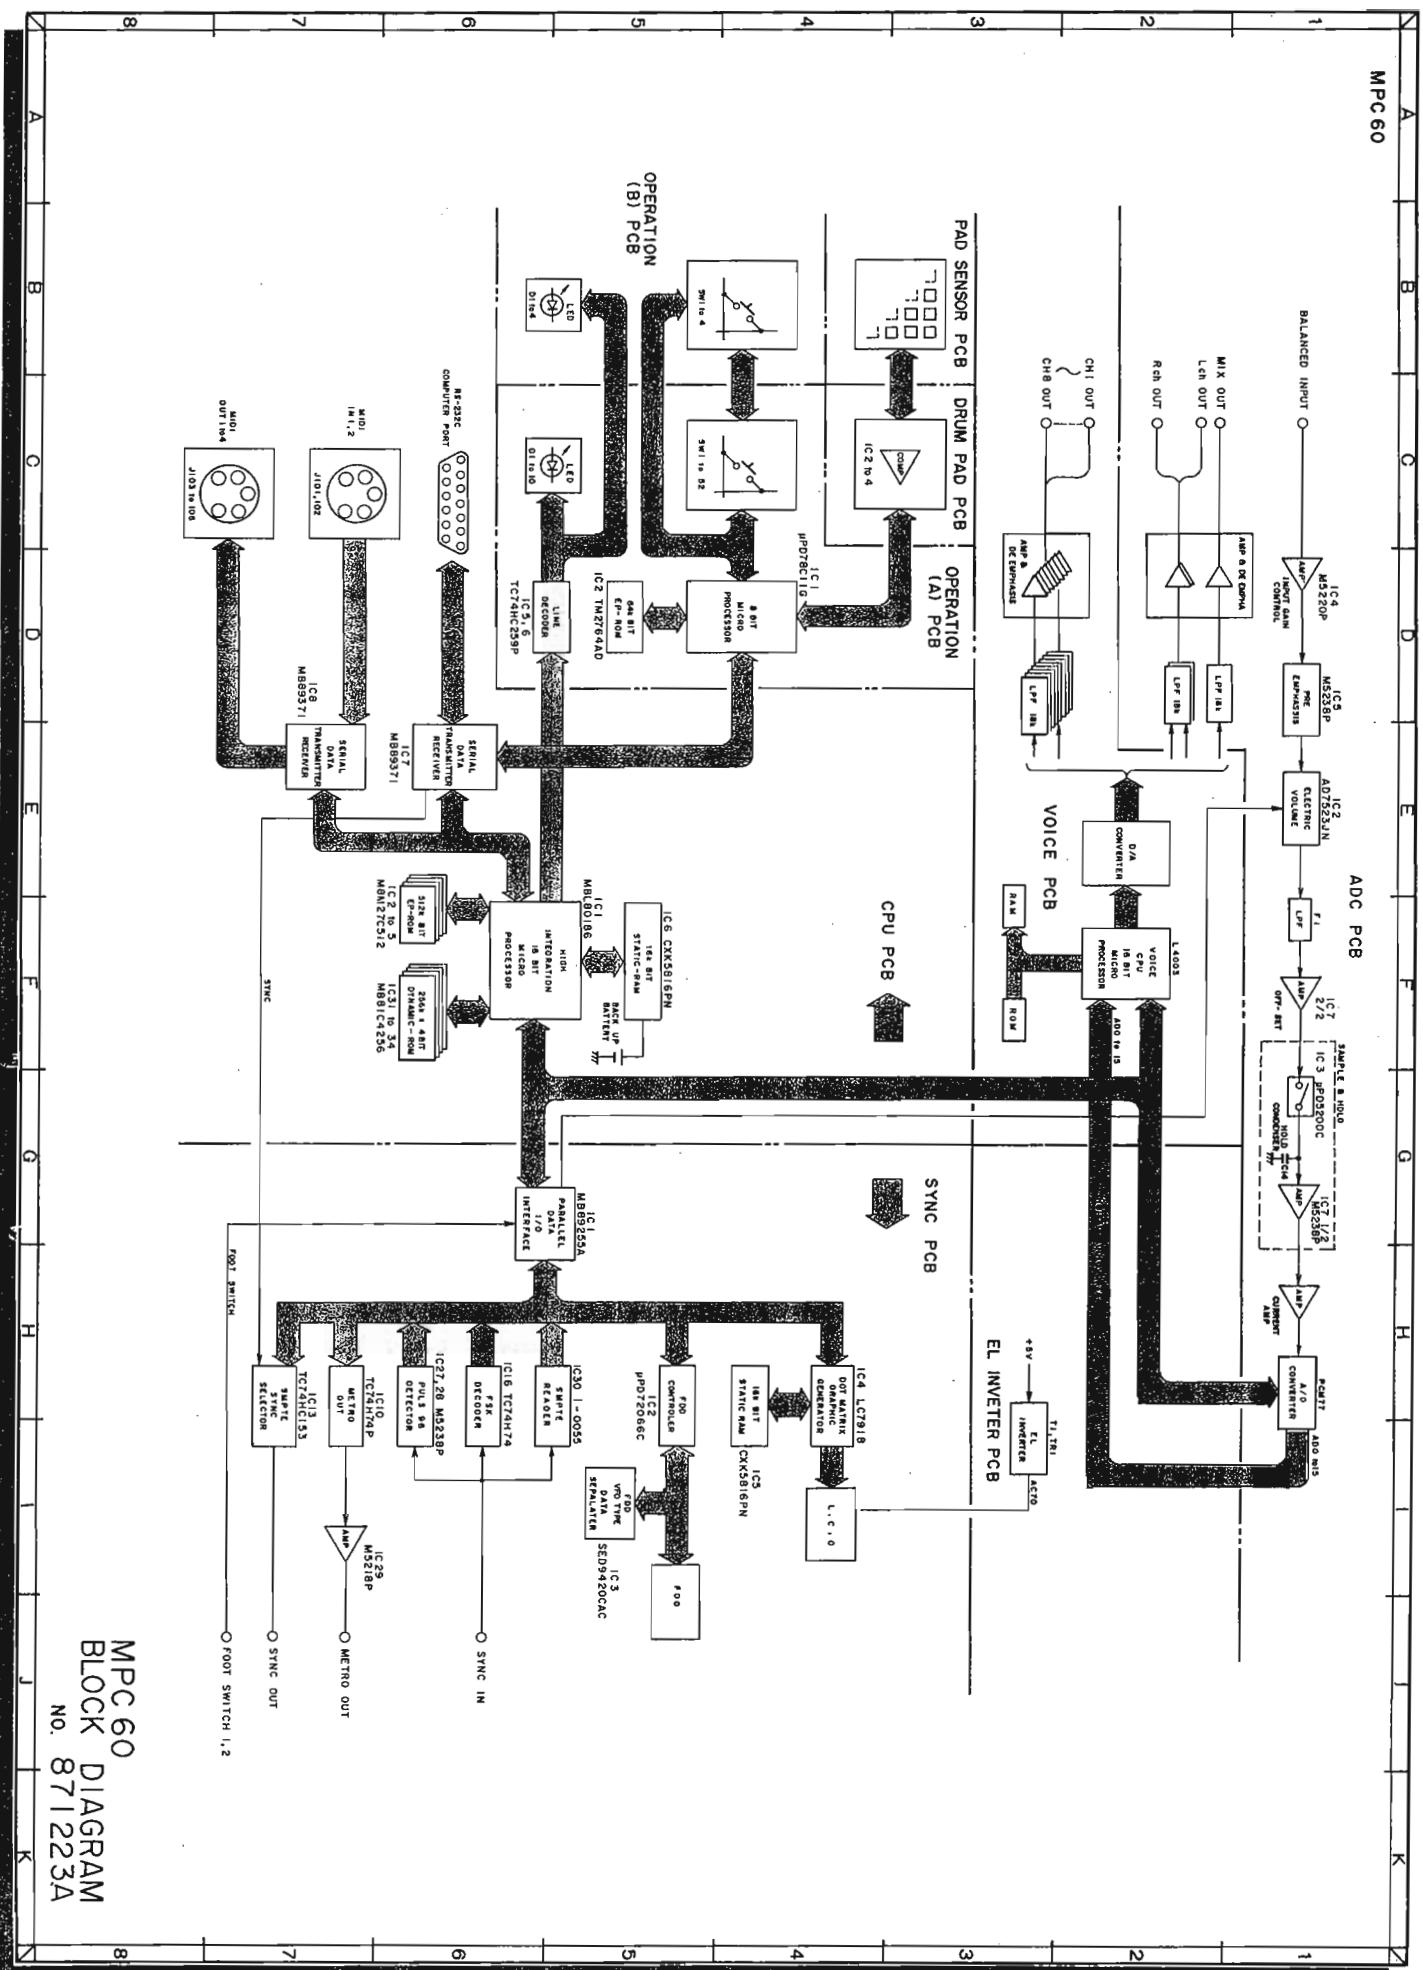

**MPC 60**  
**BLOCK DIAGRAM**  
No. 871223A

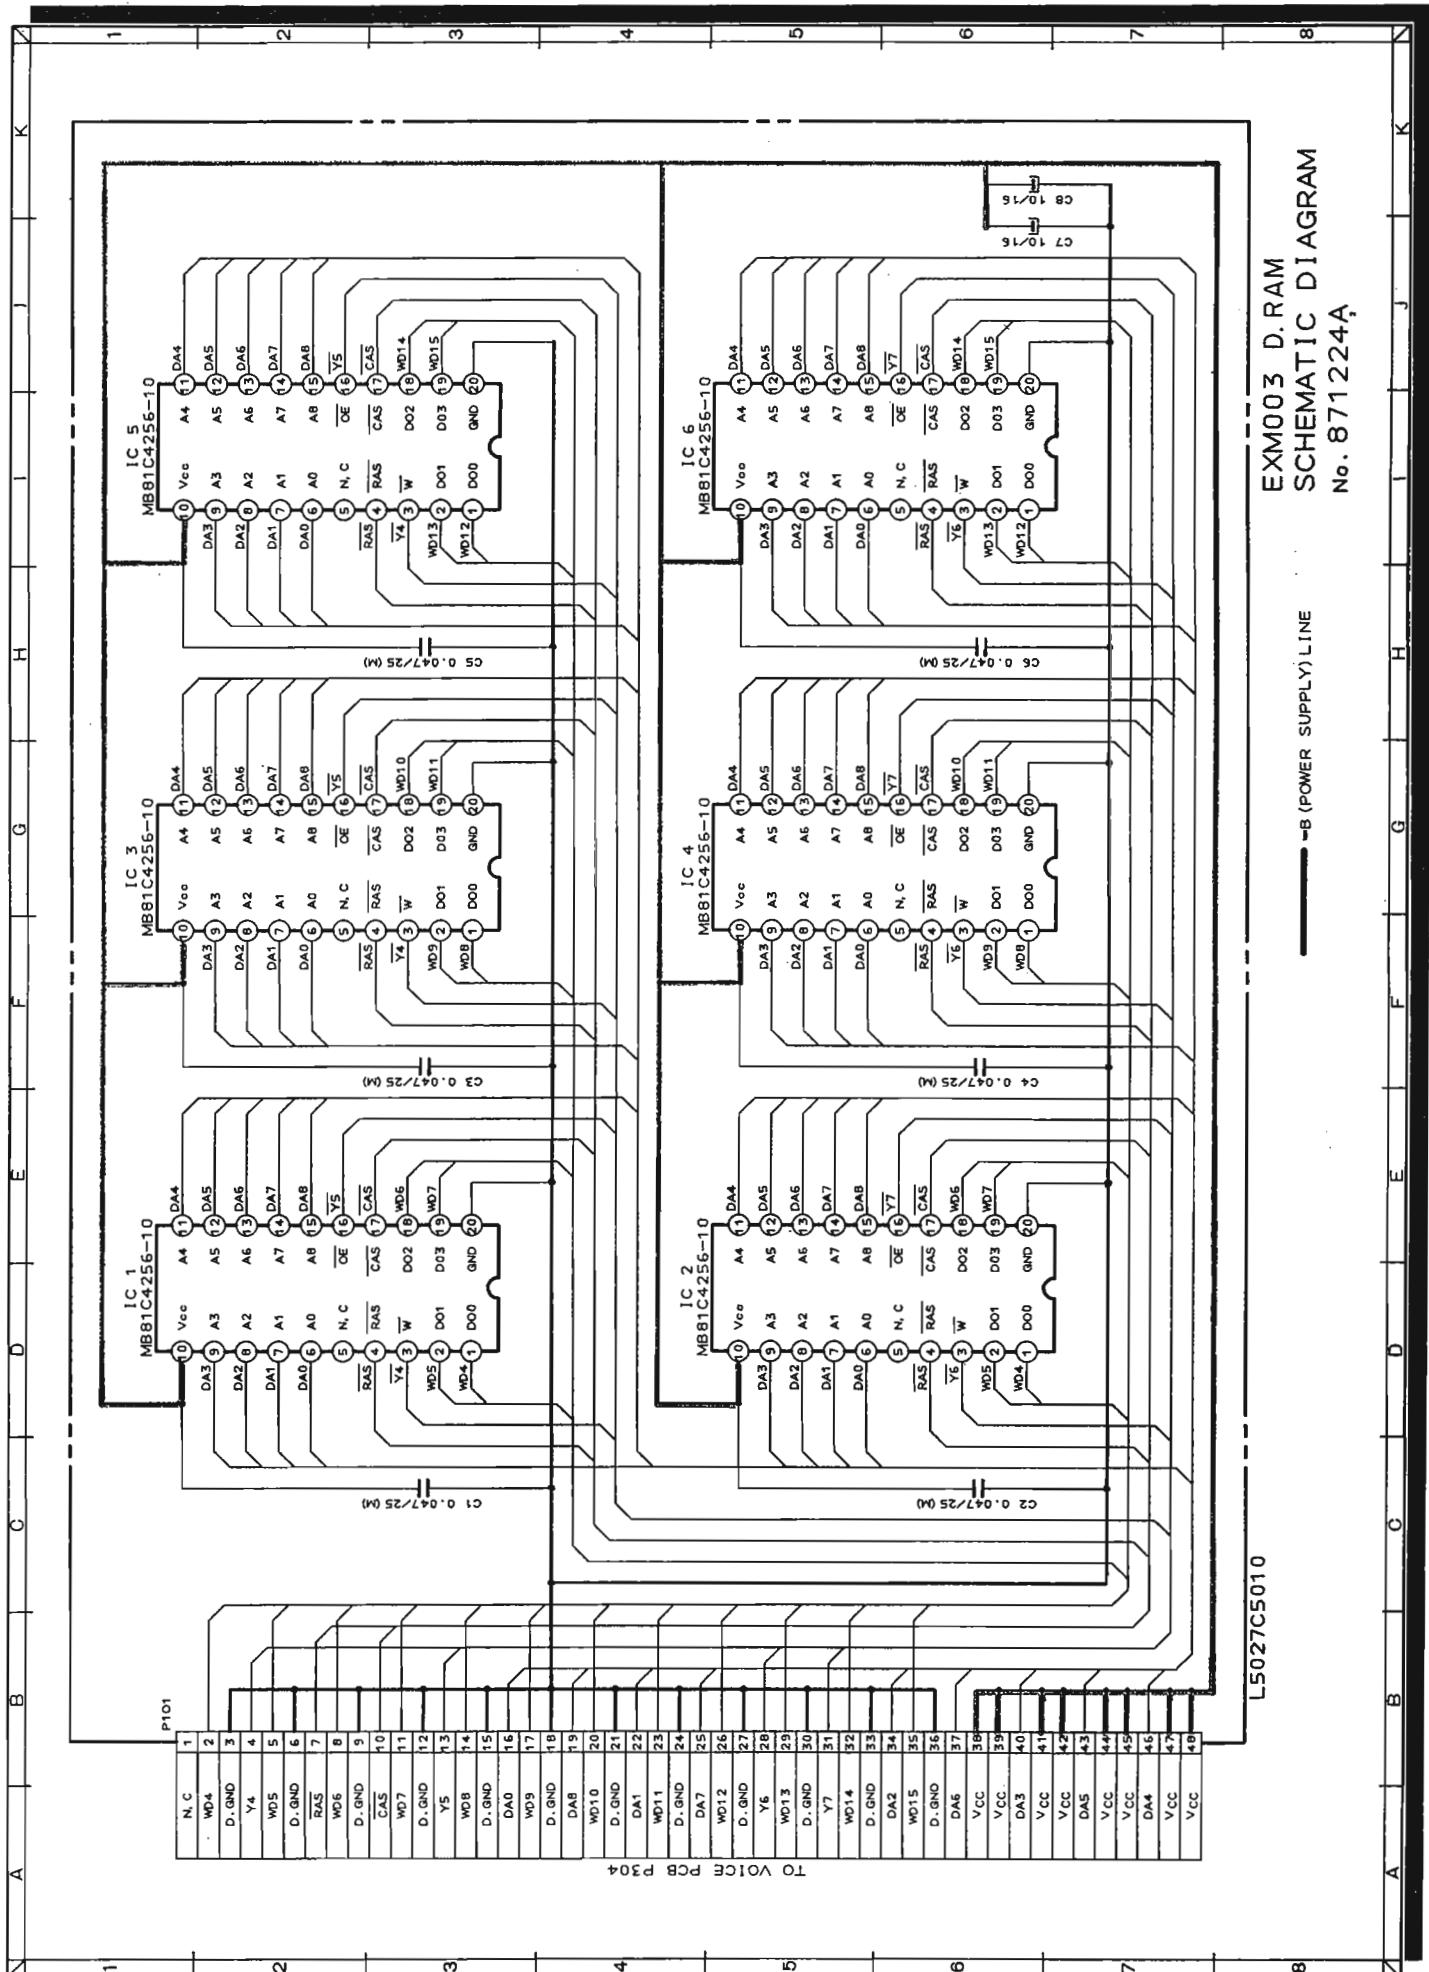

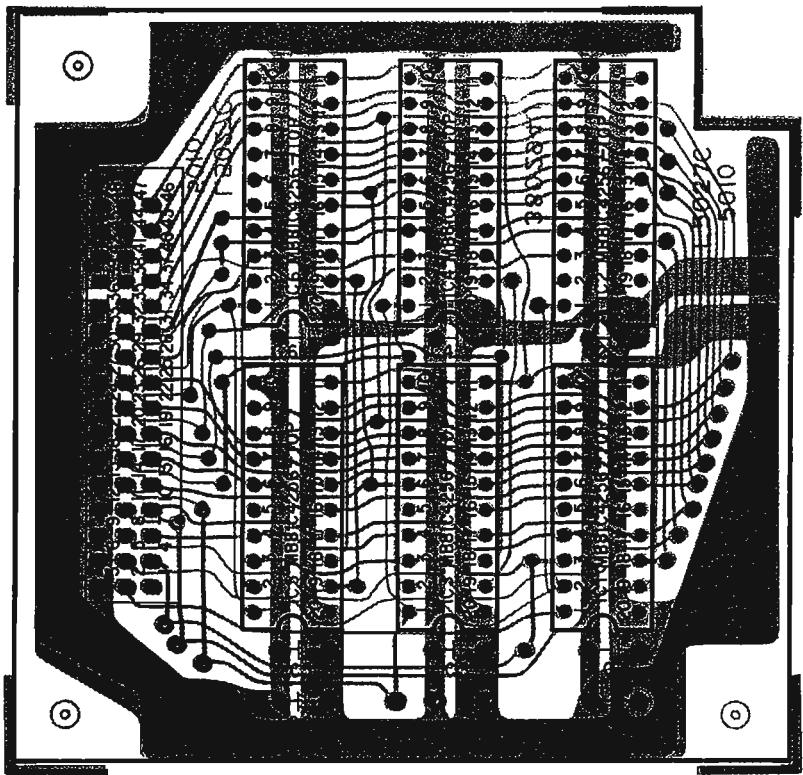

EXM003 D. RAM P C B L5027C50I0