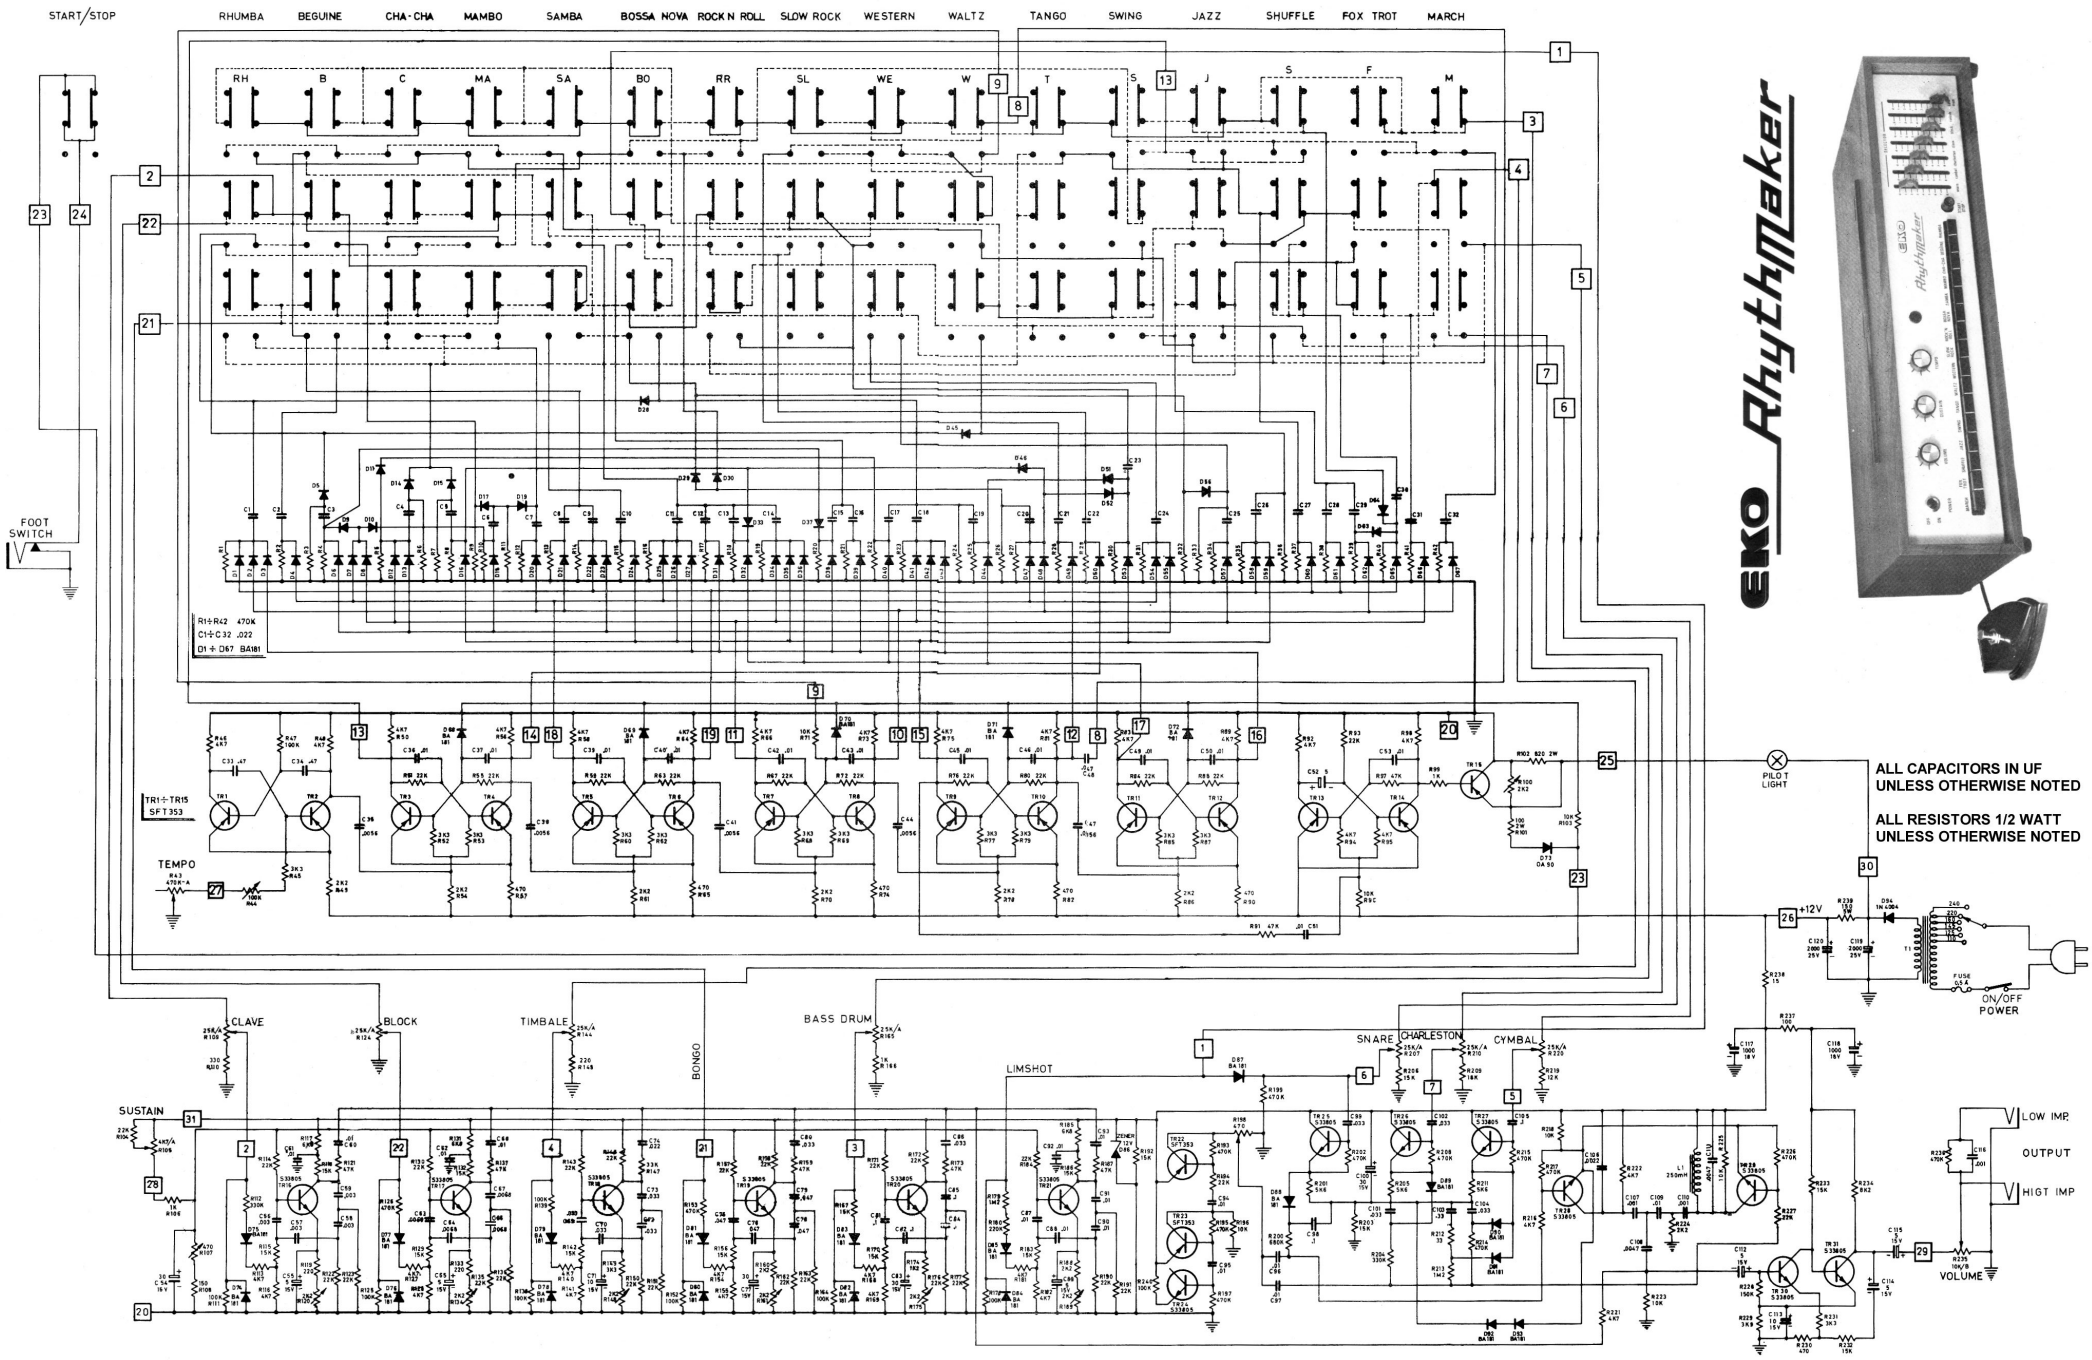
START/STOP
RHUMBA
BEGUINE
CHA-CHA
MAMBO
SAMBA
BOSSA NOVA
ROCK N ROLL
SLOW ROCK
WESTERN
WALTZ
TANGO
SWING
JAZZ
SHUFFLE
FOX TROT
MARCH
FOOT SWITCH
R1÷R42 470K
C1÷C32 .022
D1 ÷ D67 BA181
TR1÷TR15 SFT353
TEMPO
PILOT LIGHT
ALL CAPACITORS IN UF UNLESS OTHERWISE NOTED
ALL RESISTORS 1/2 WATT UNLESS OTHERWISE NOTED
+12V
FUSE
ON/OFF POWER
CLAVE
BLOCK
TIMBALE
BONGO
BASS DRUM
LIMSHOT
SNARE
CHARLESTON
CYMBAL
SUSTAIN
LOW IMP.
OUTPUT
HIGT IMP
VOLUME
EKO RhythMaker